
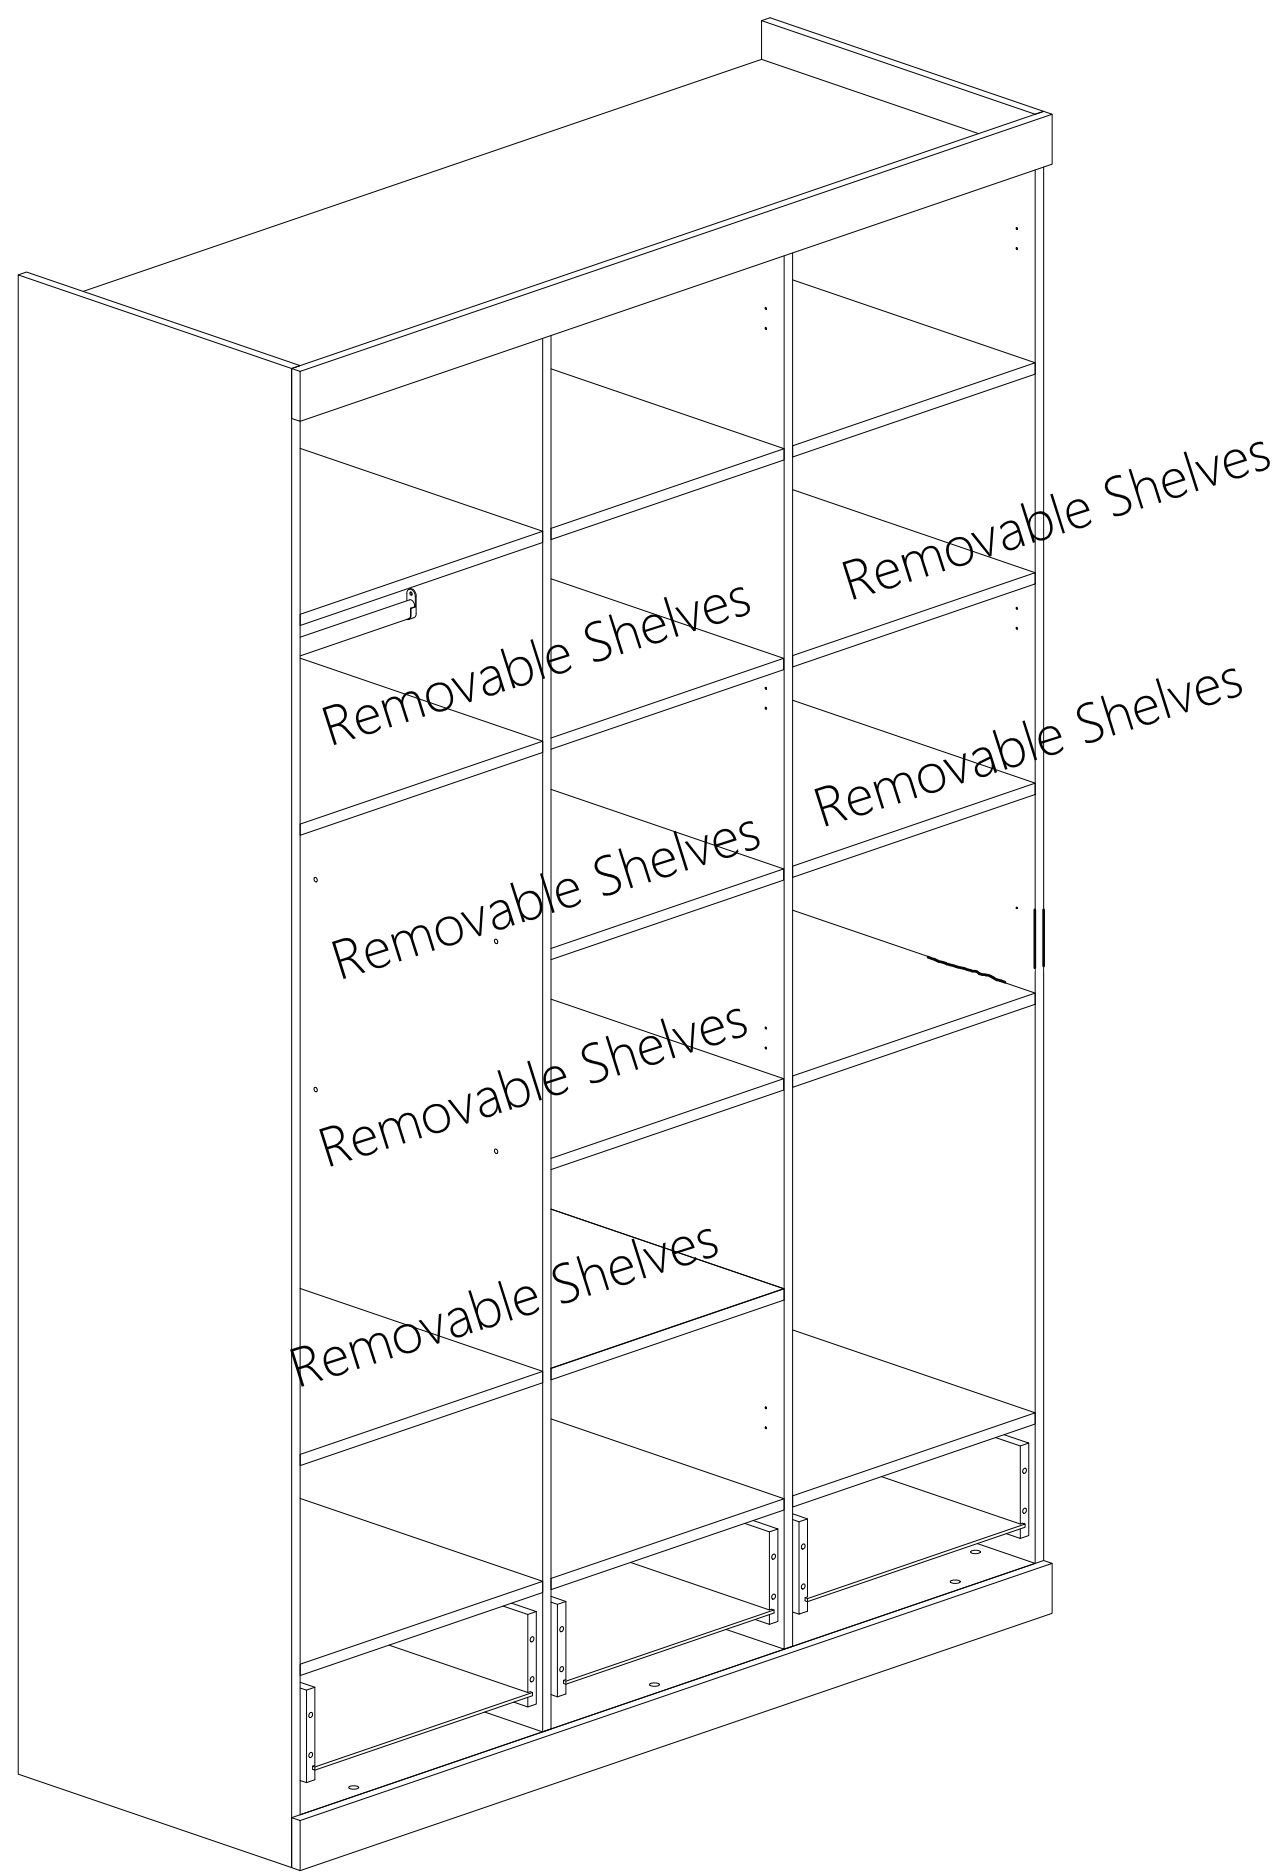










Wardrobe


6930 #






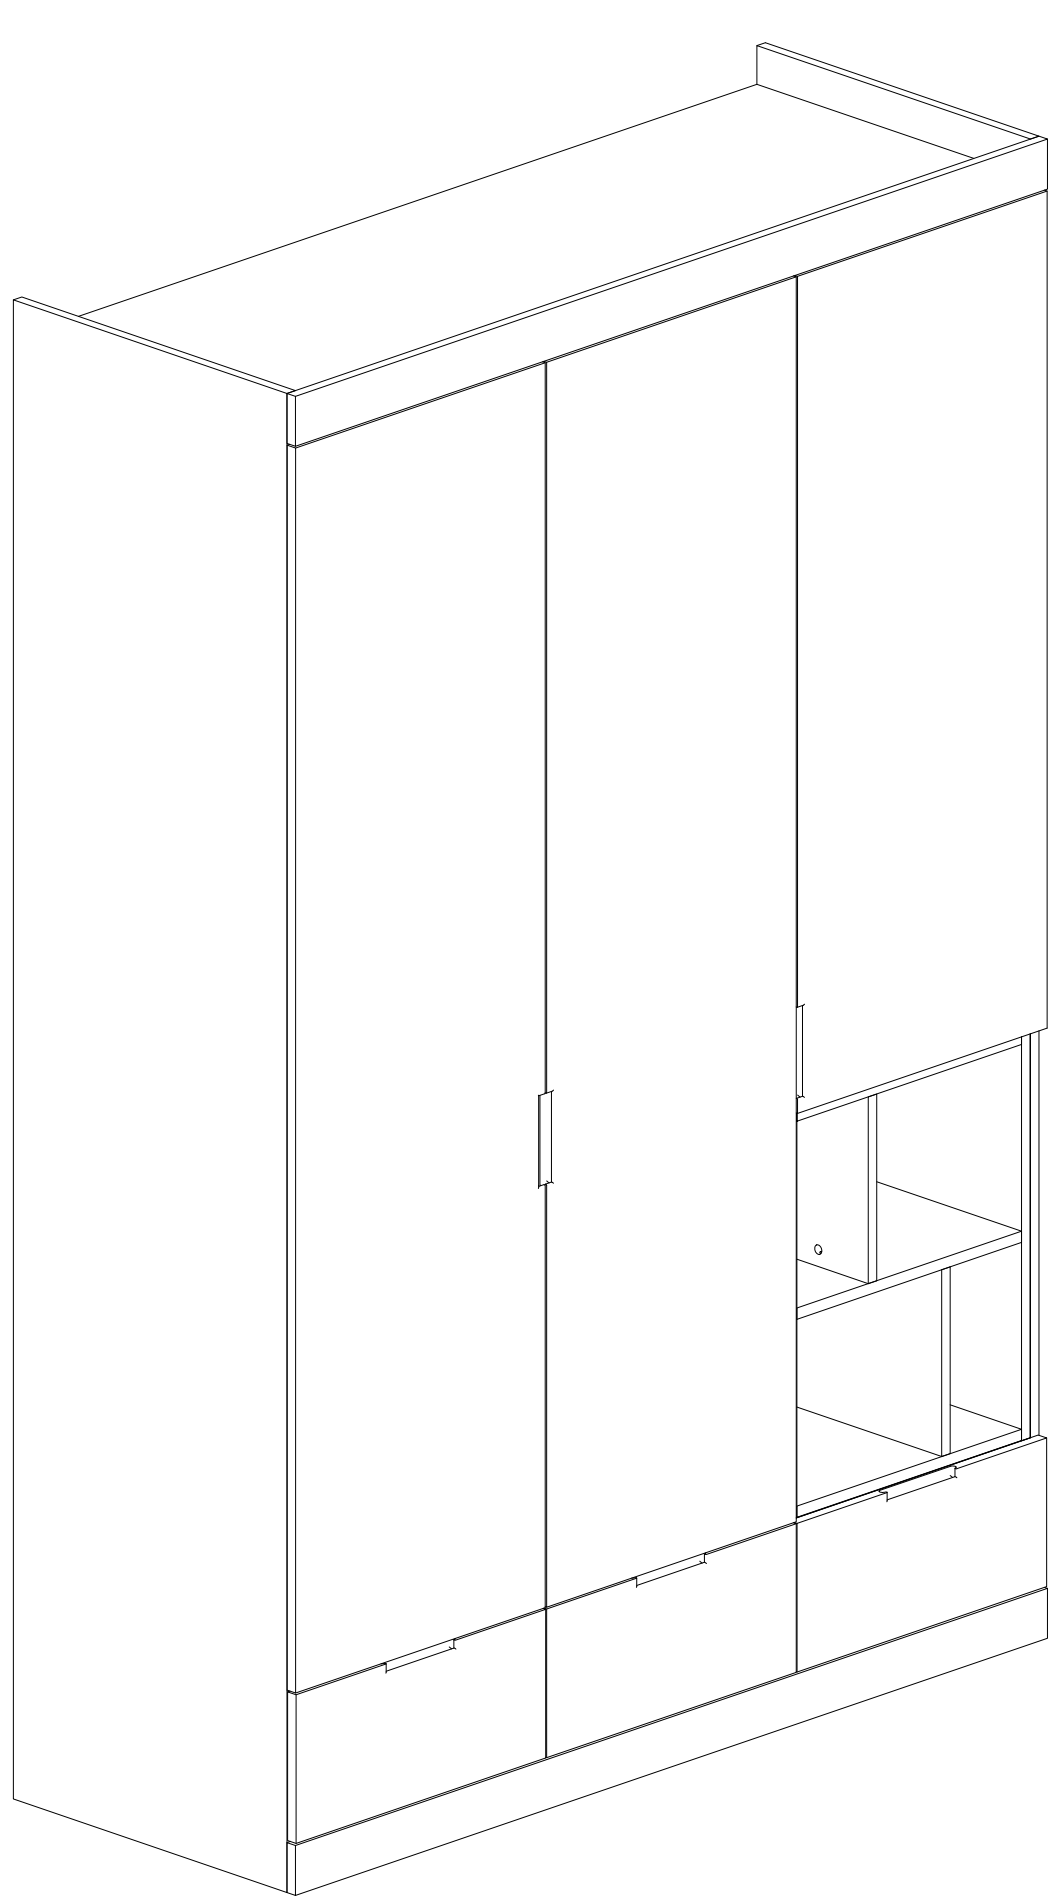







ASSEMBLY INSTRUCTIONS









ACCESSORIES LIST

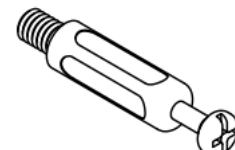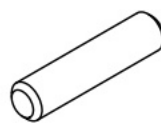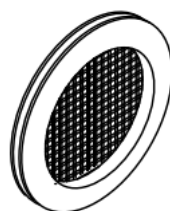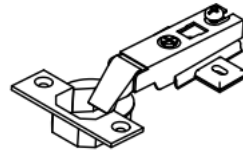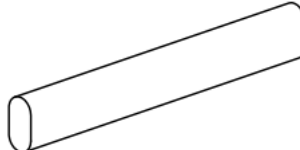
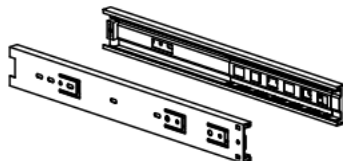
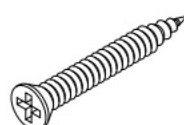
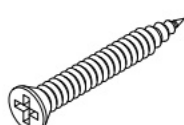
A	111 -Pcs	B	111 -Pcs	C	20-Pcs	D	3-Pcs	E	8-Pcs	F	36-Pcs	G	11-Pcs	H	1-Pcs
															
ø15		6mm		8*30mm			7*38mm		8mm				509 mm		
I	3-Pcs	J	12-Pcs	K	129-Pcs	L	24-Pcs	M	14-Pcs	N	2-Pcs	O	2-Pcs	P	60-pcs
															
20"		3.5*30mm		3.5*14mm											




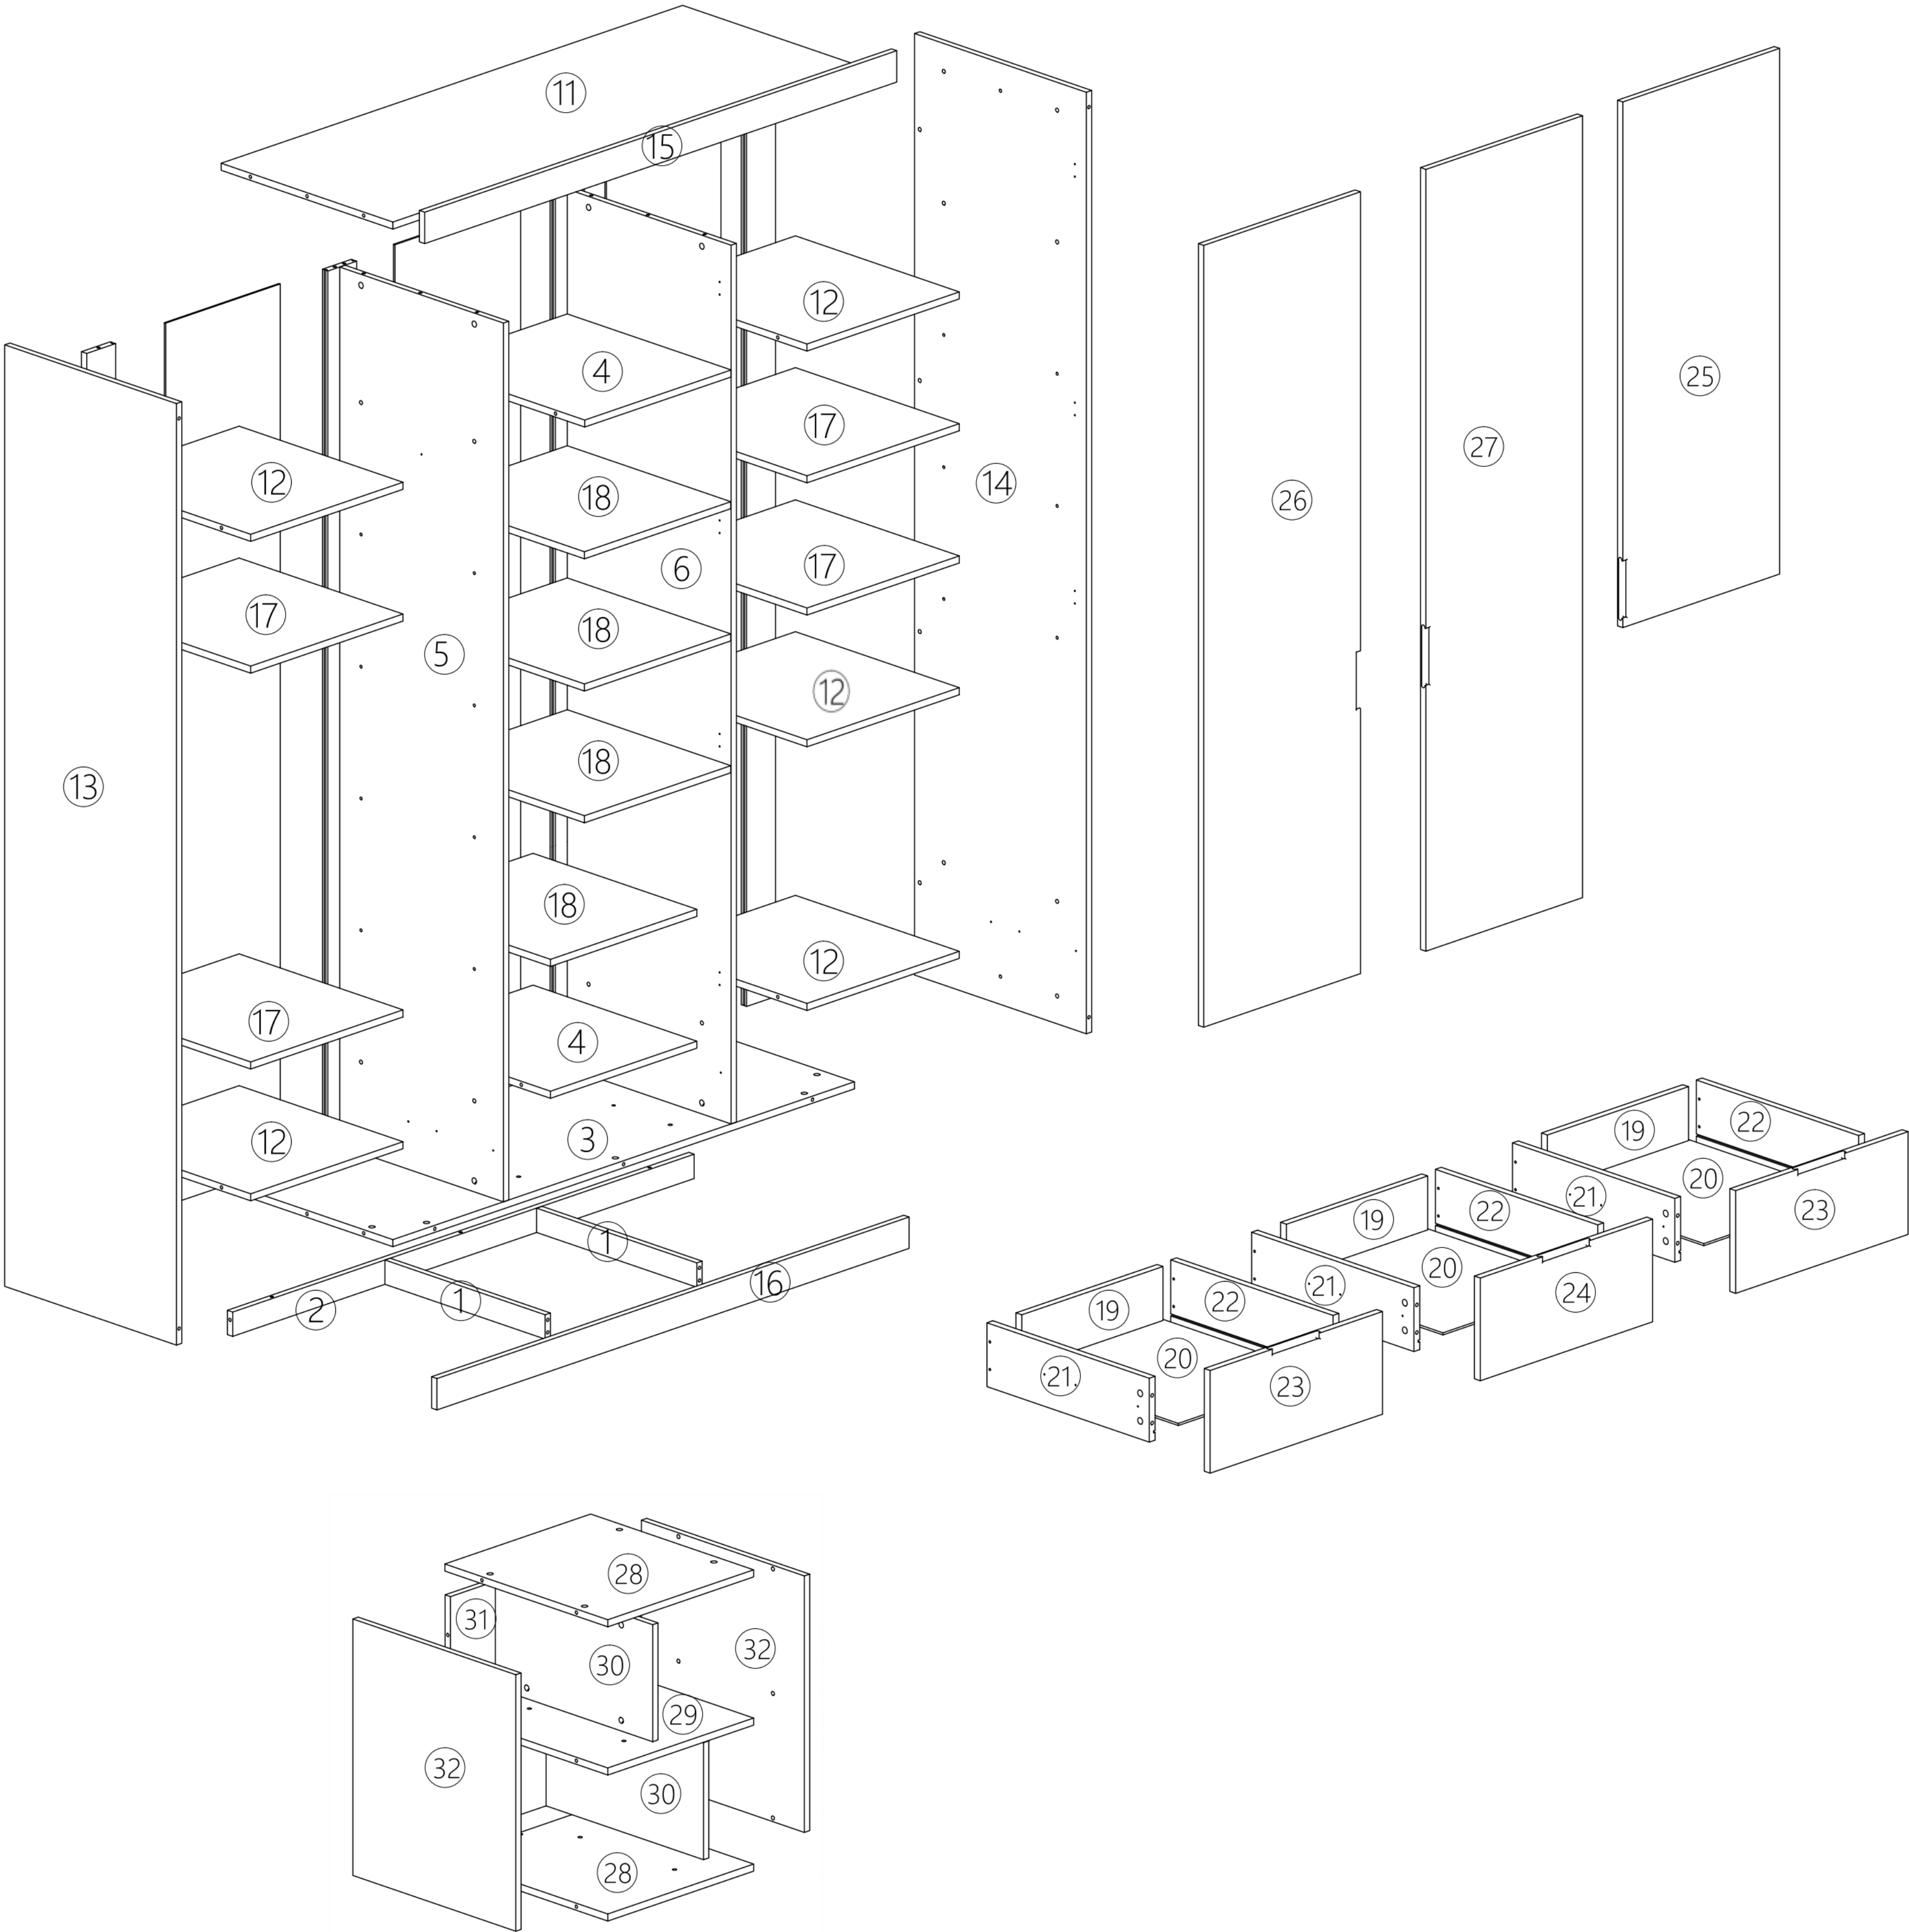


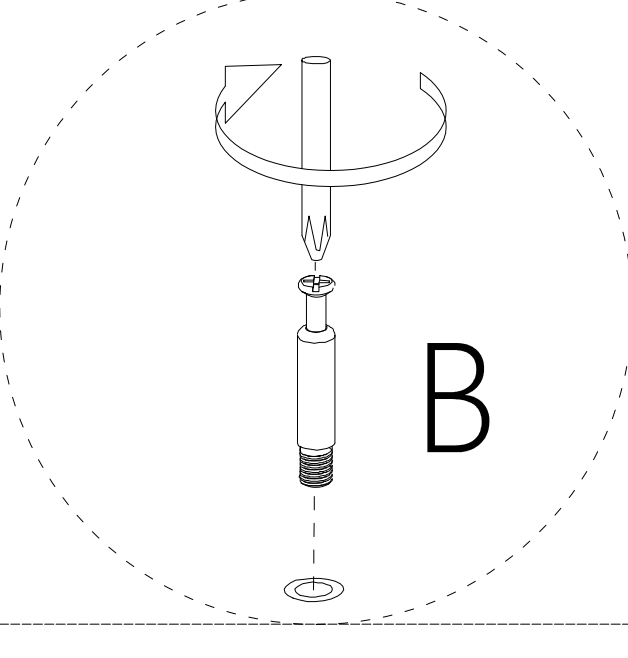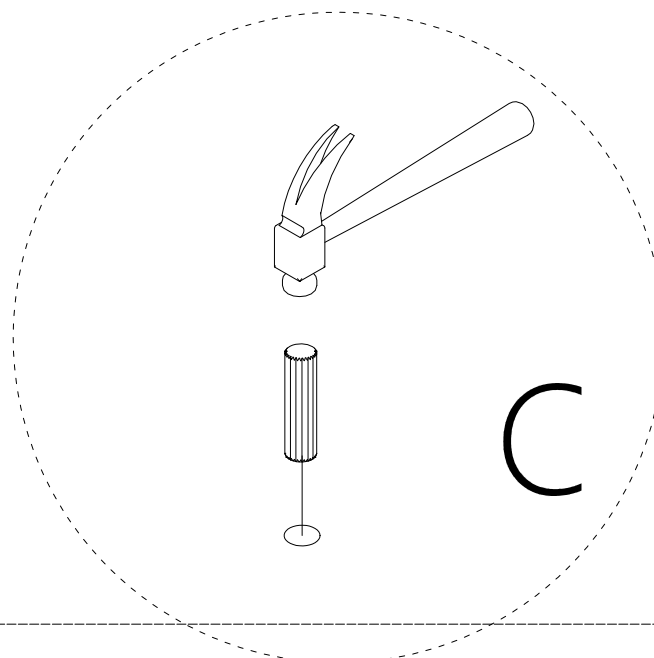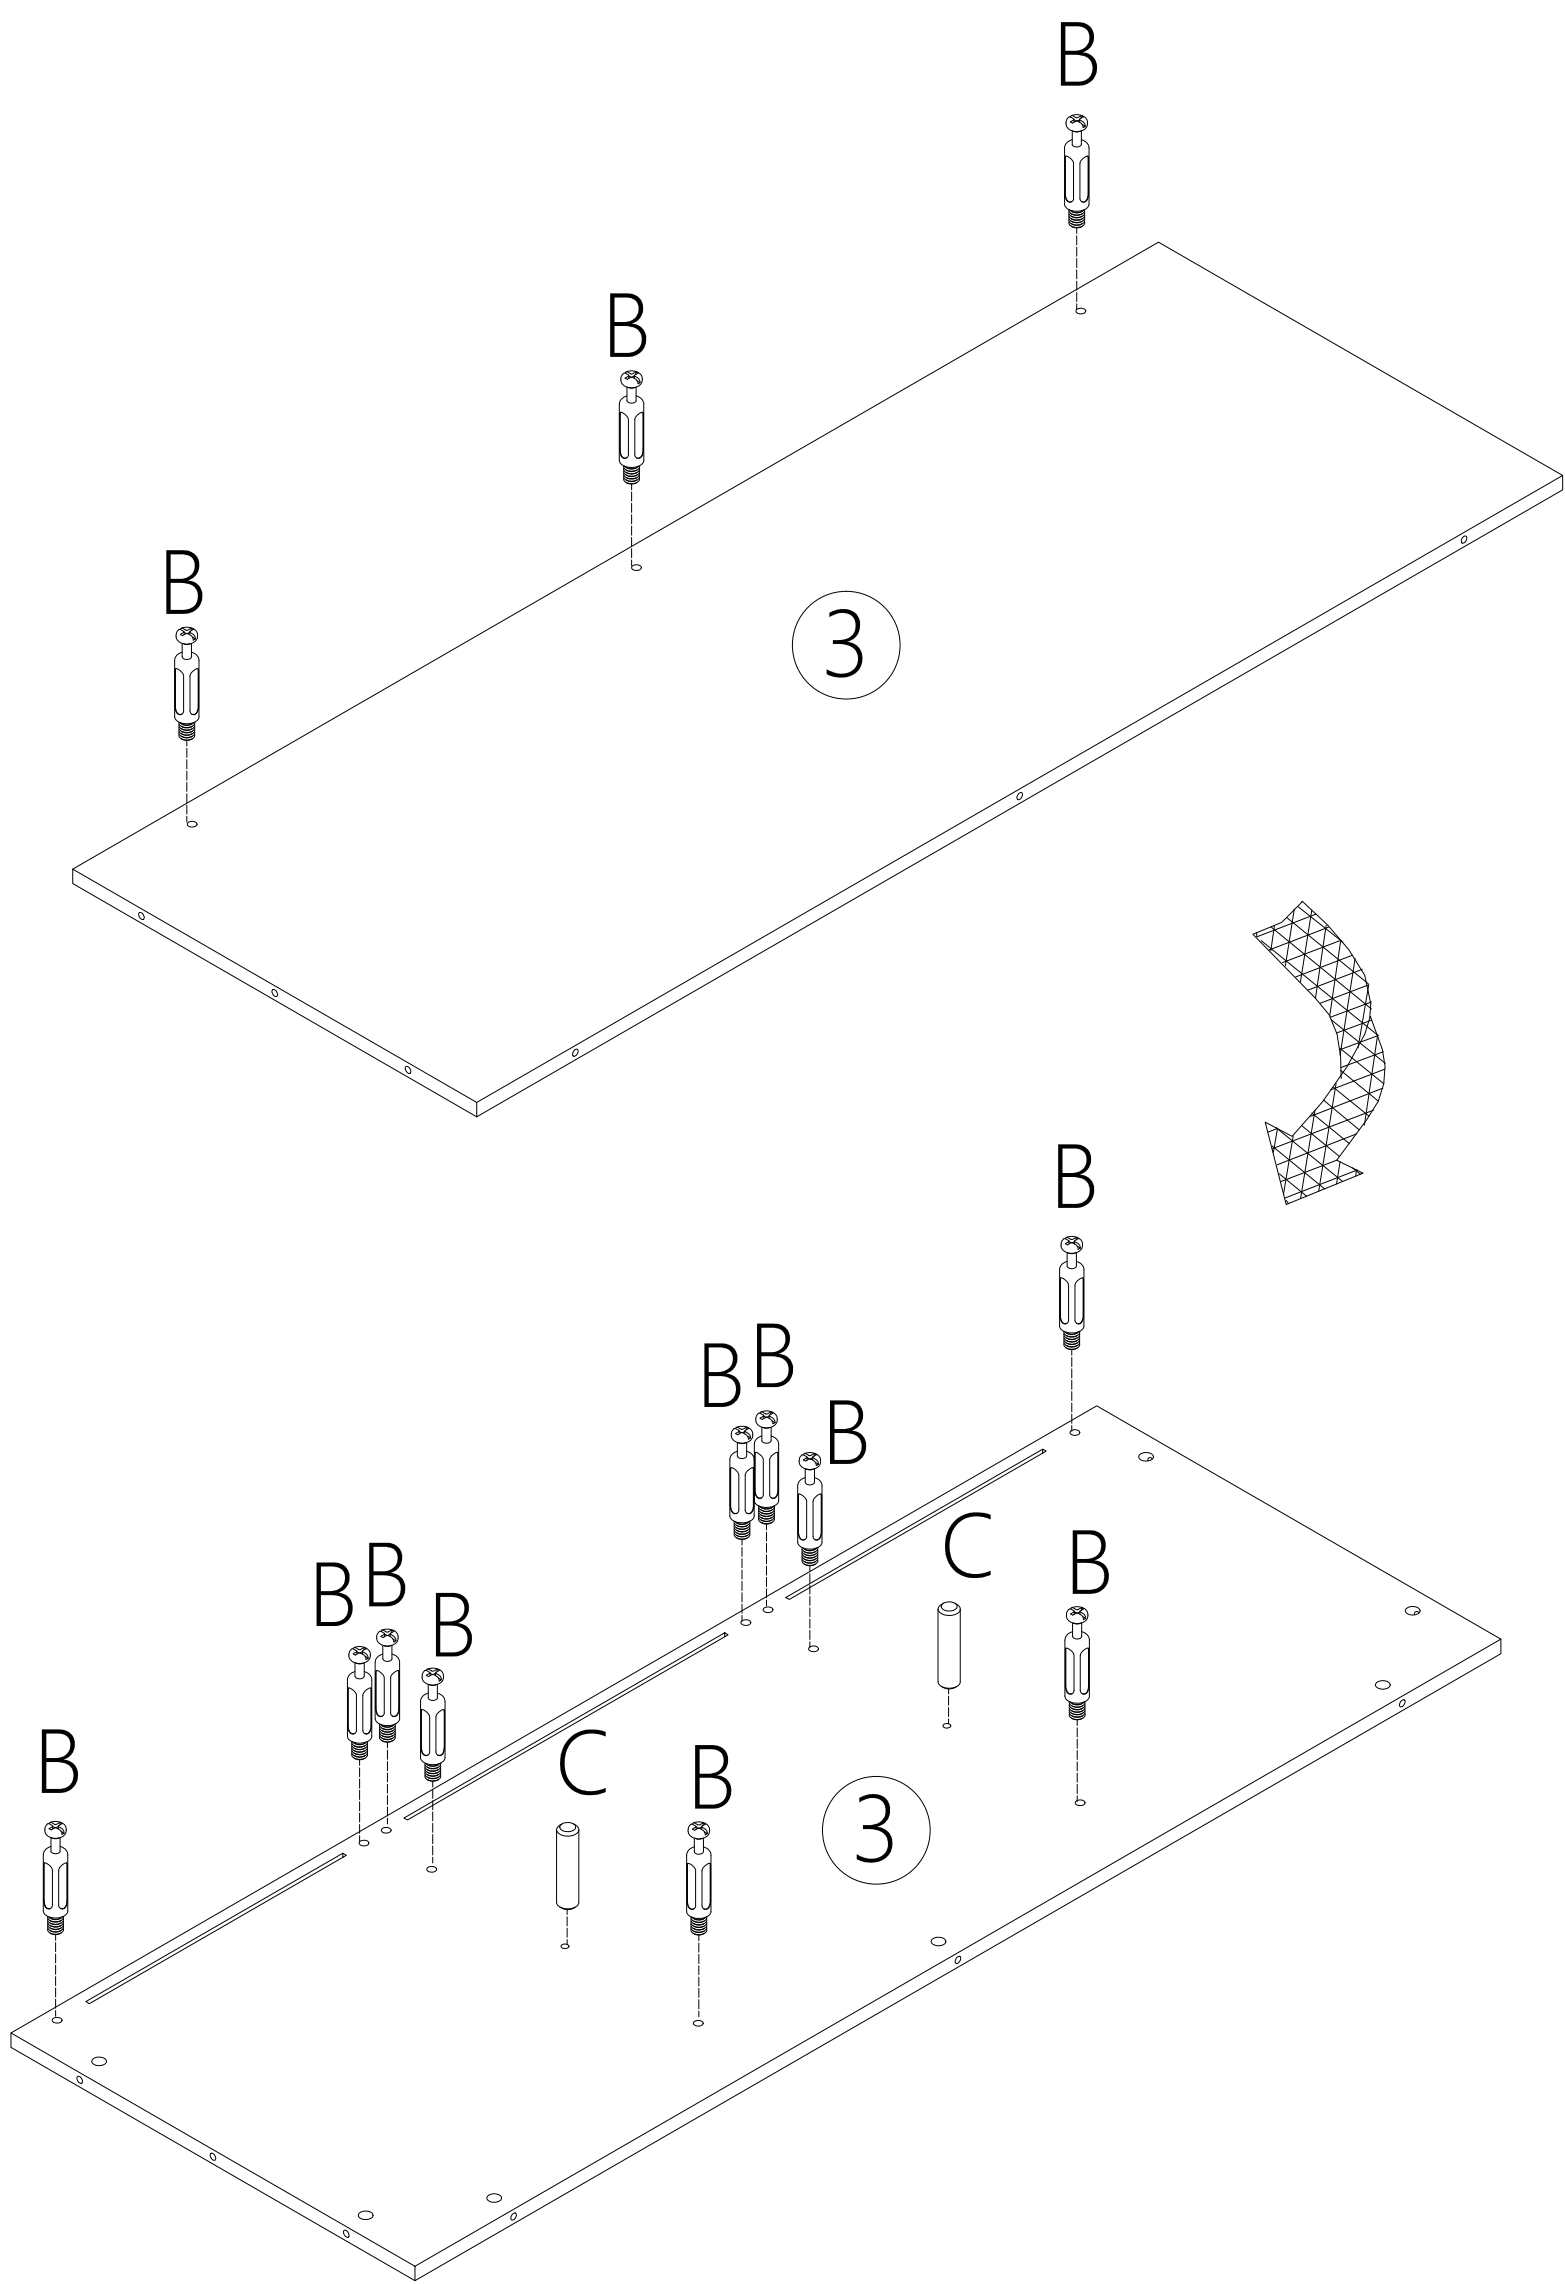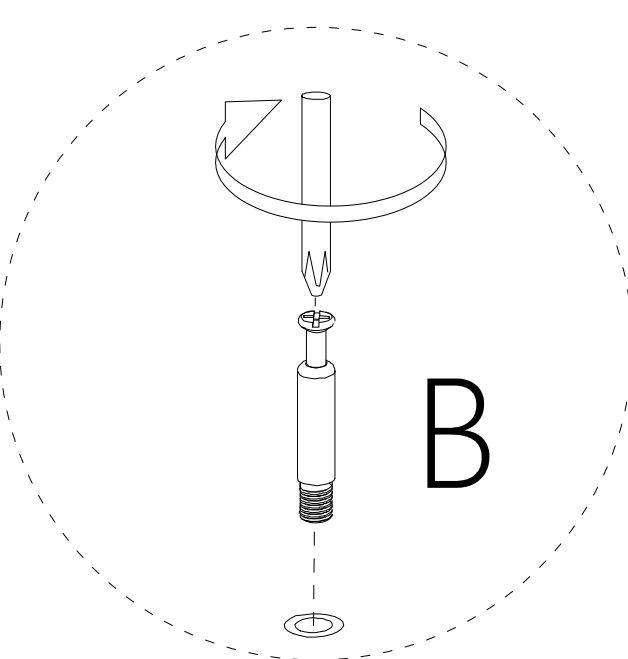
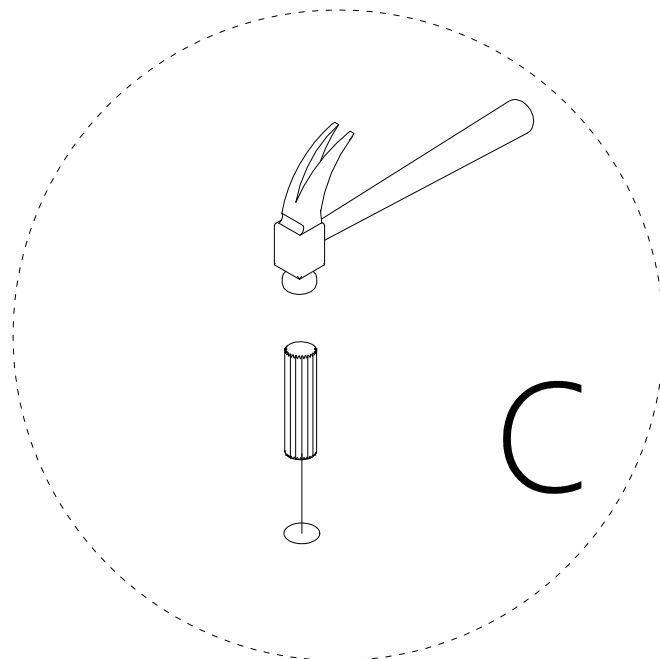
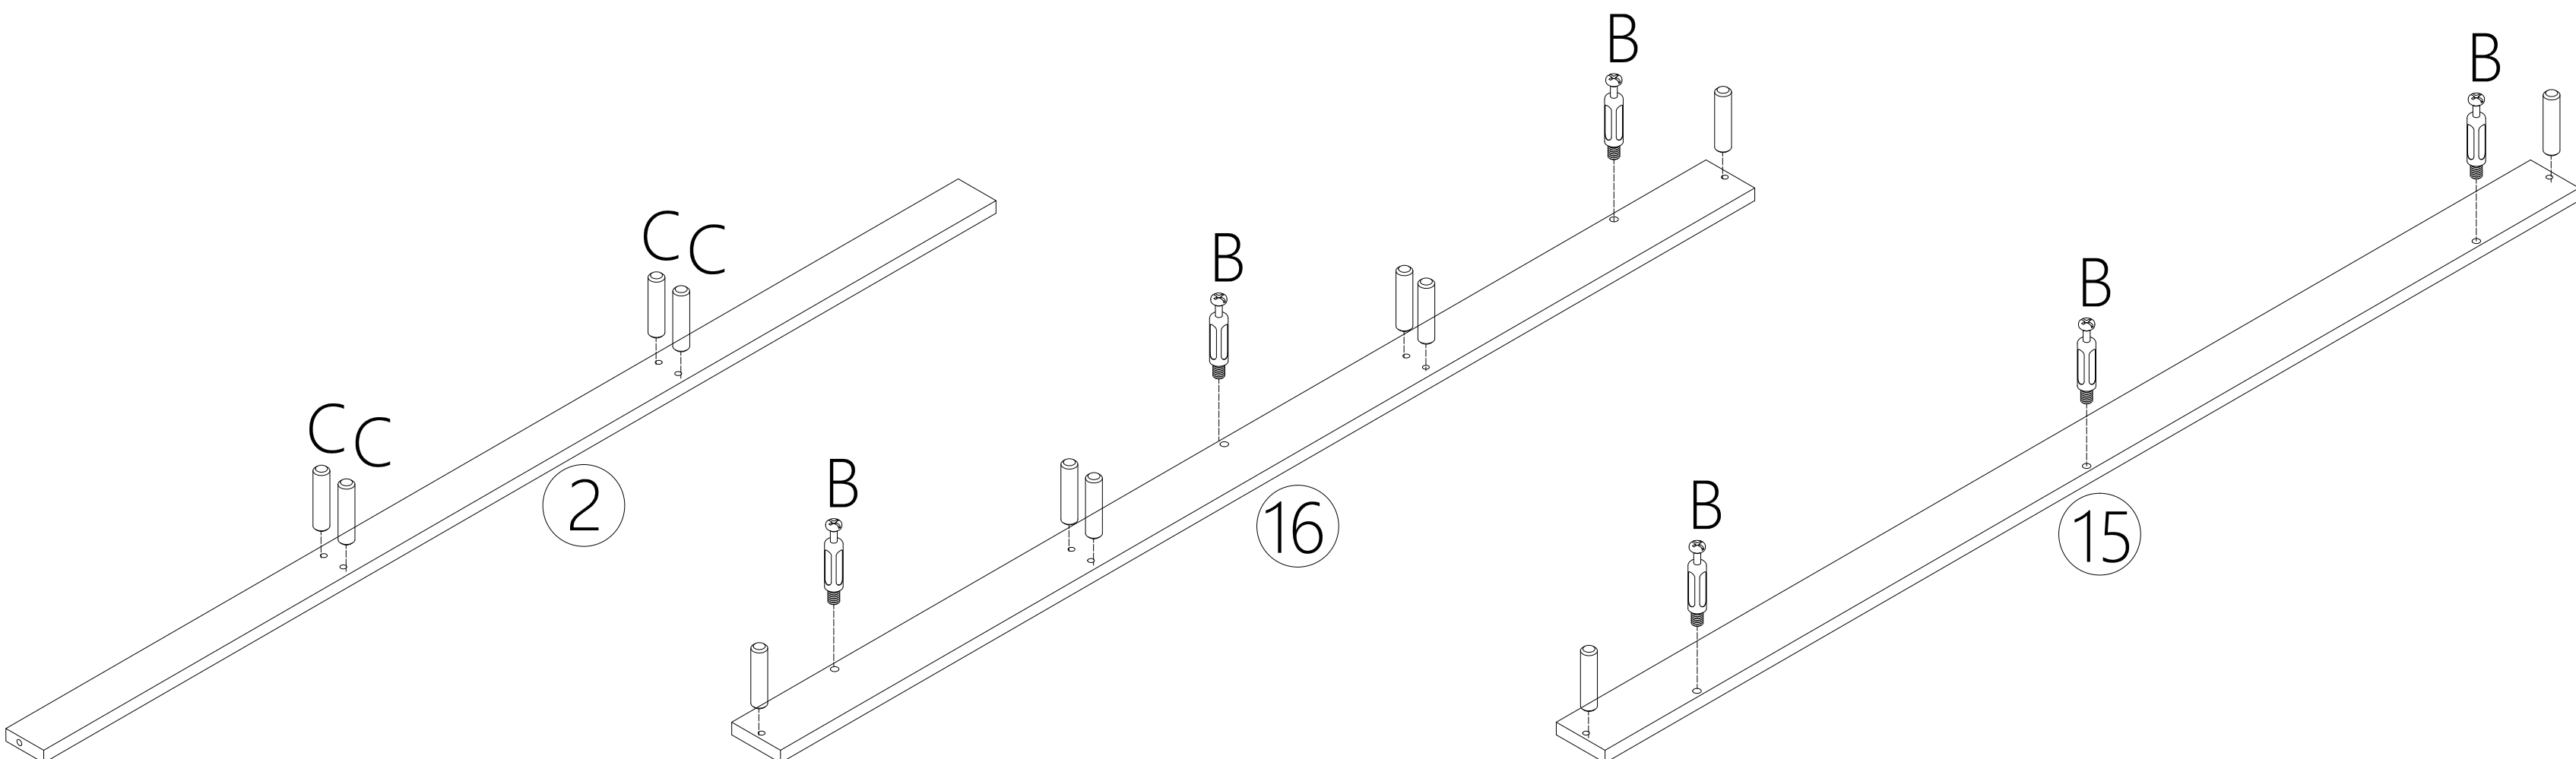


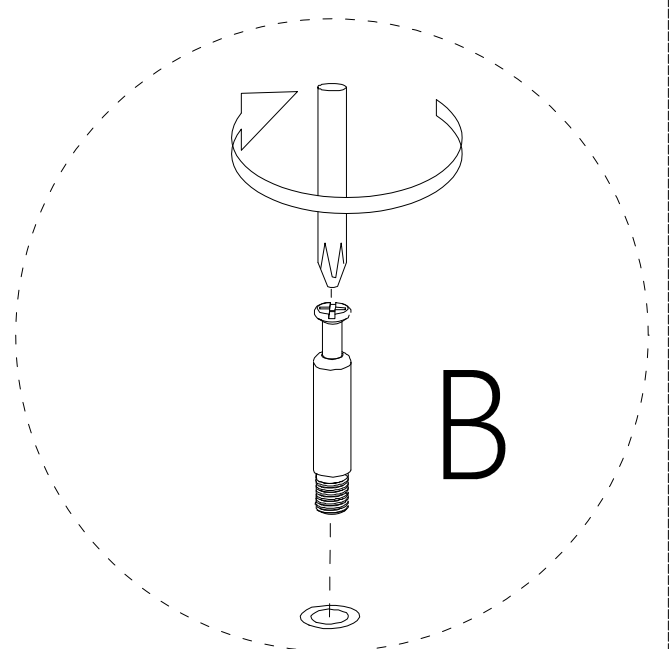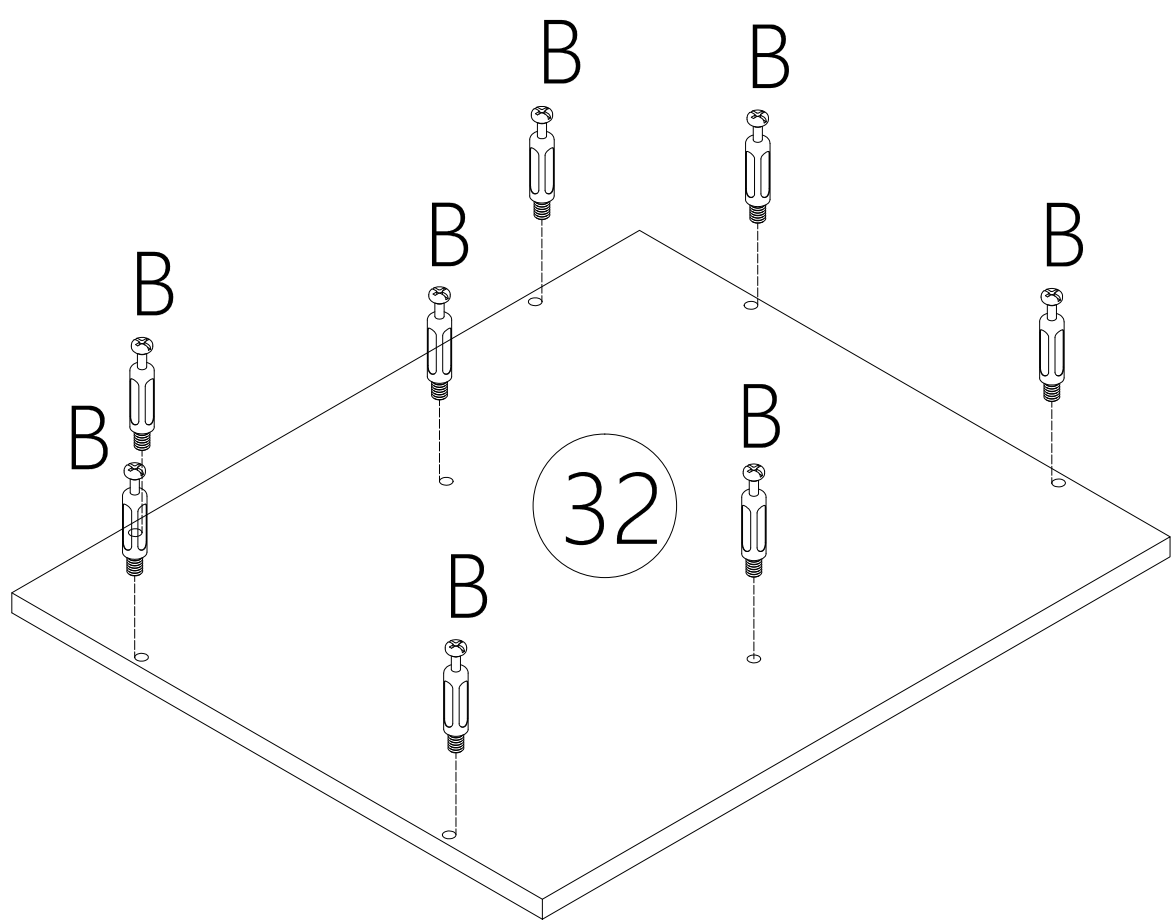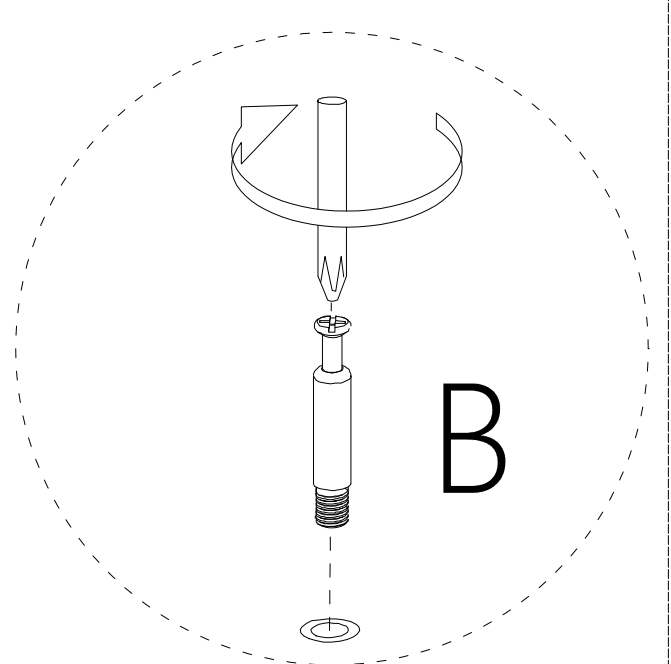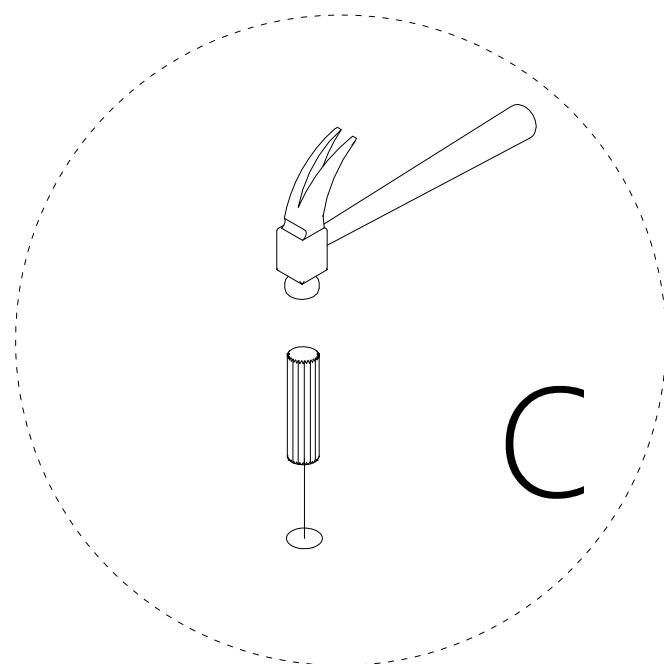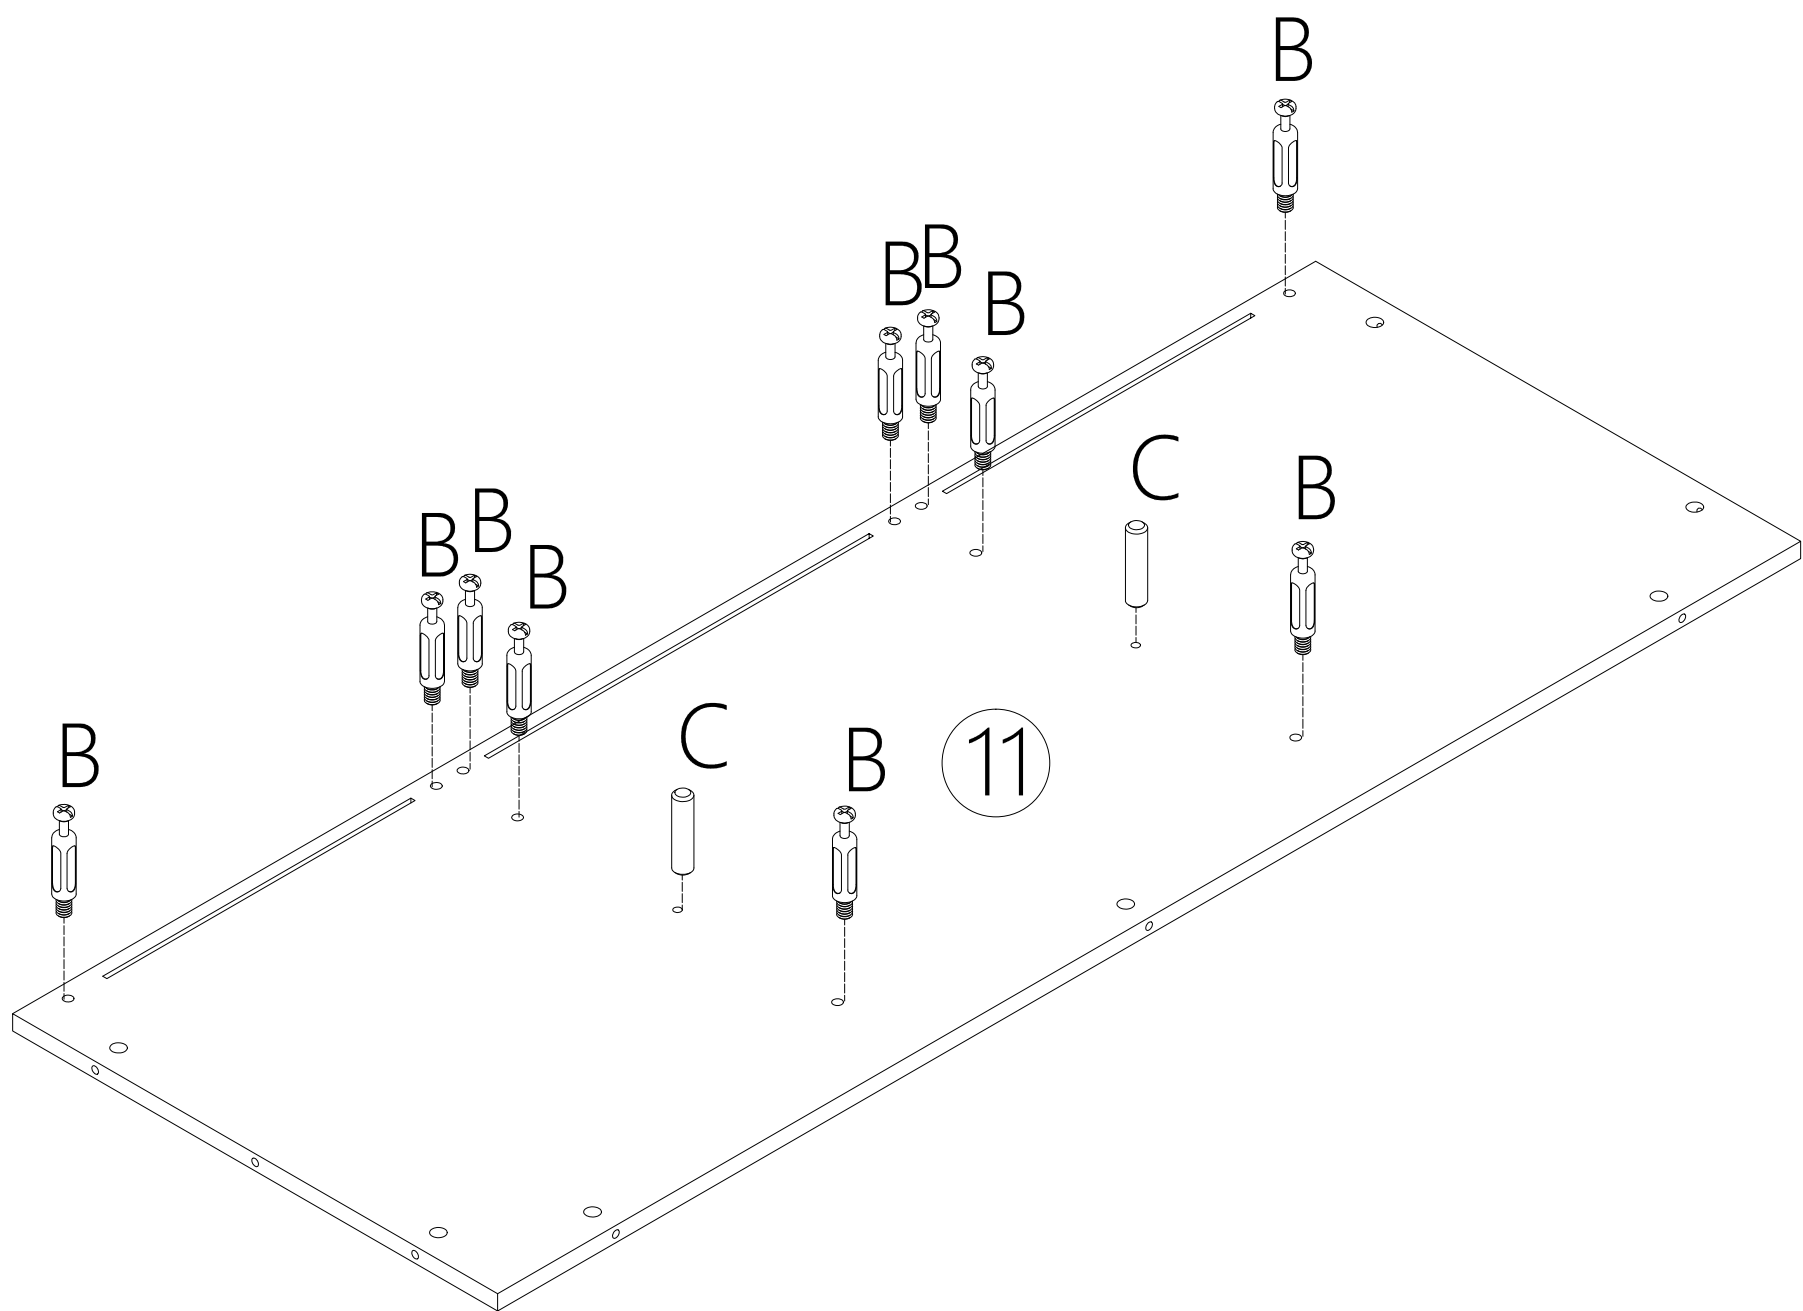

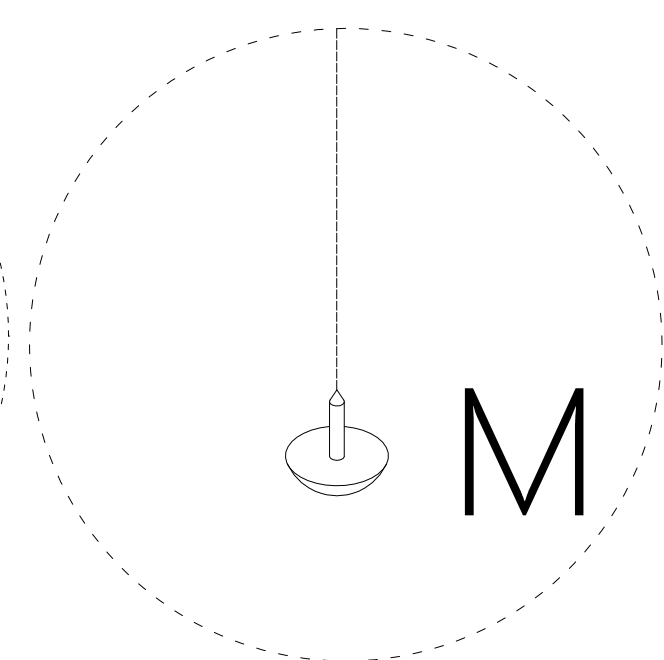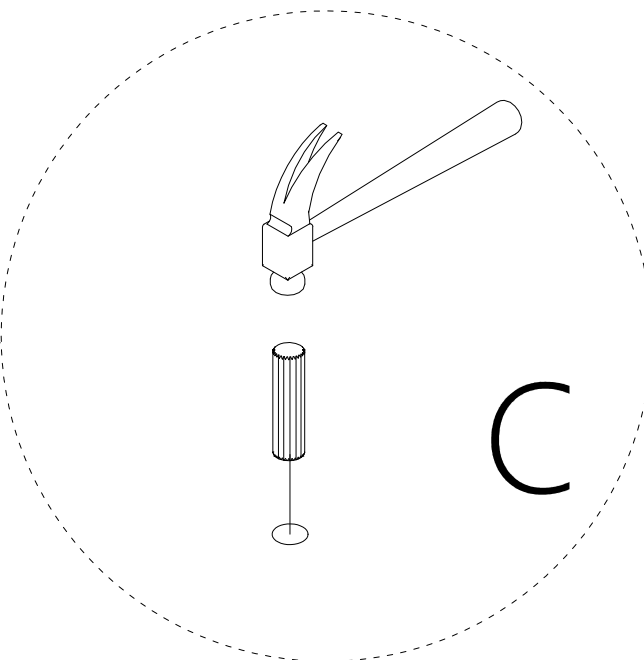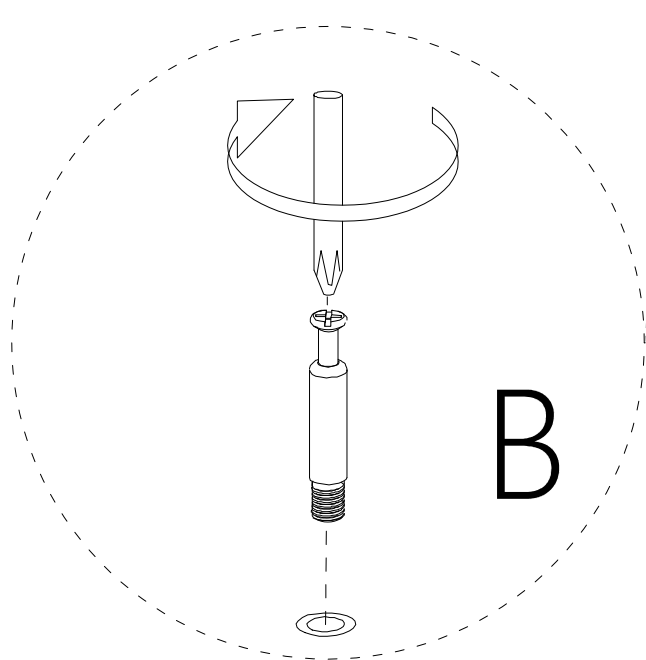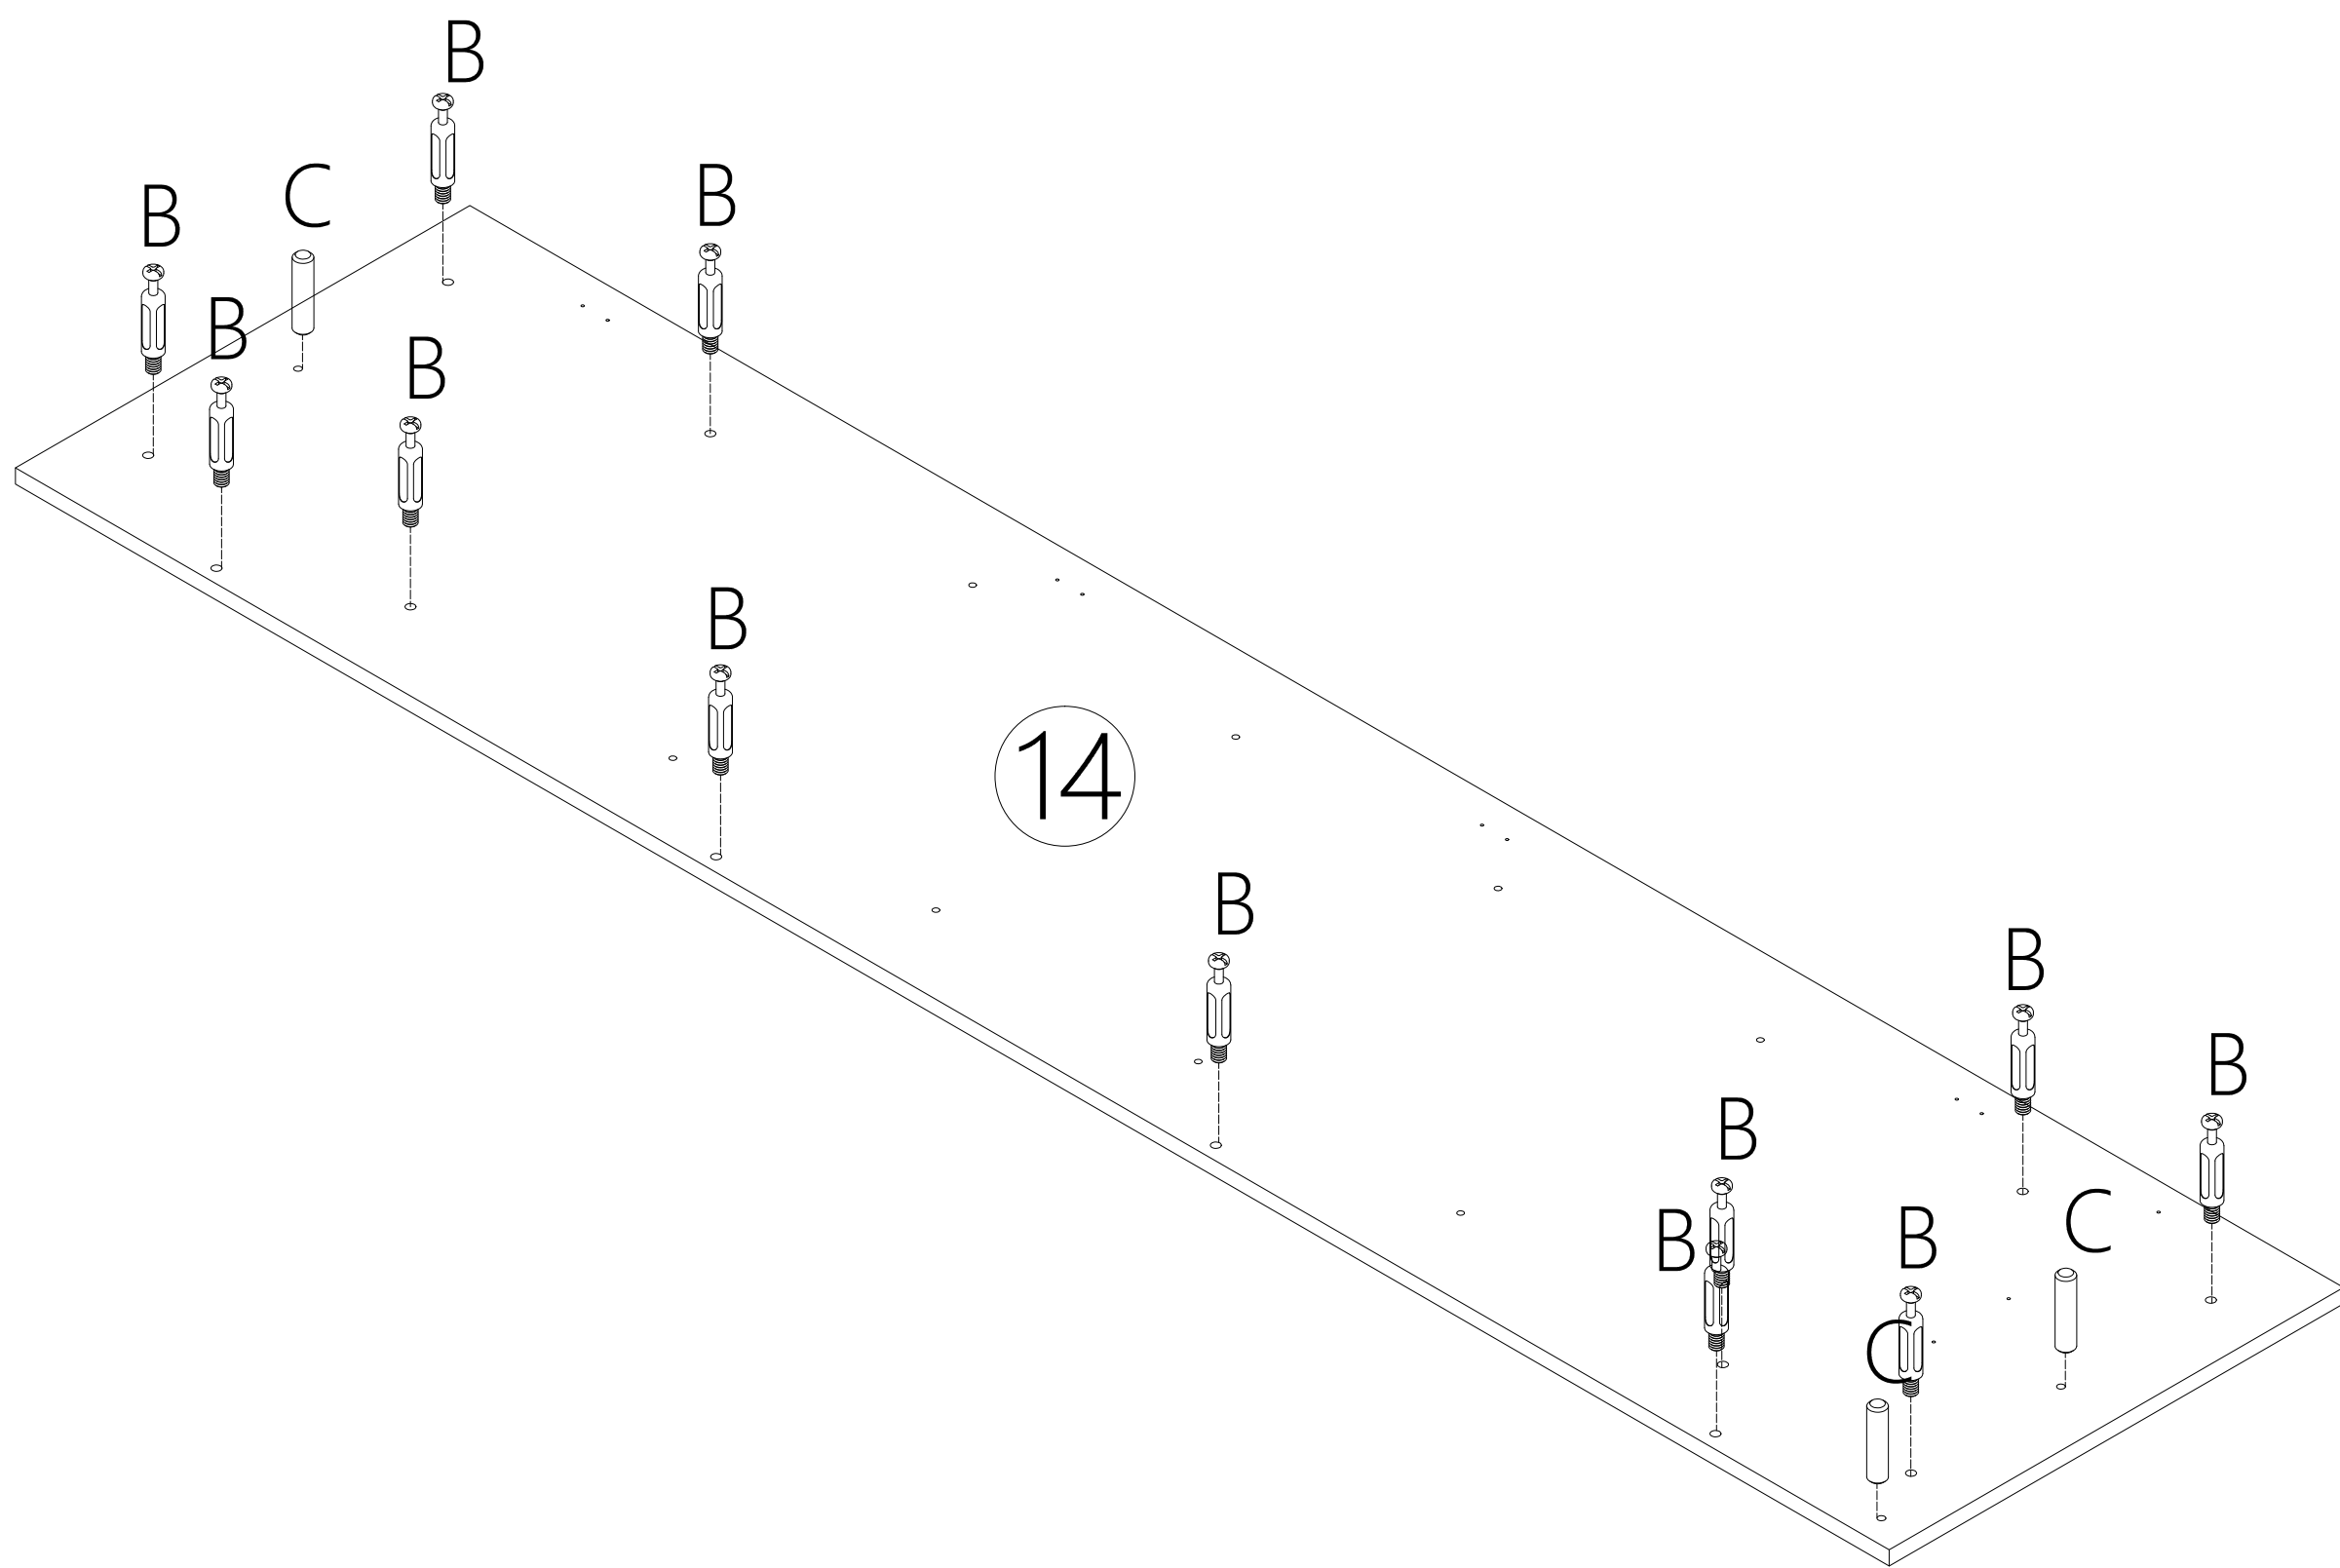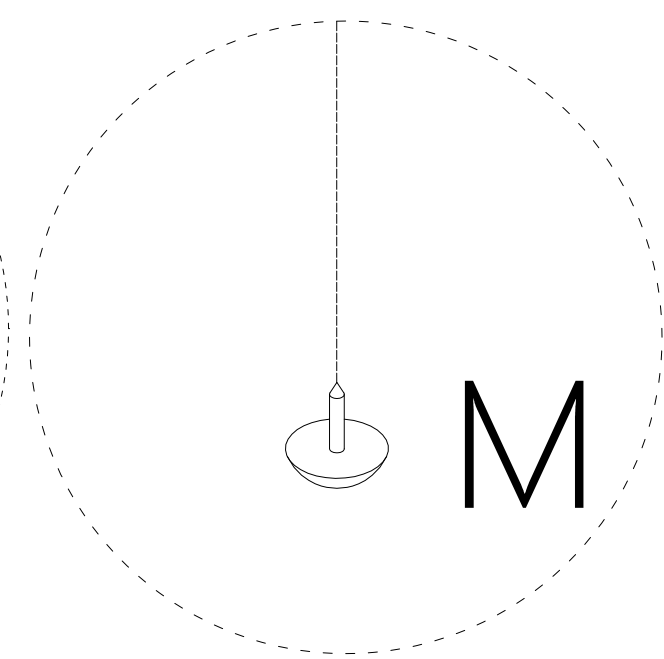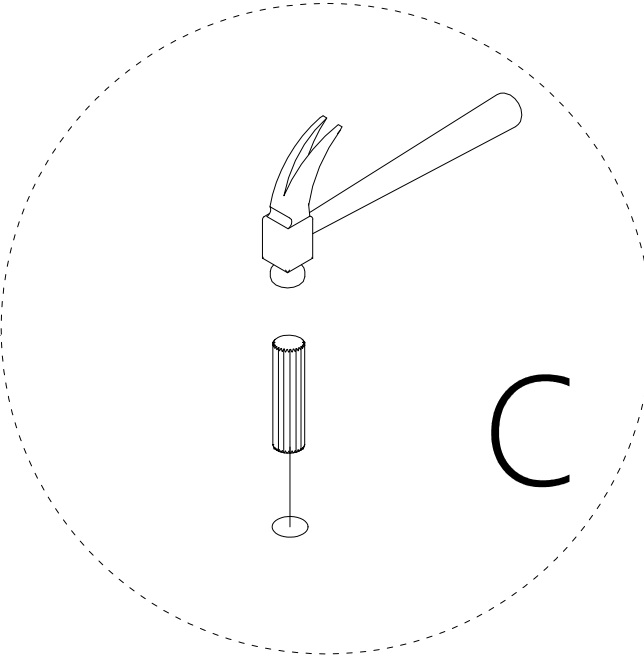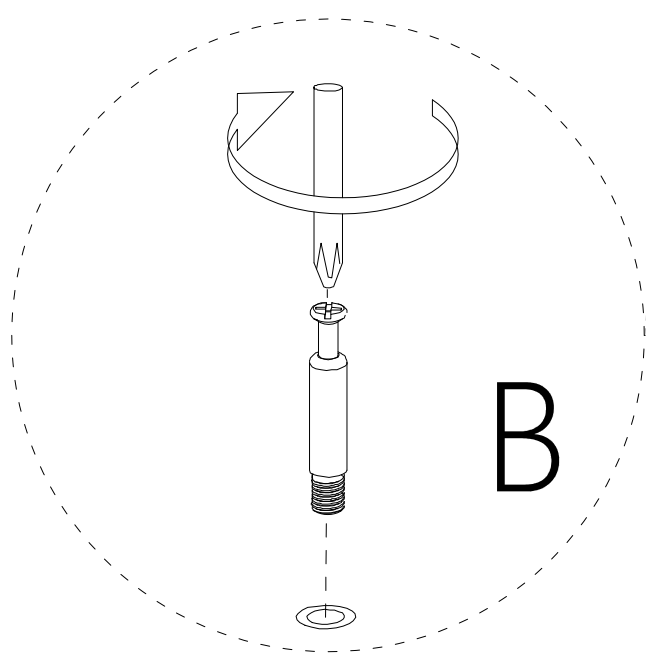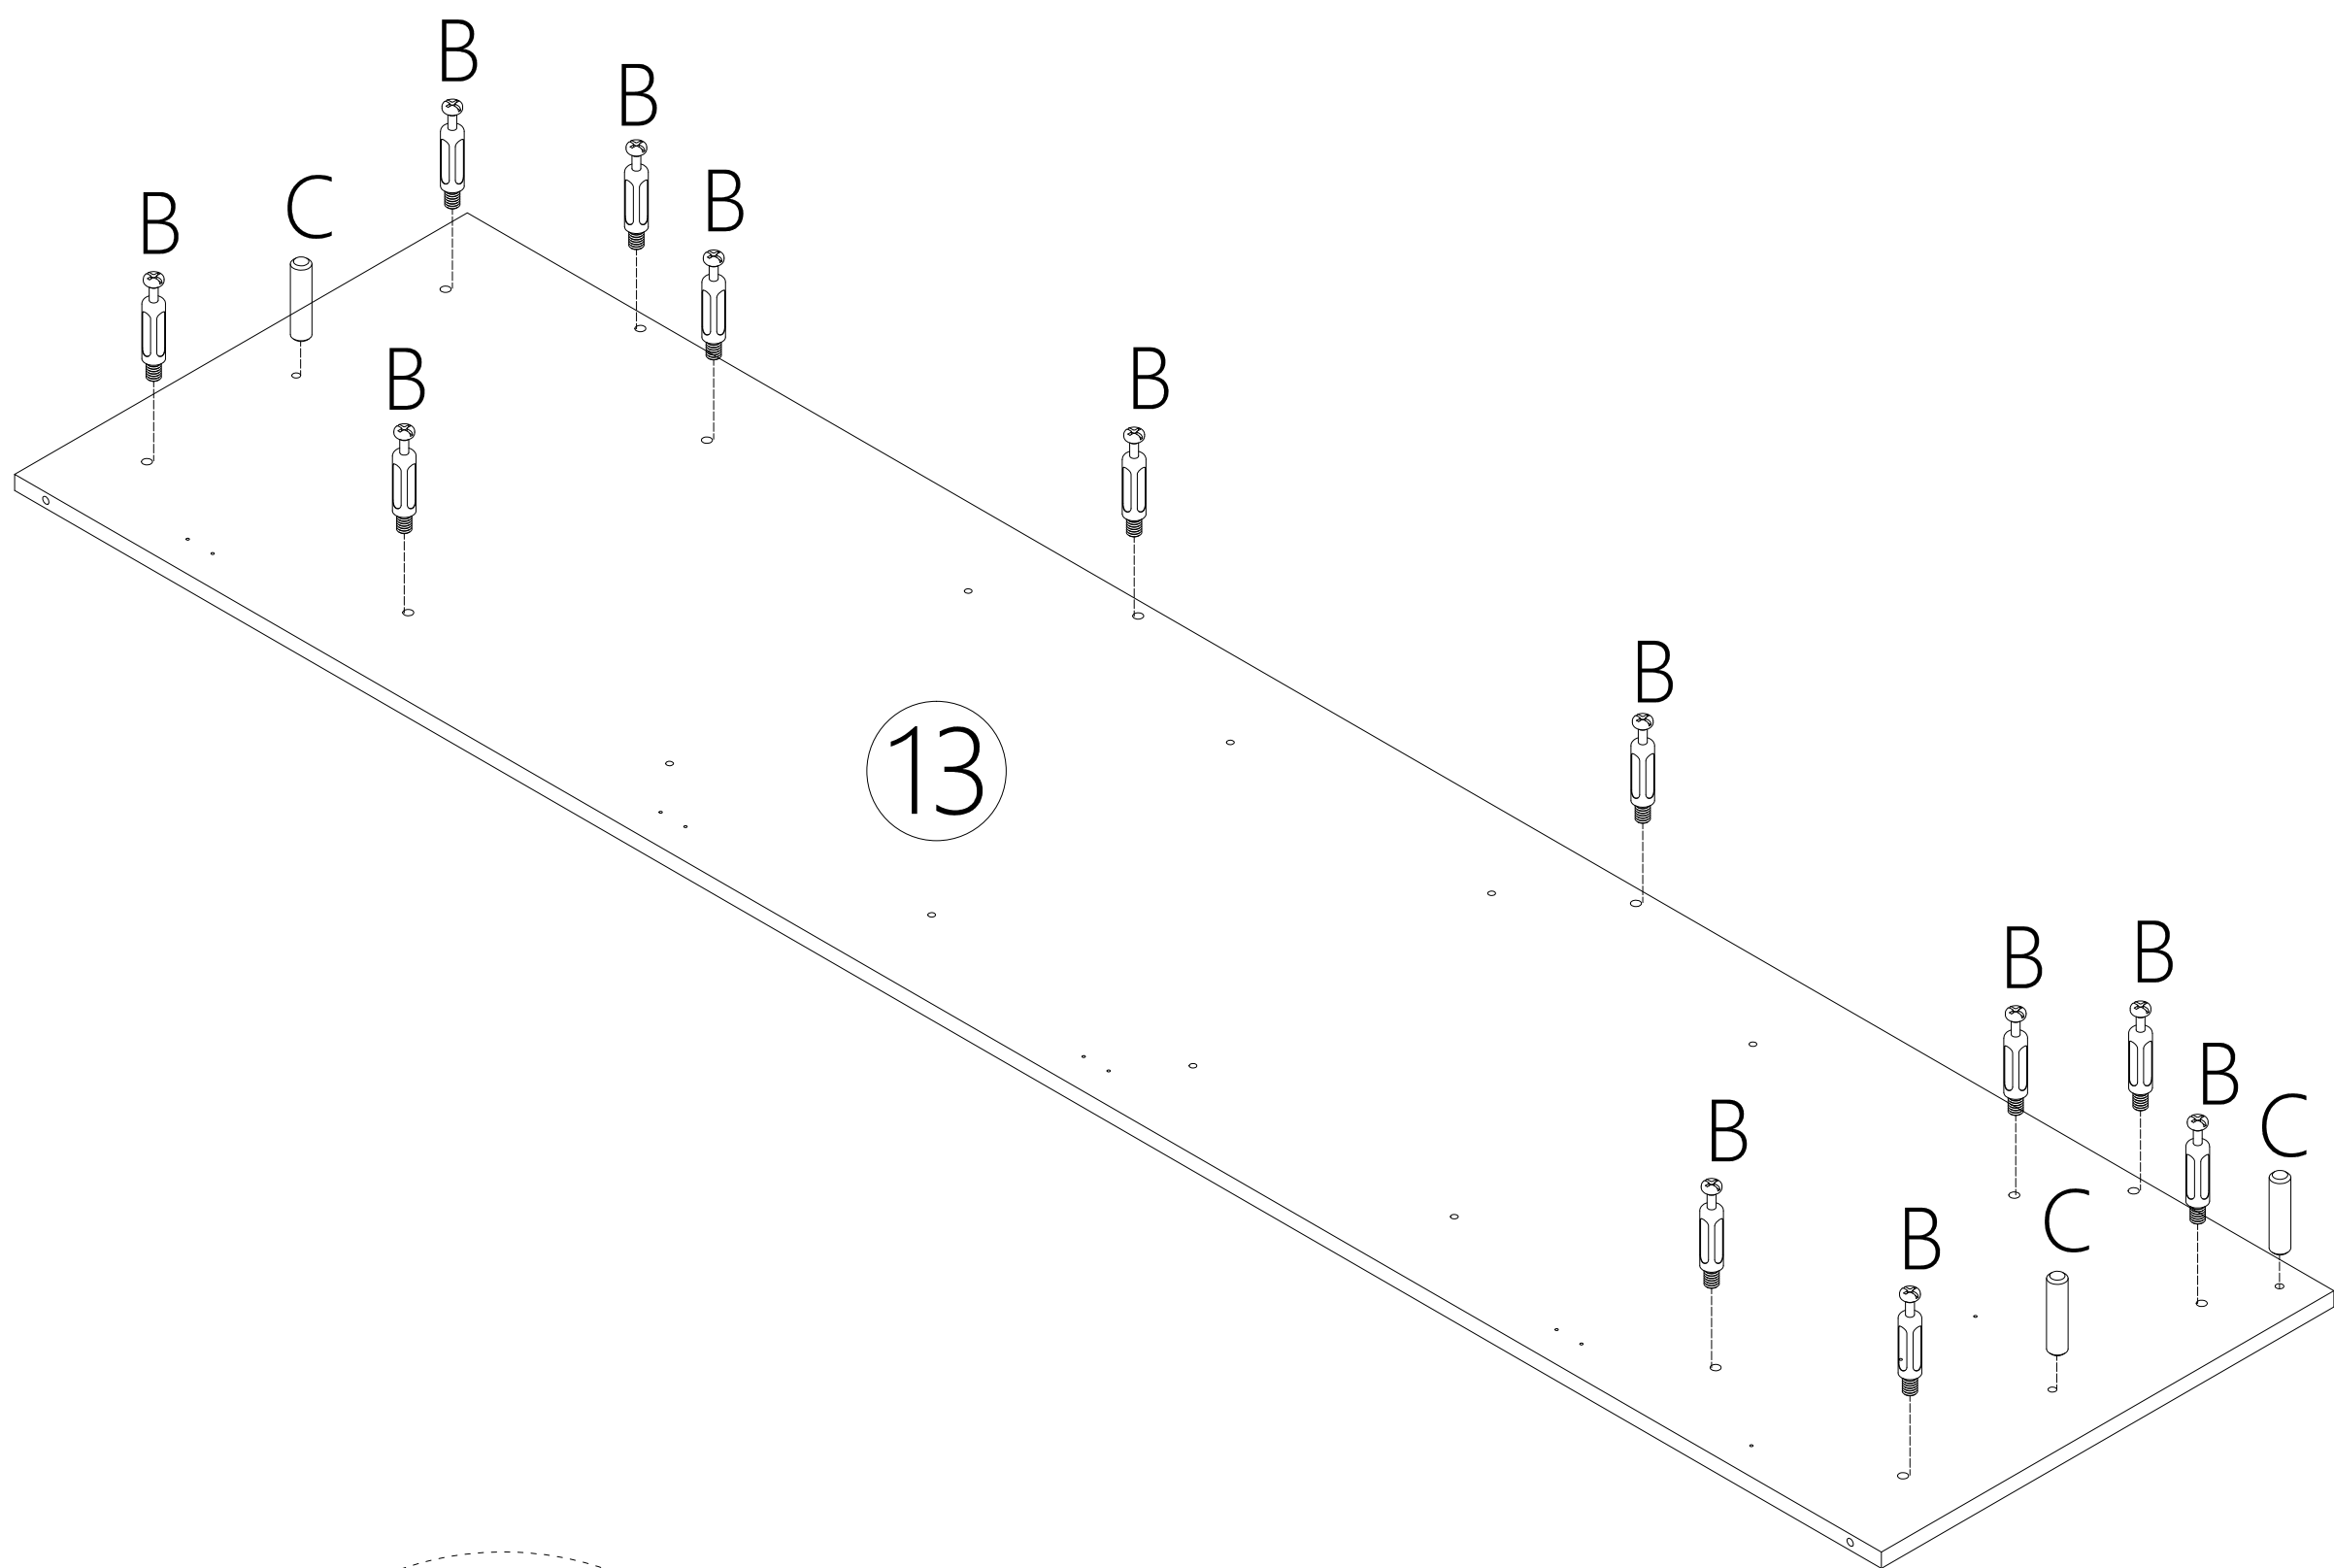


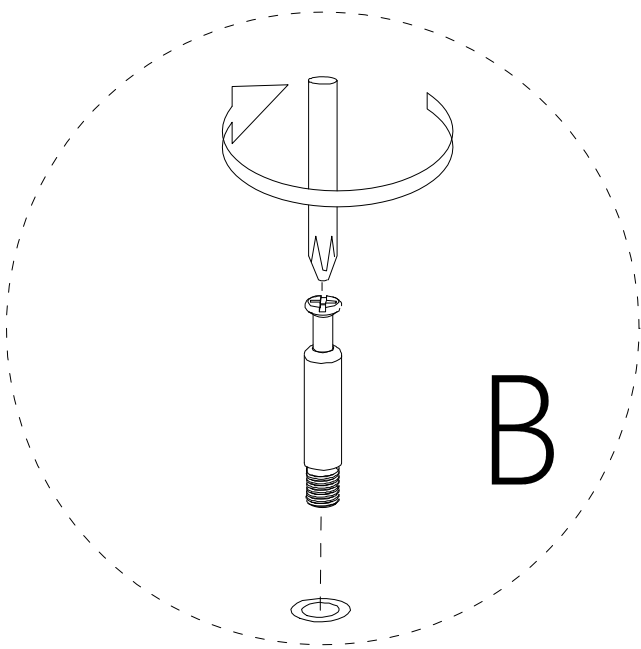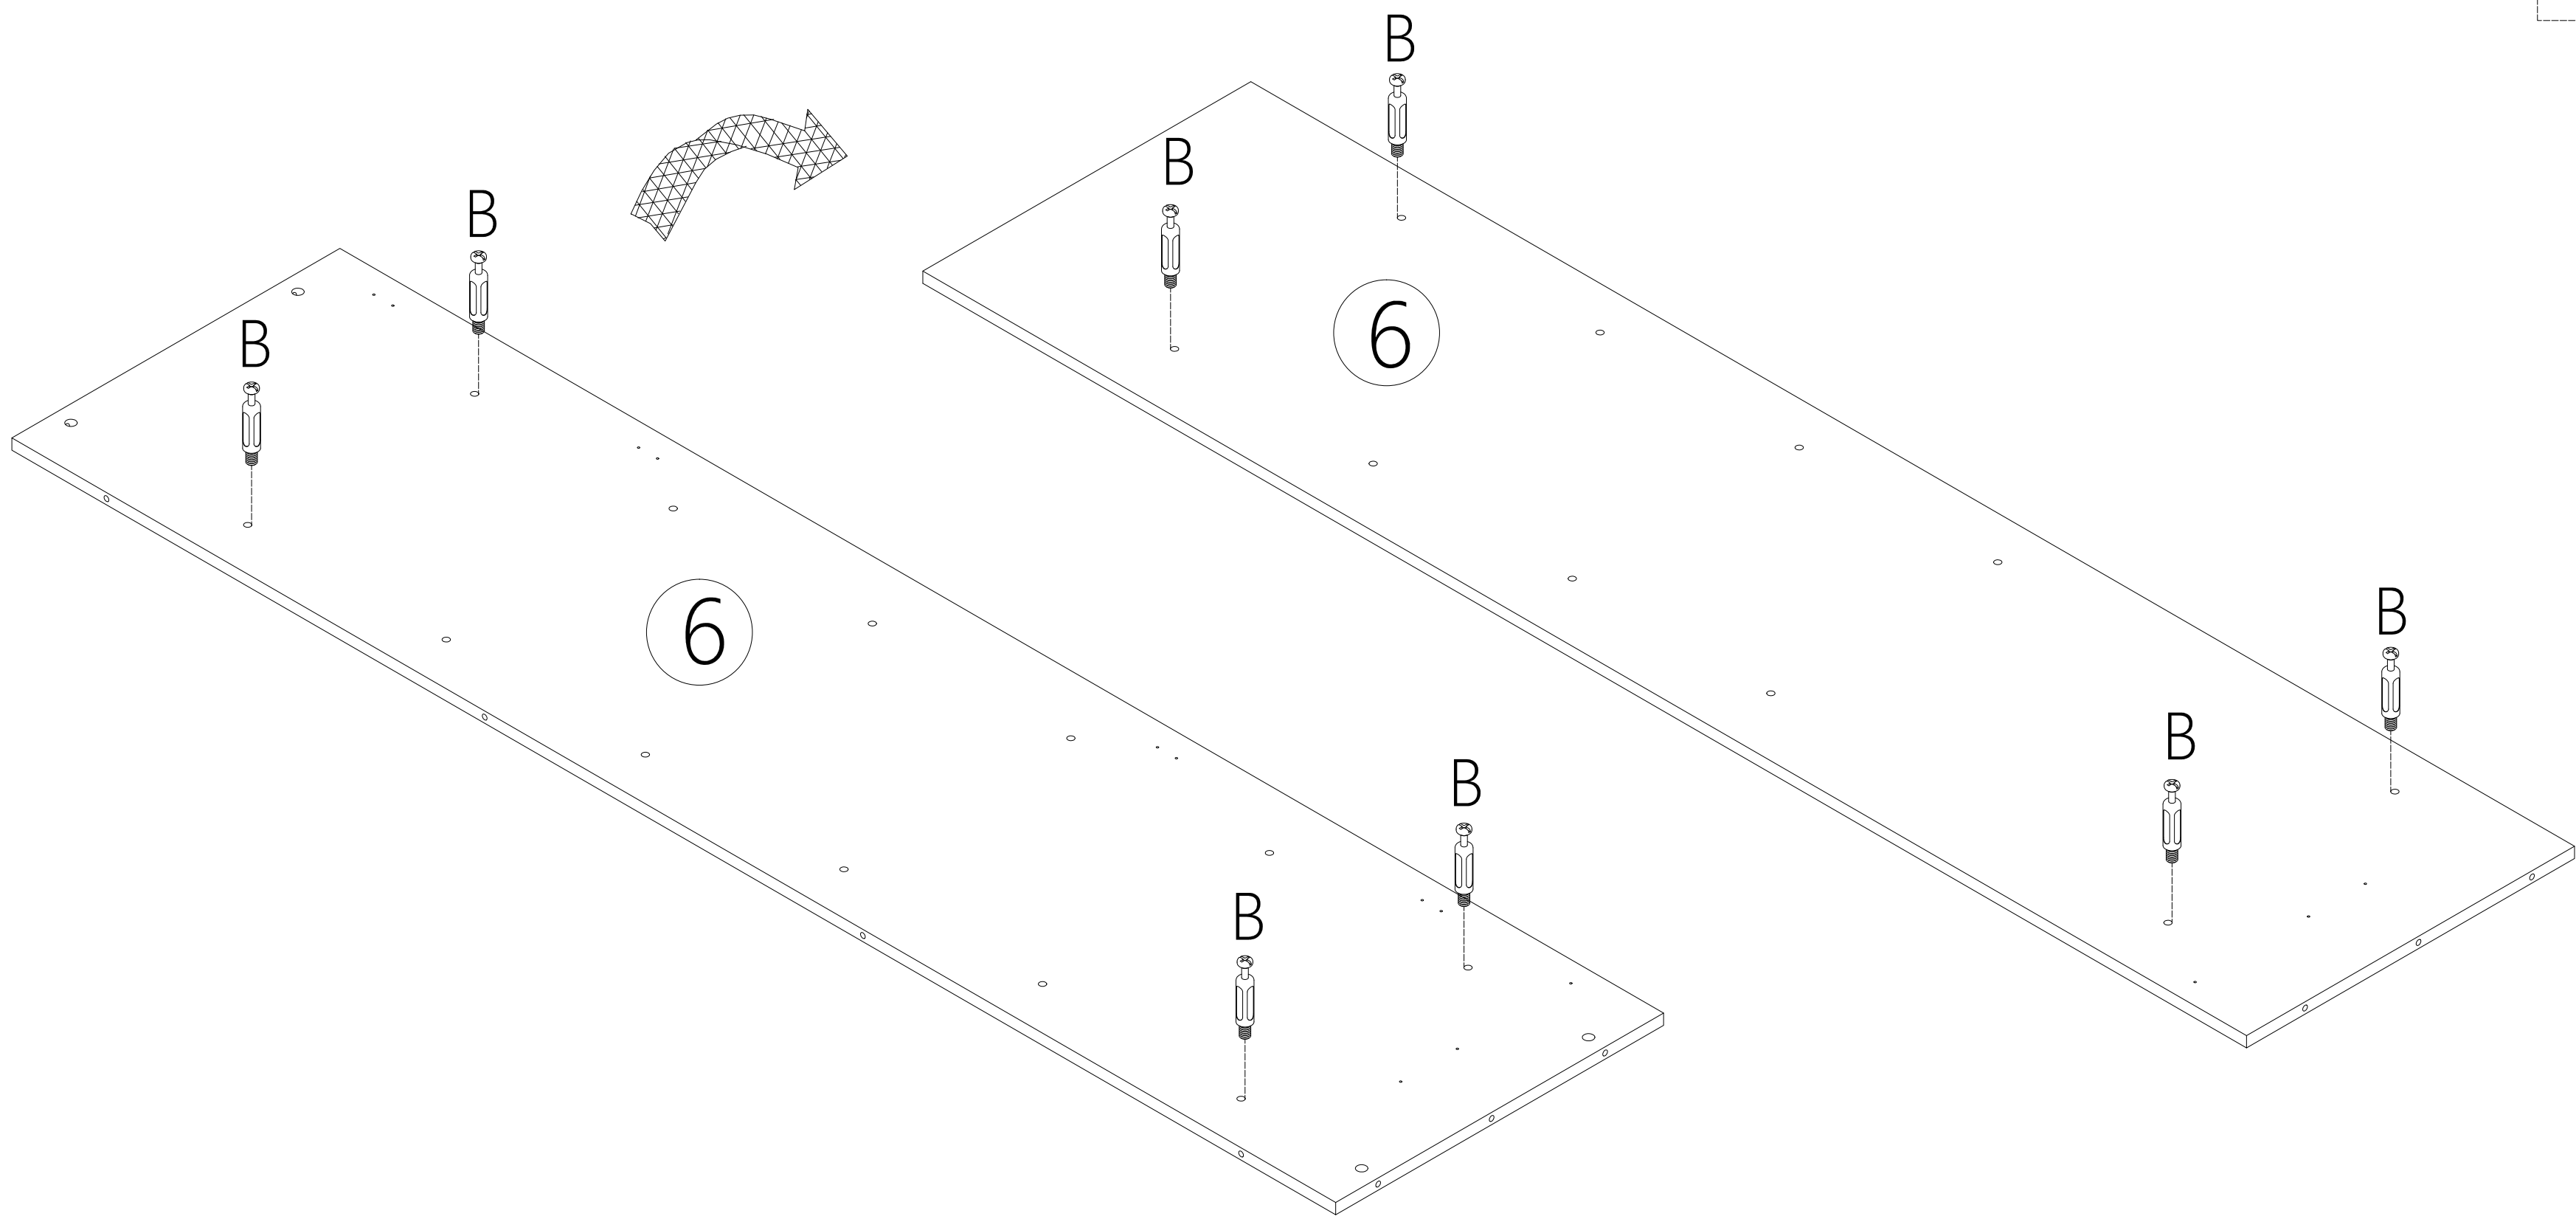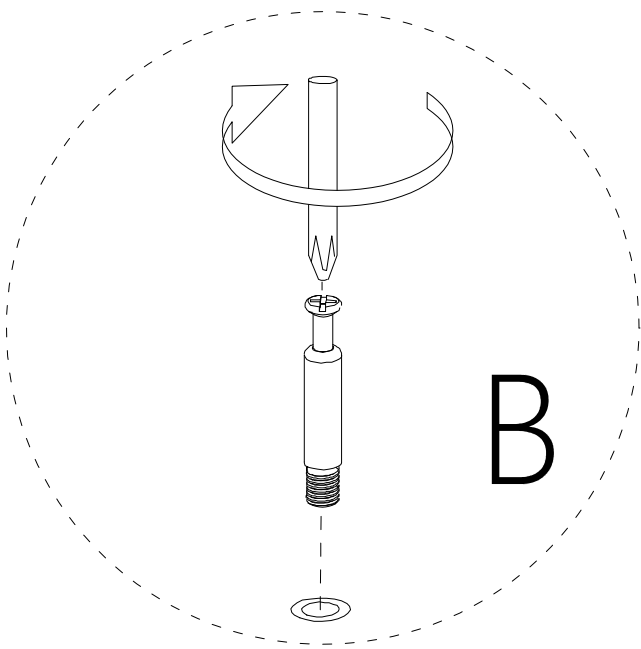
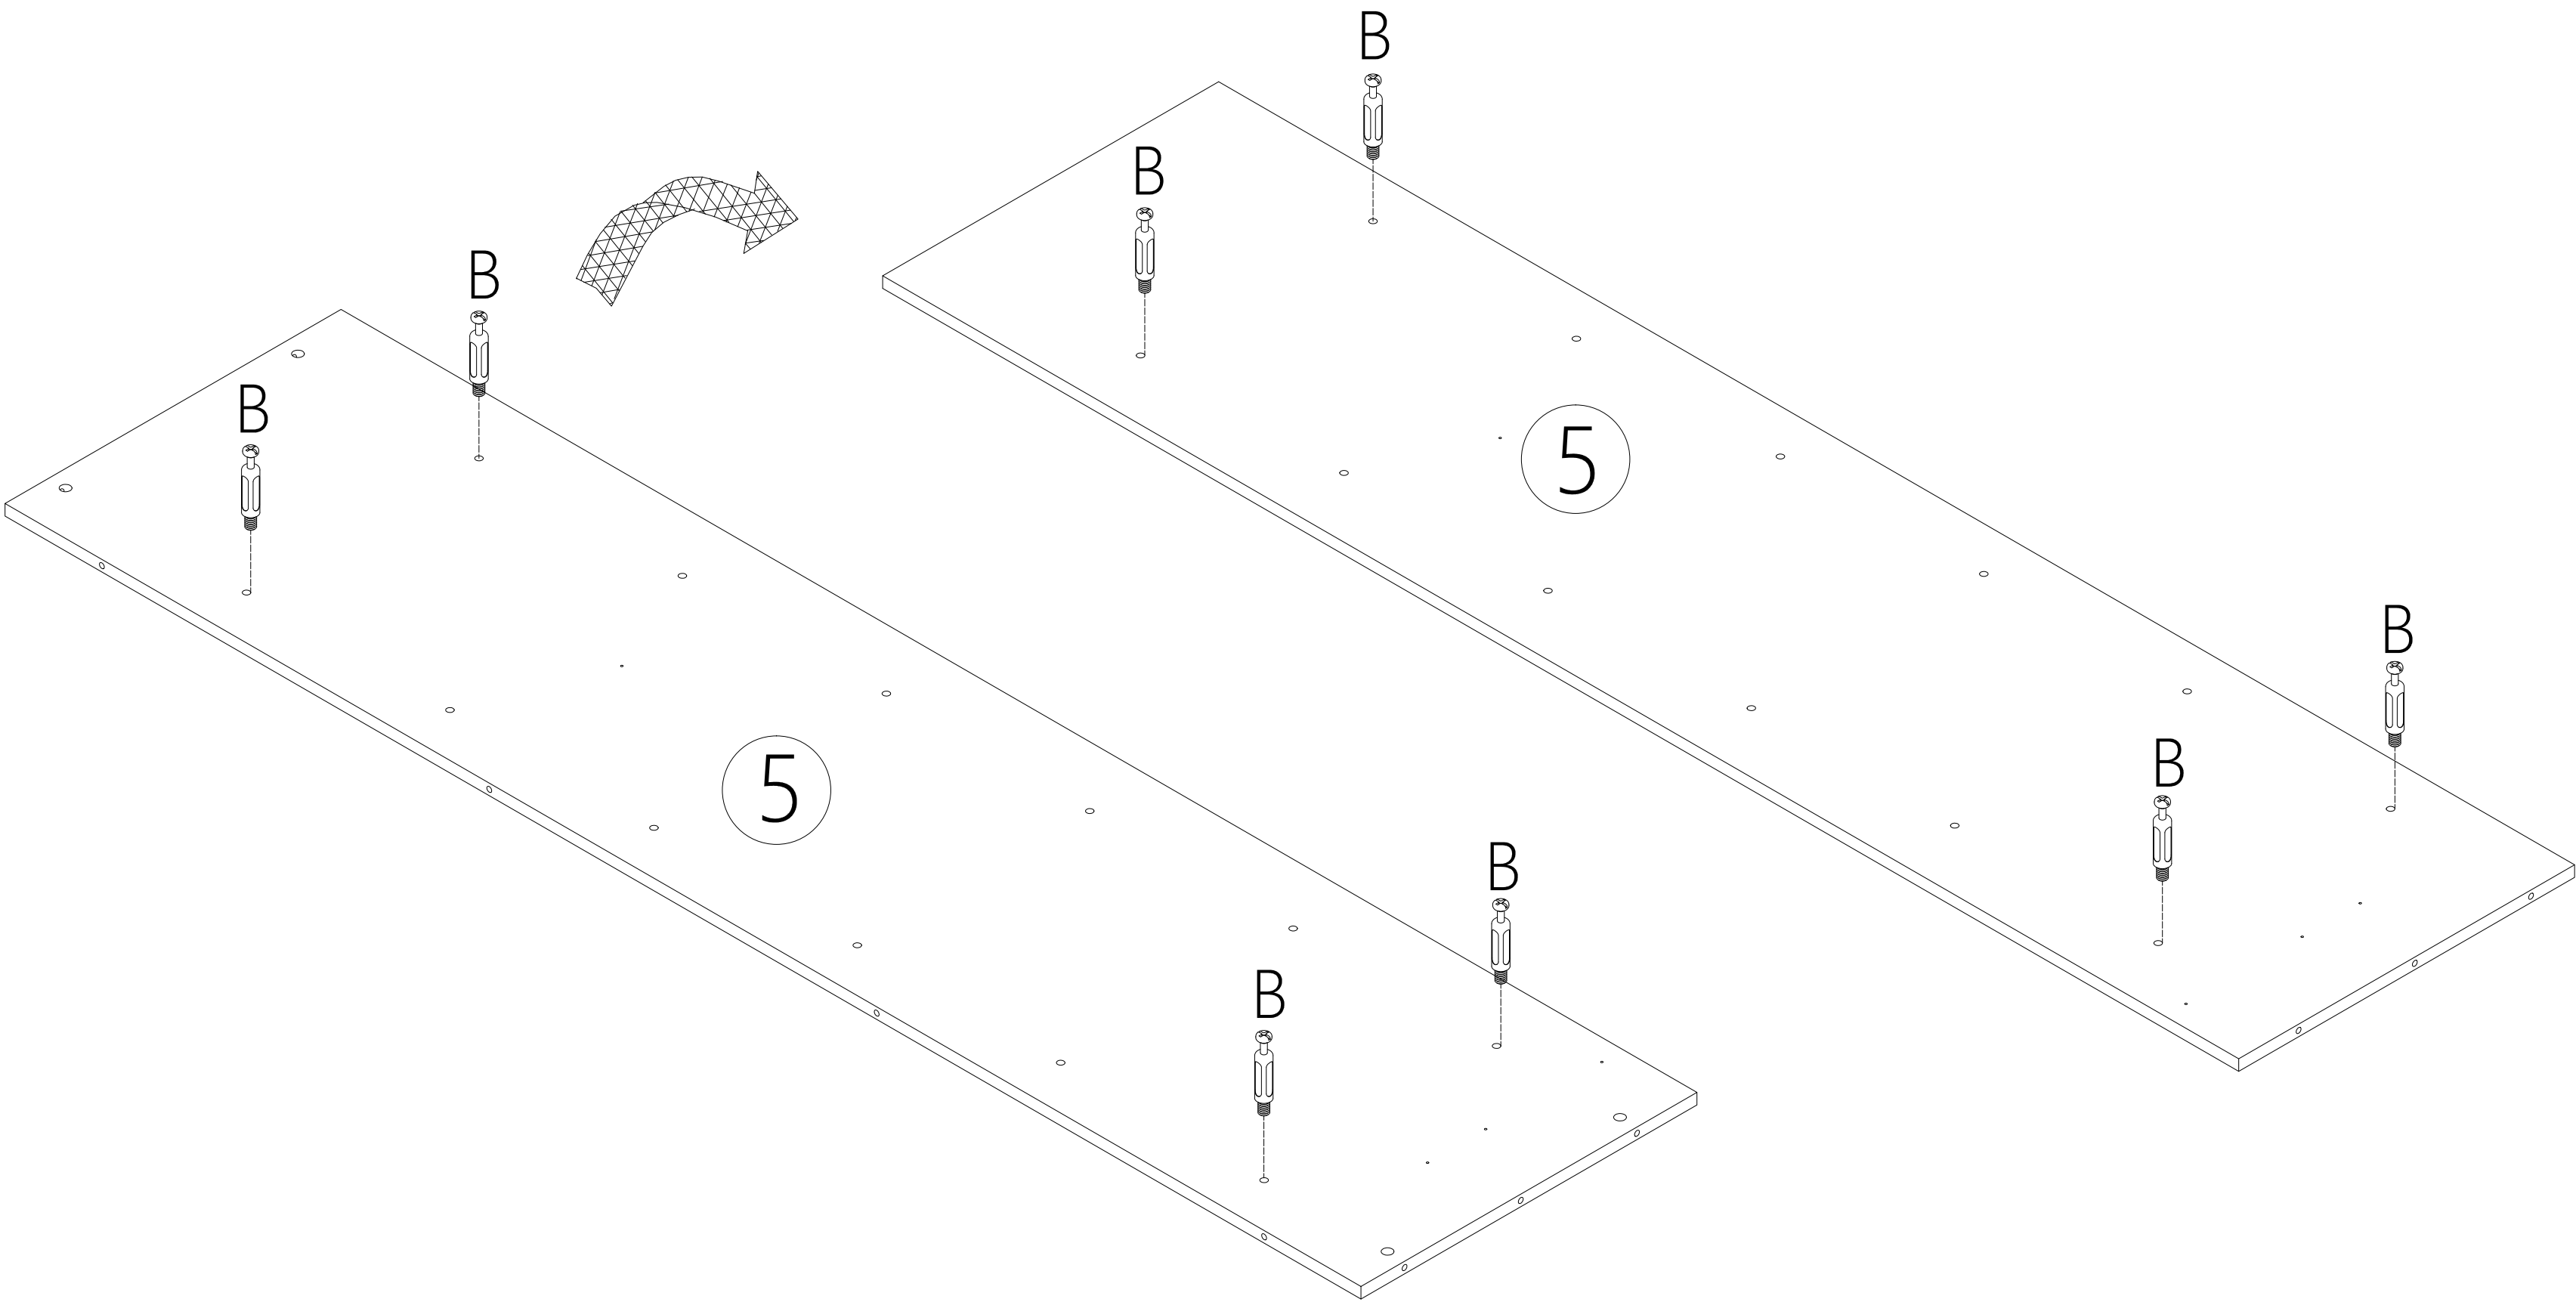


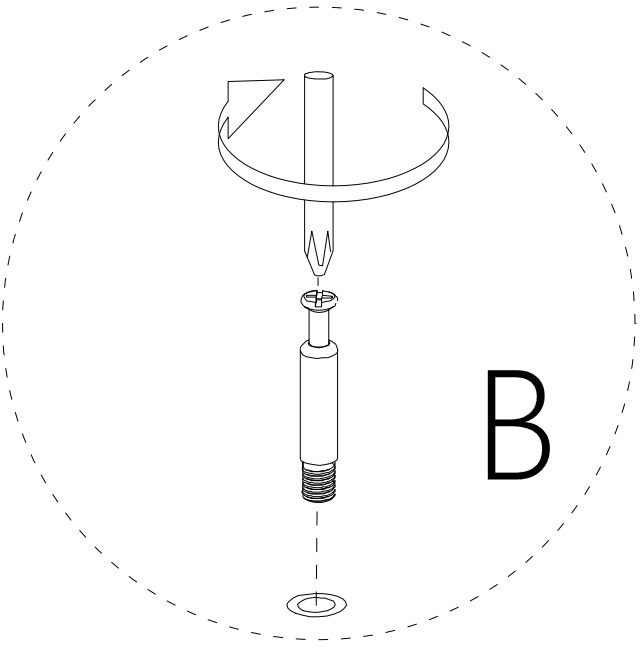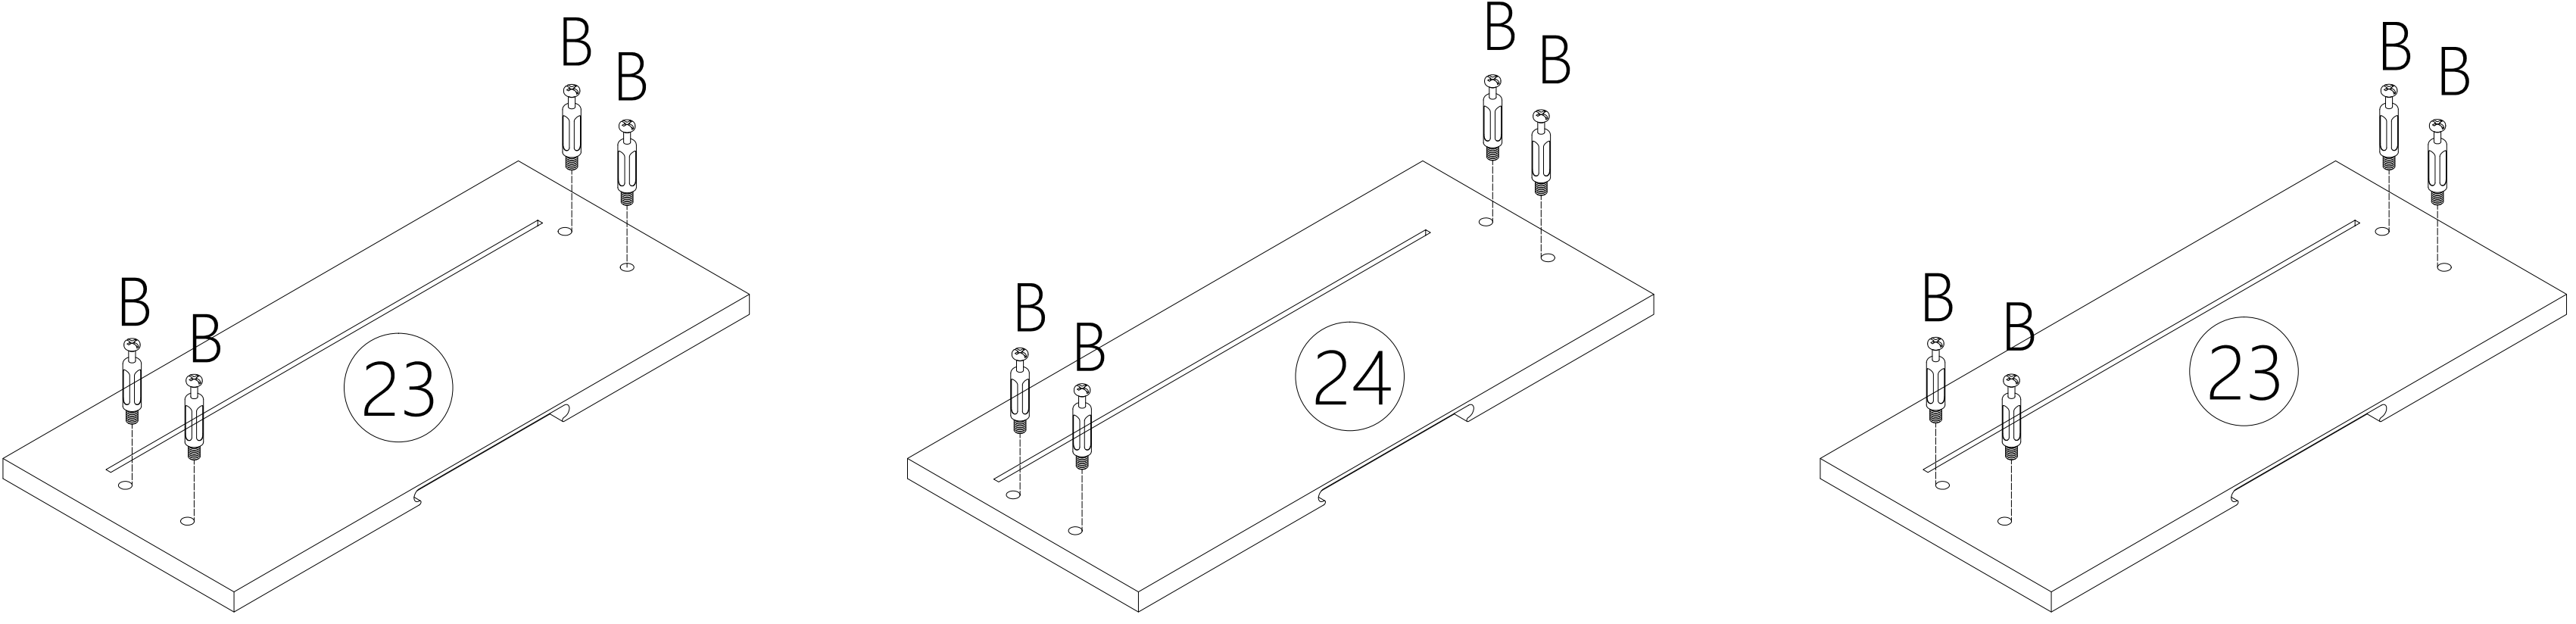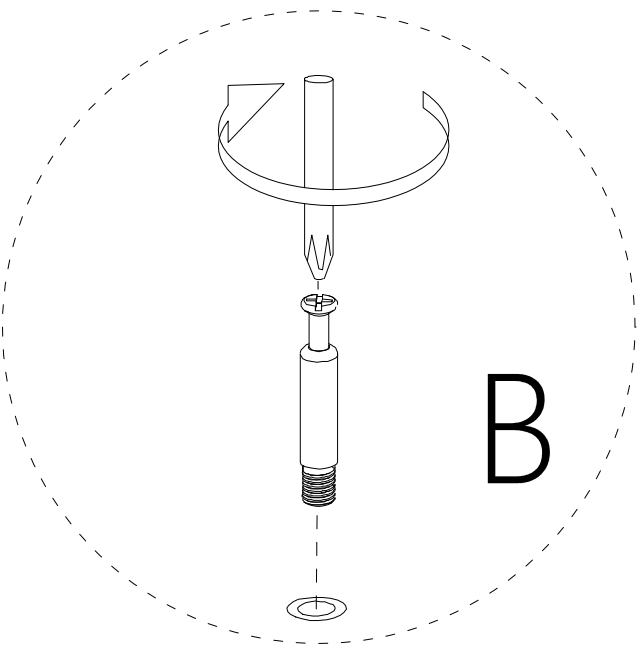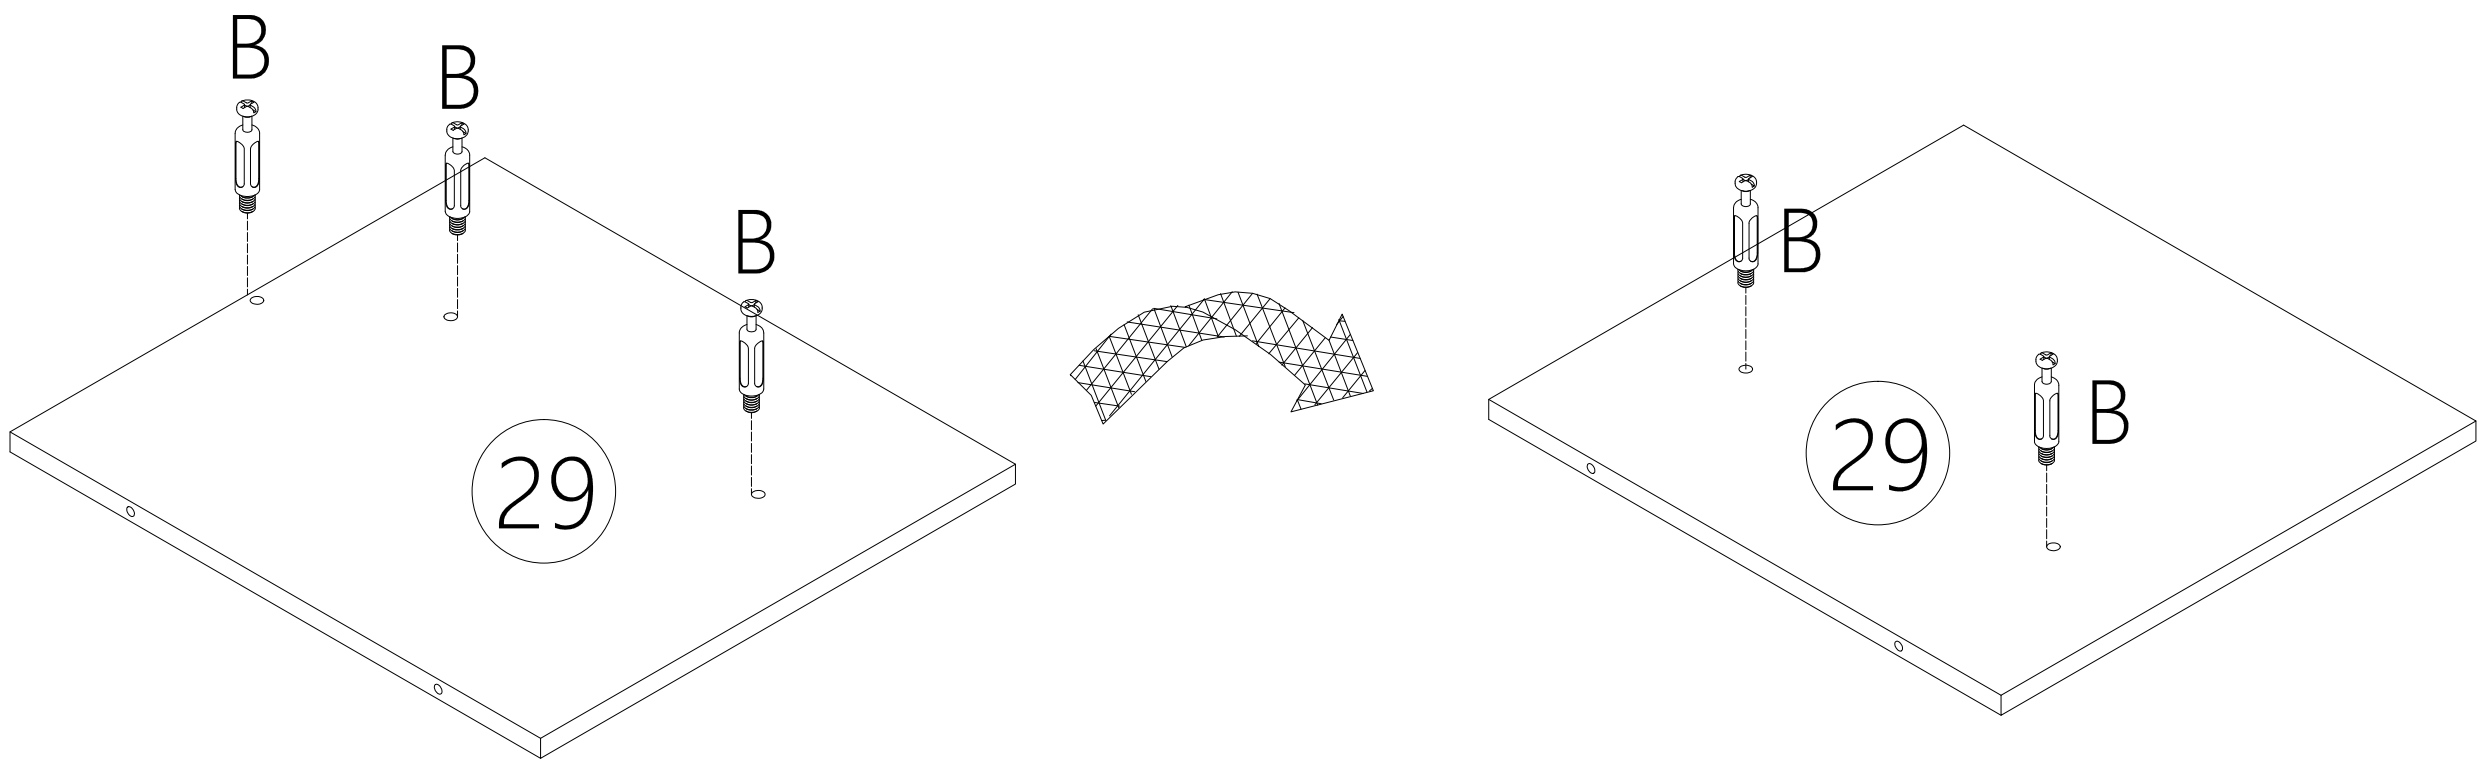

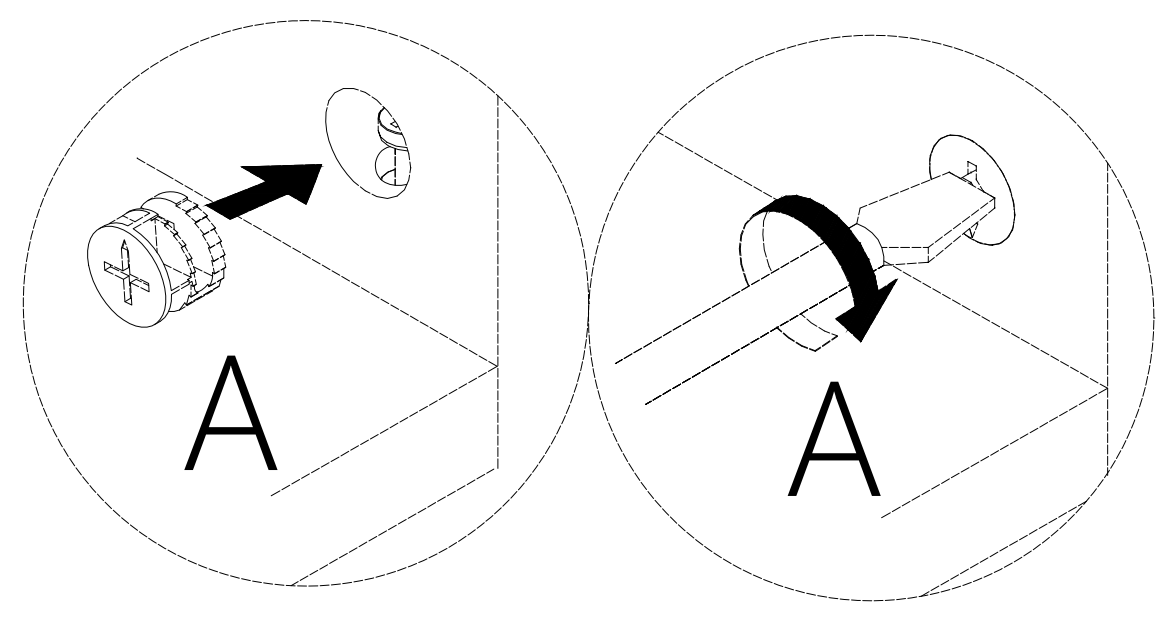
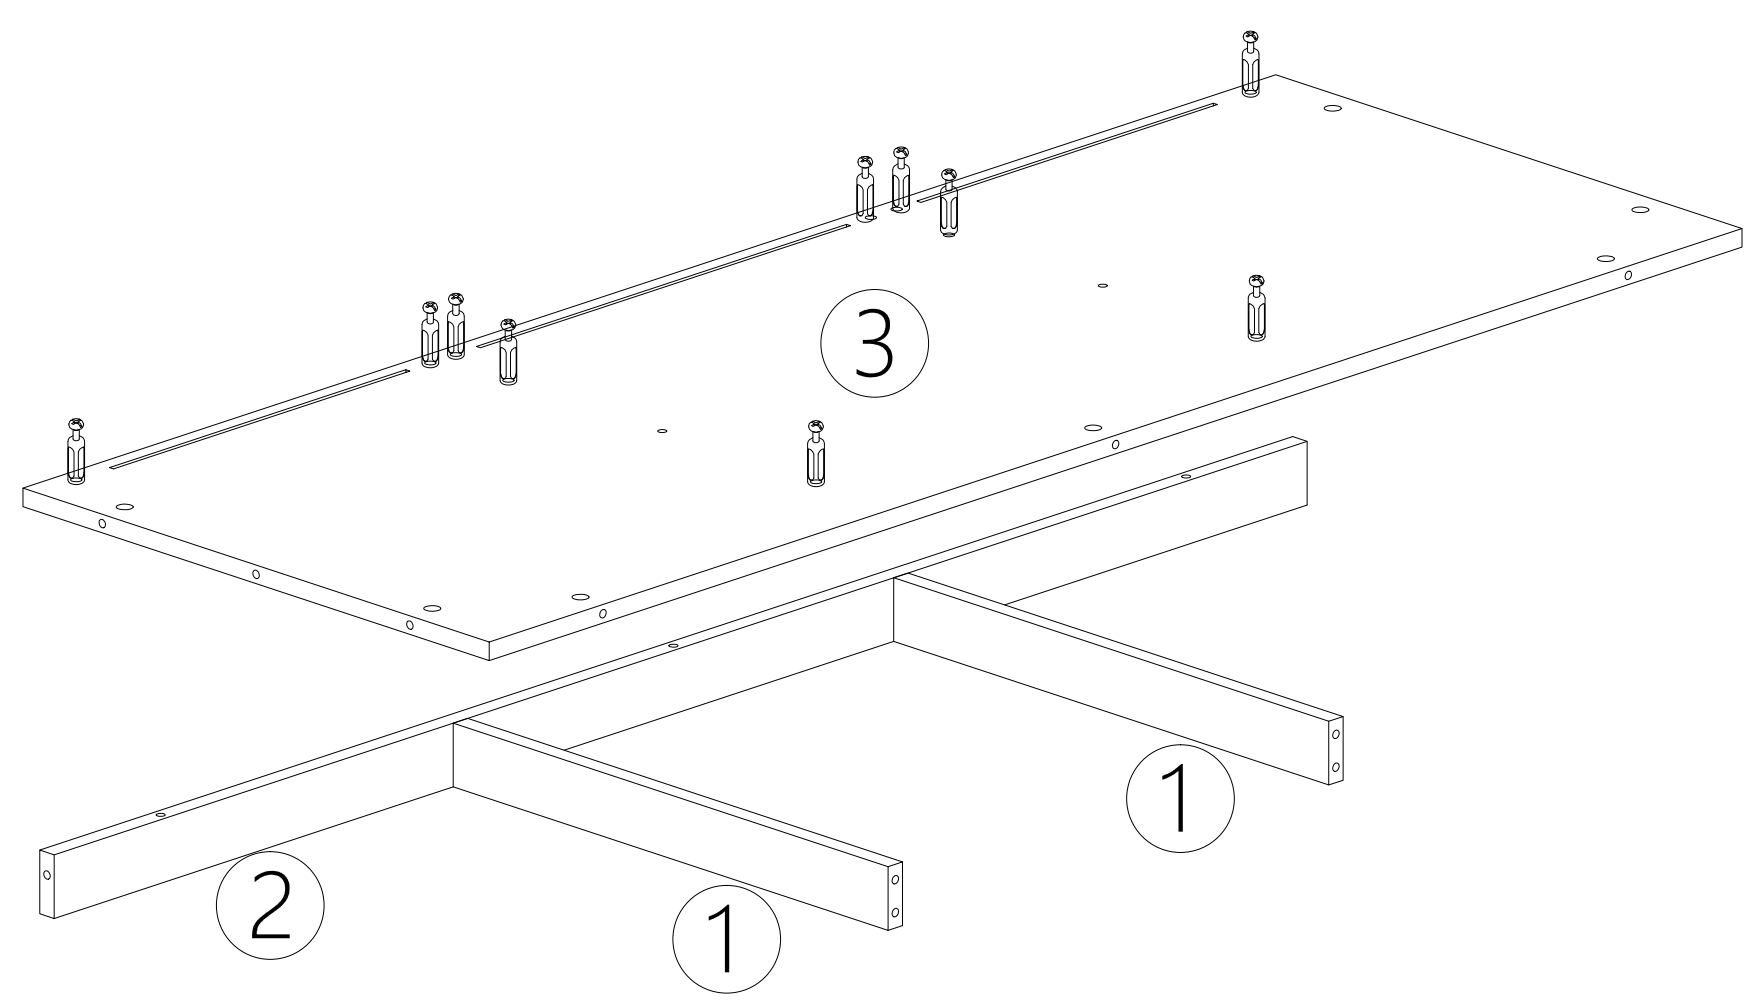
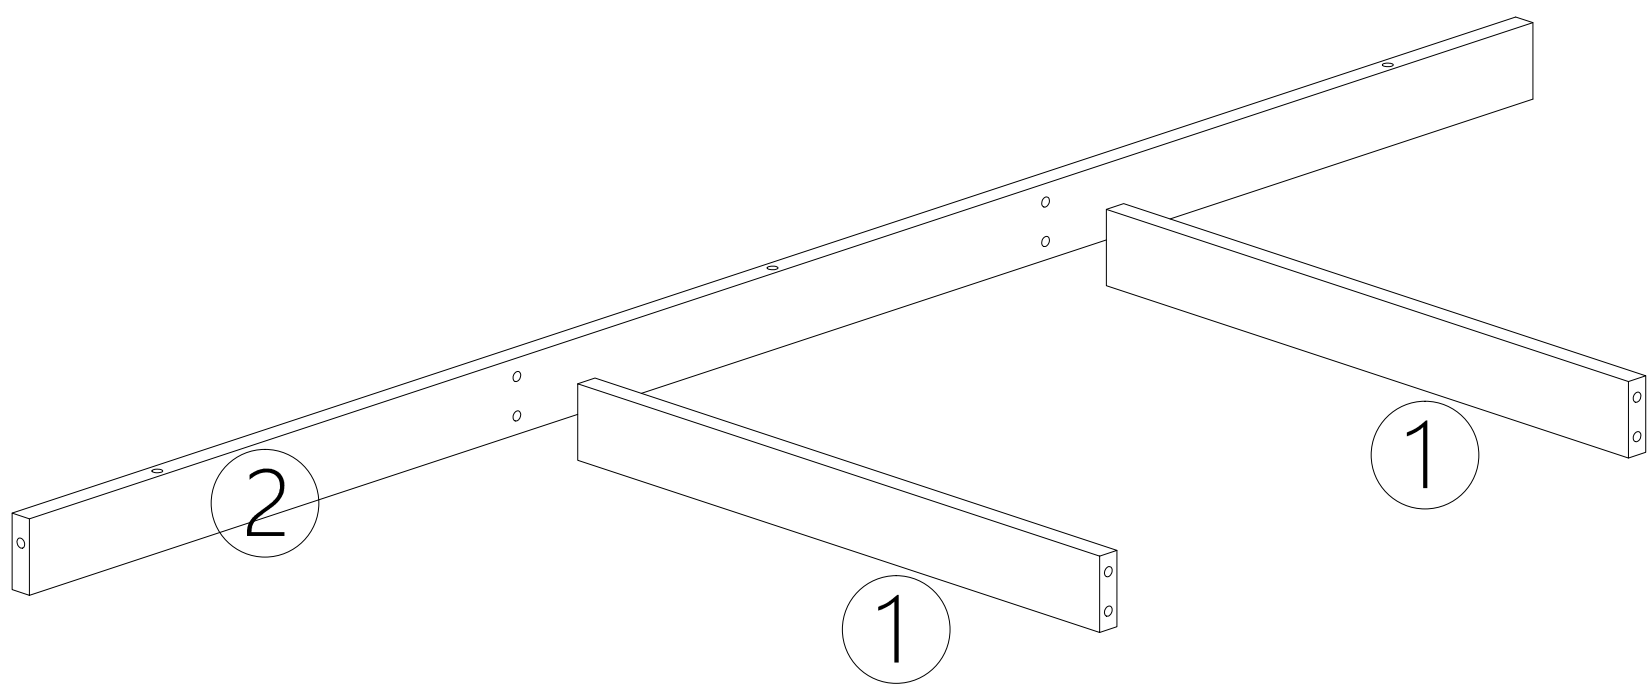


Disassembly and installation of accessories

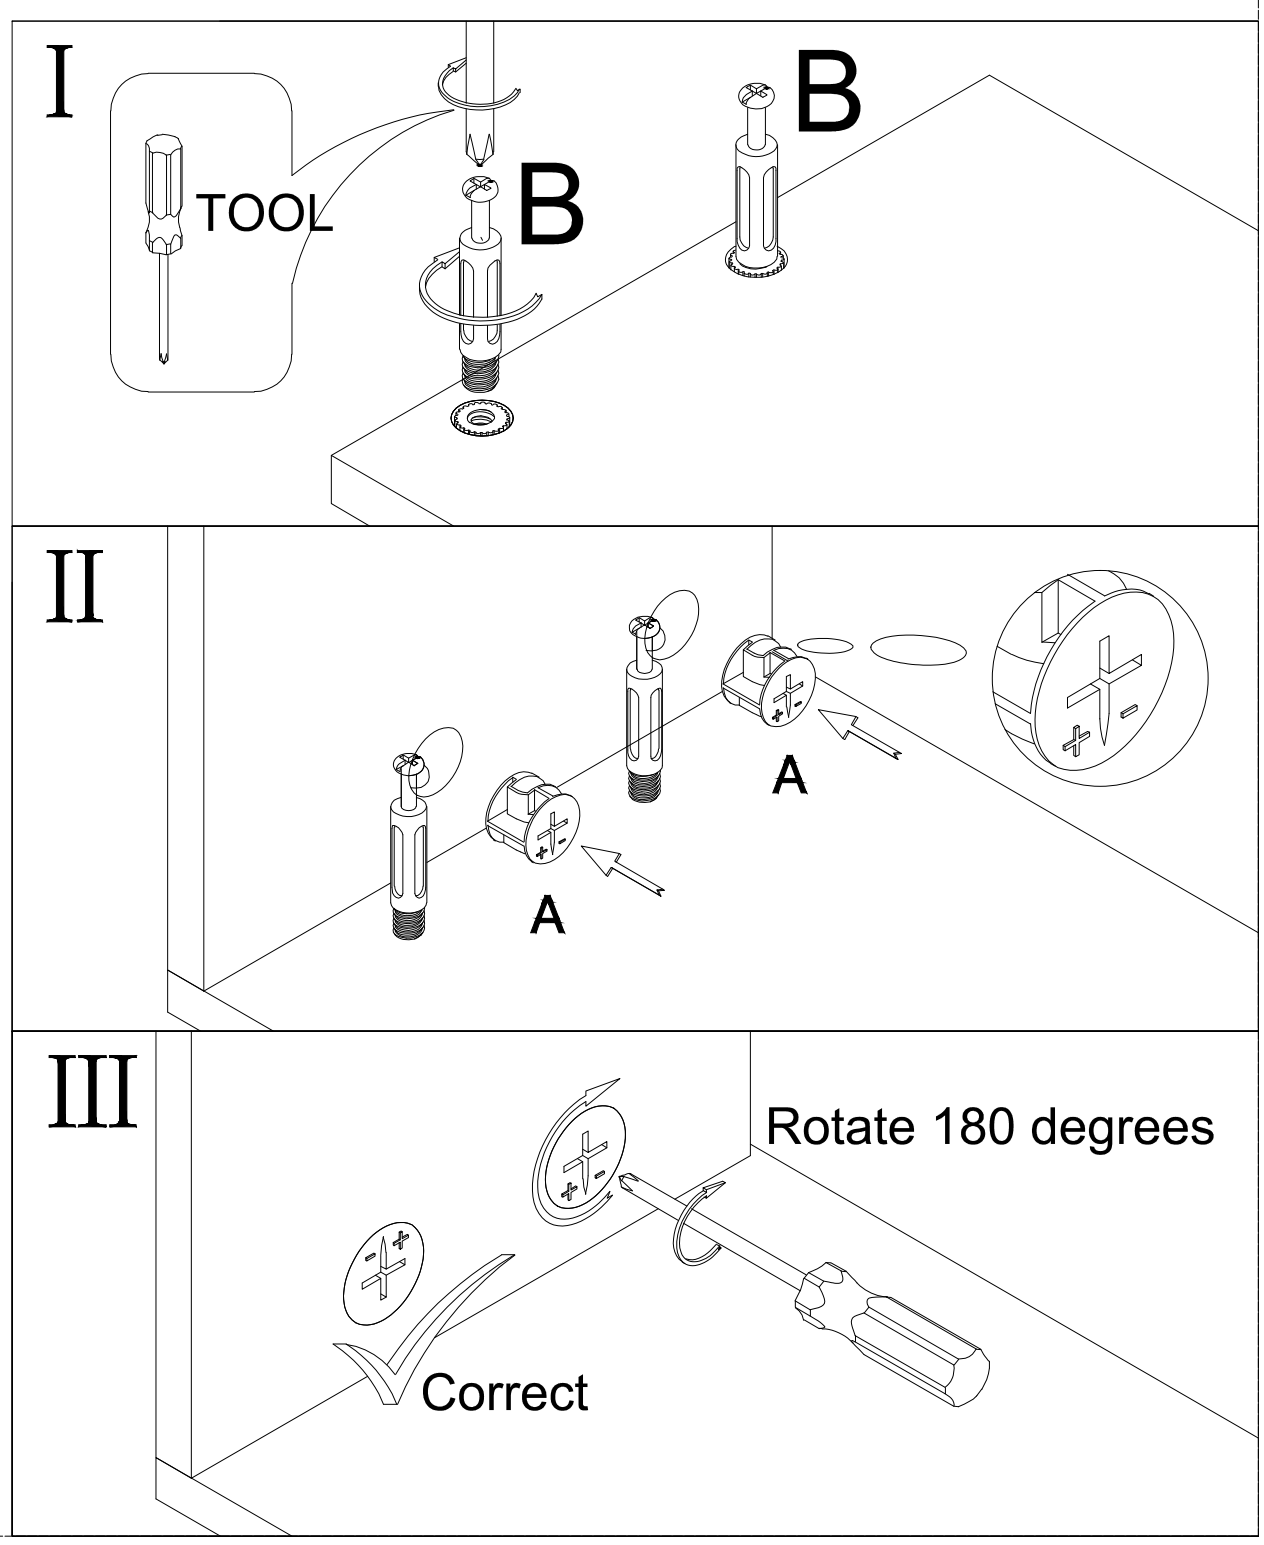




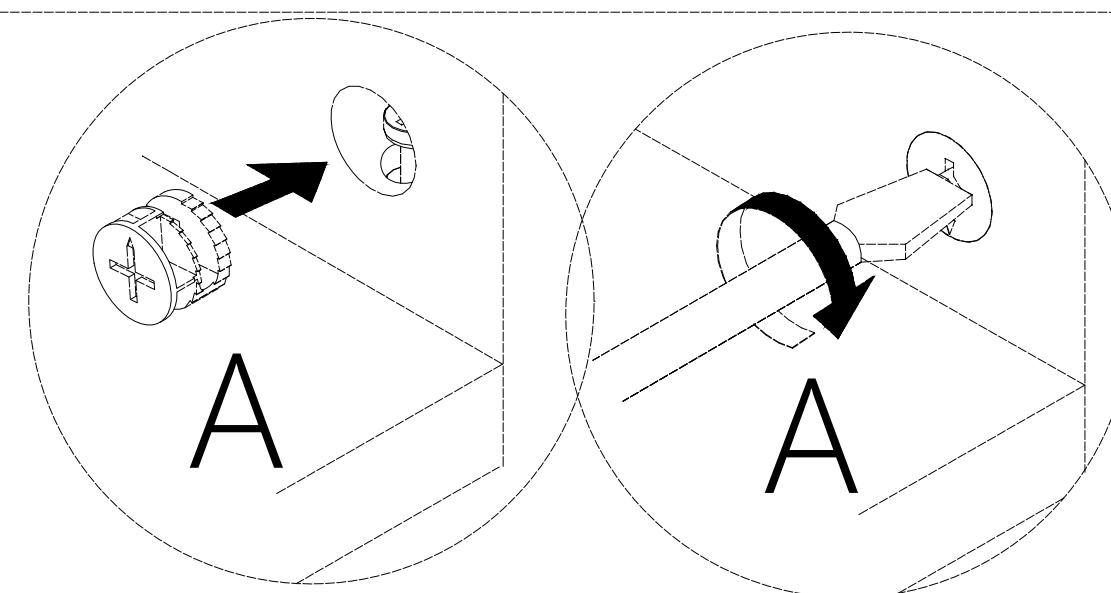
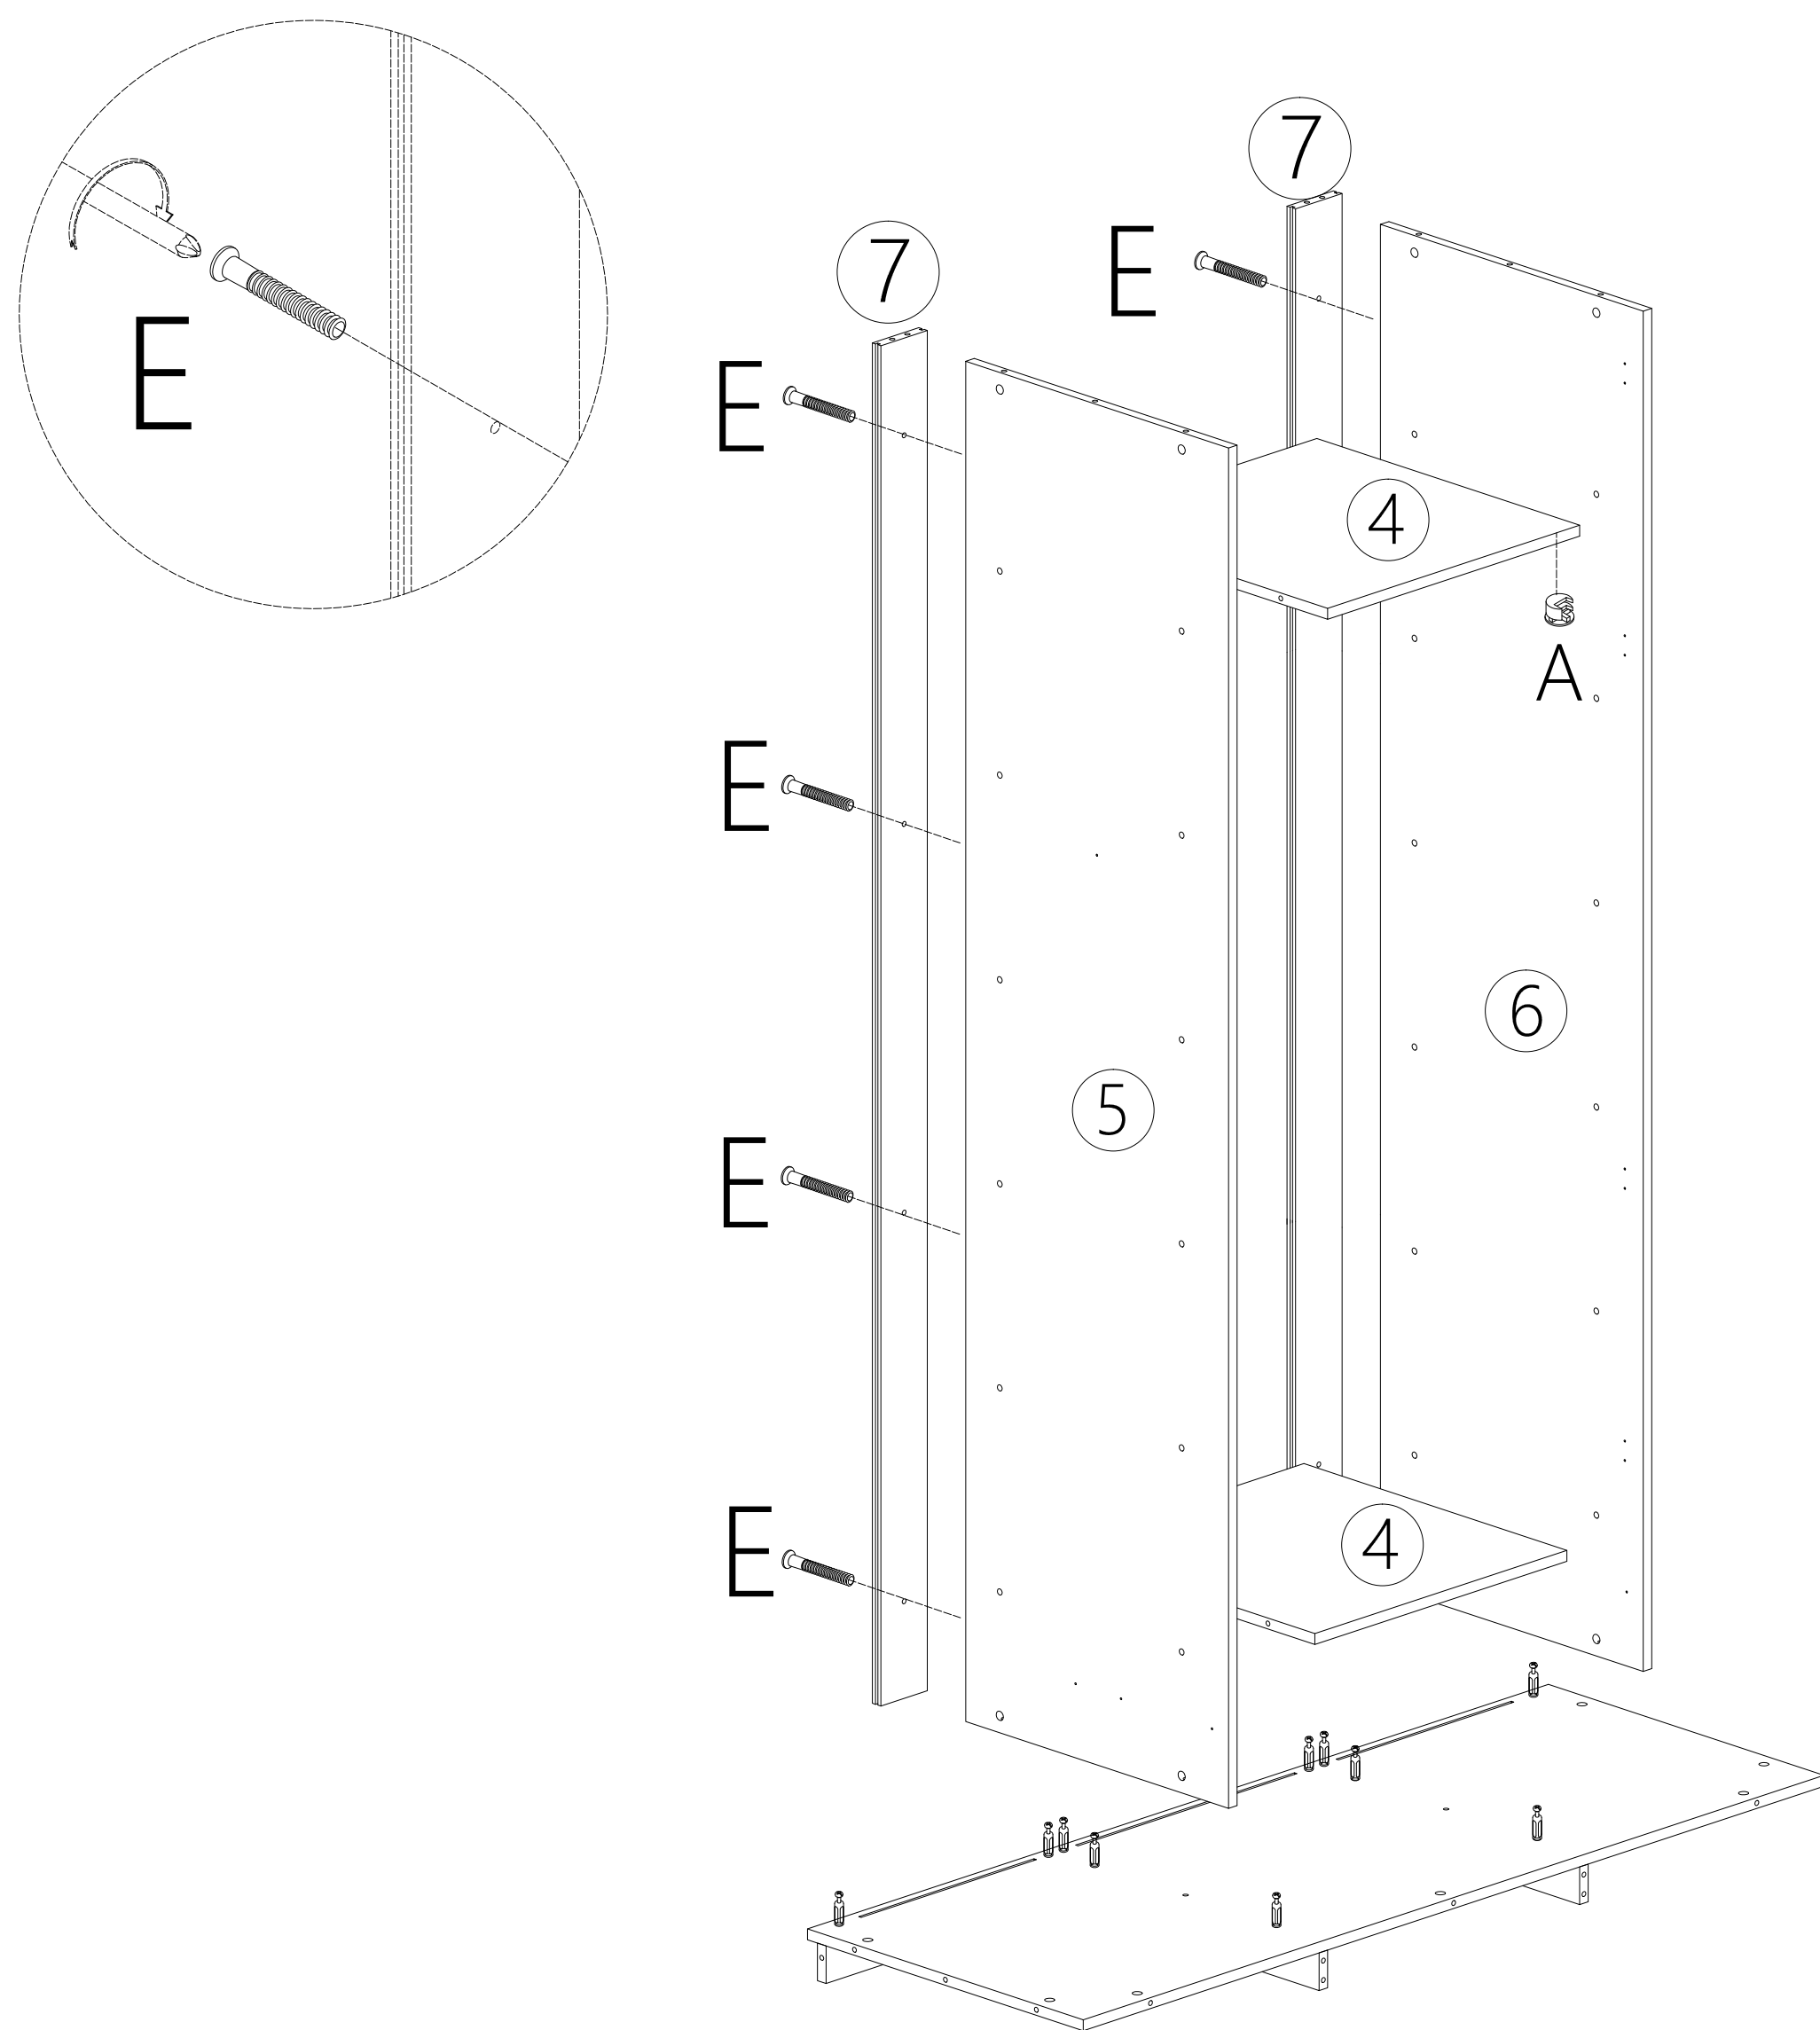











Disassembly and installation of accessories



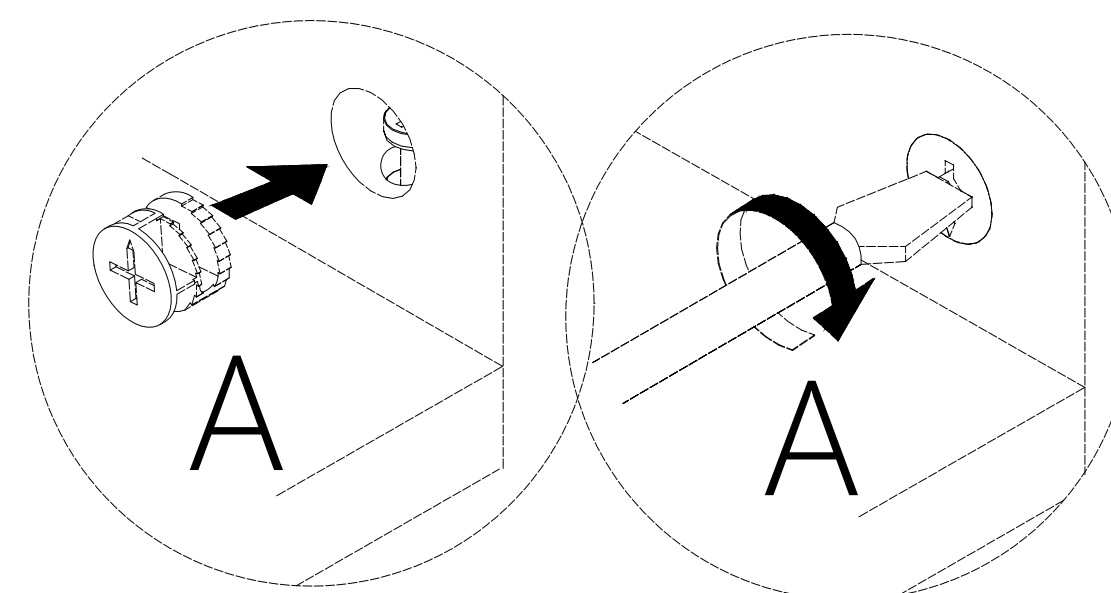
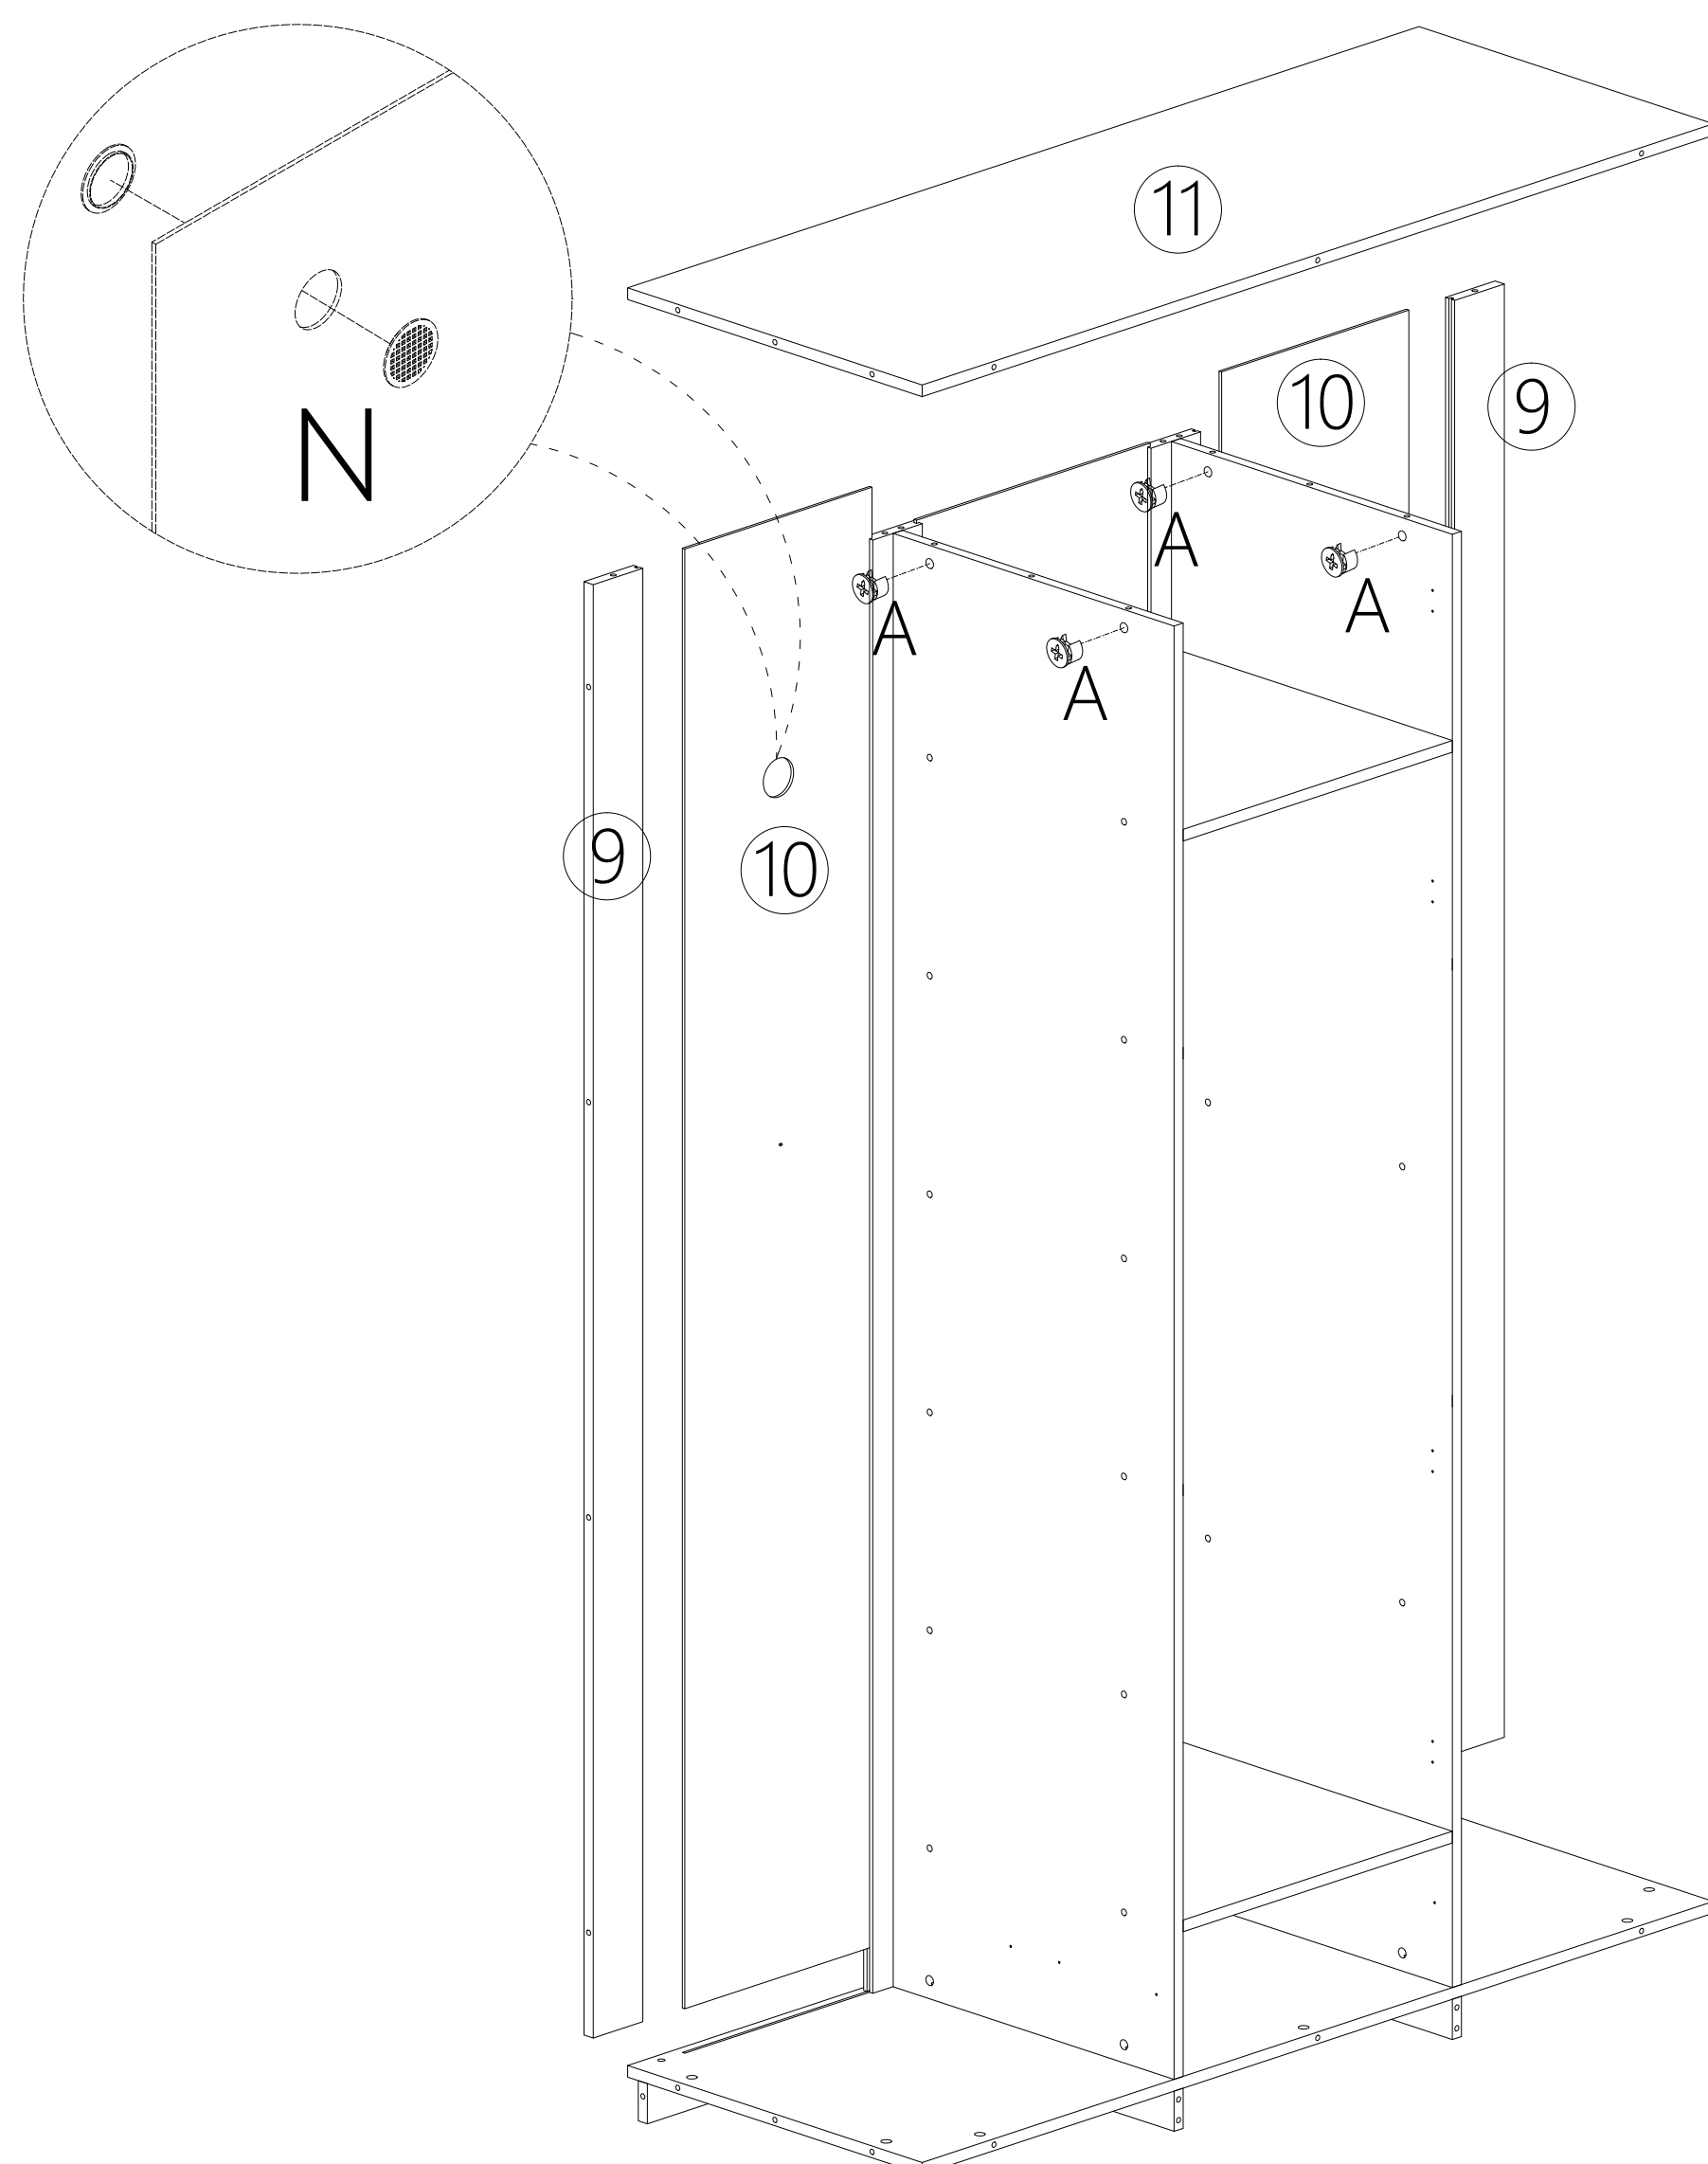
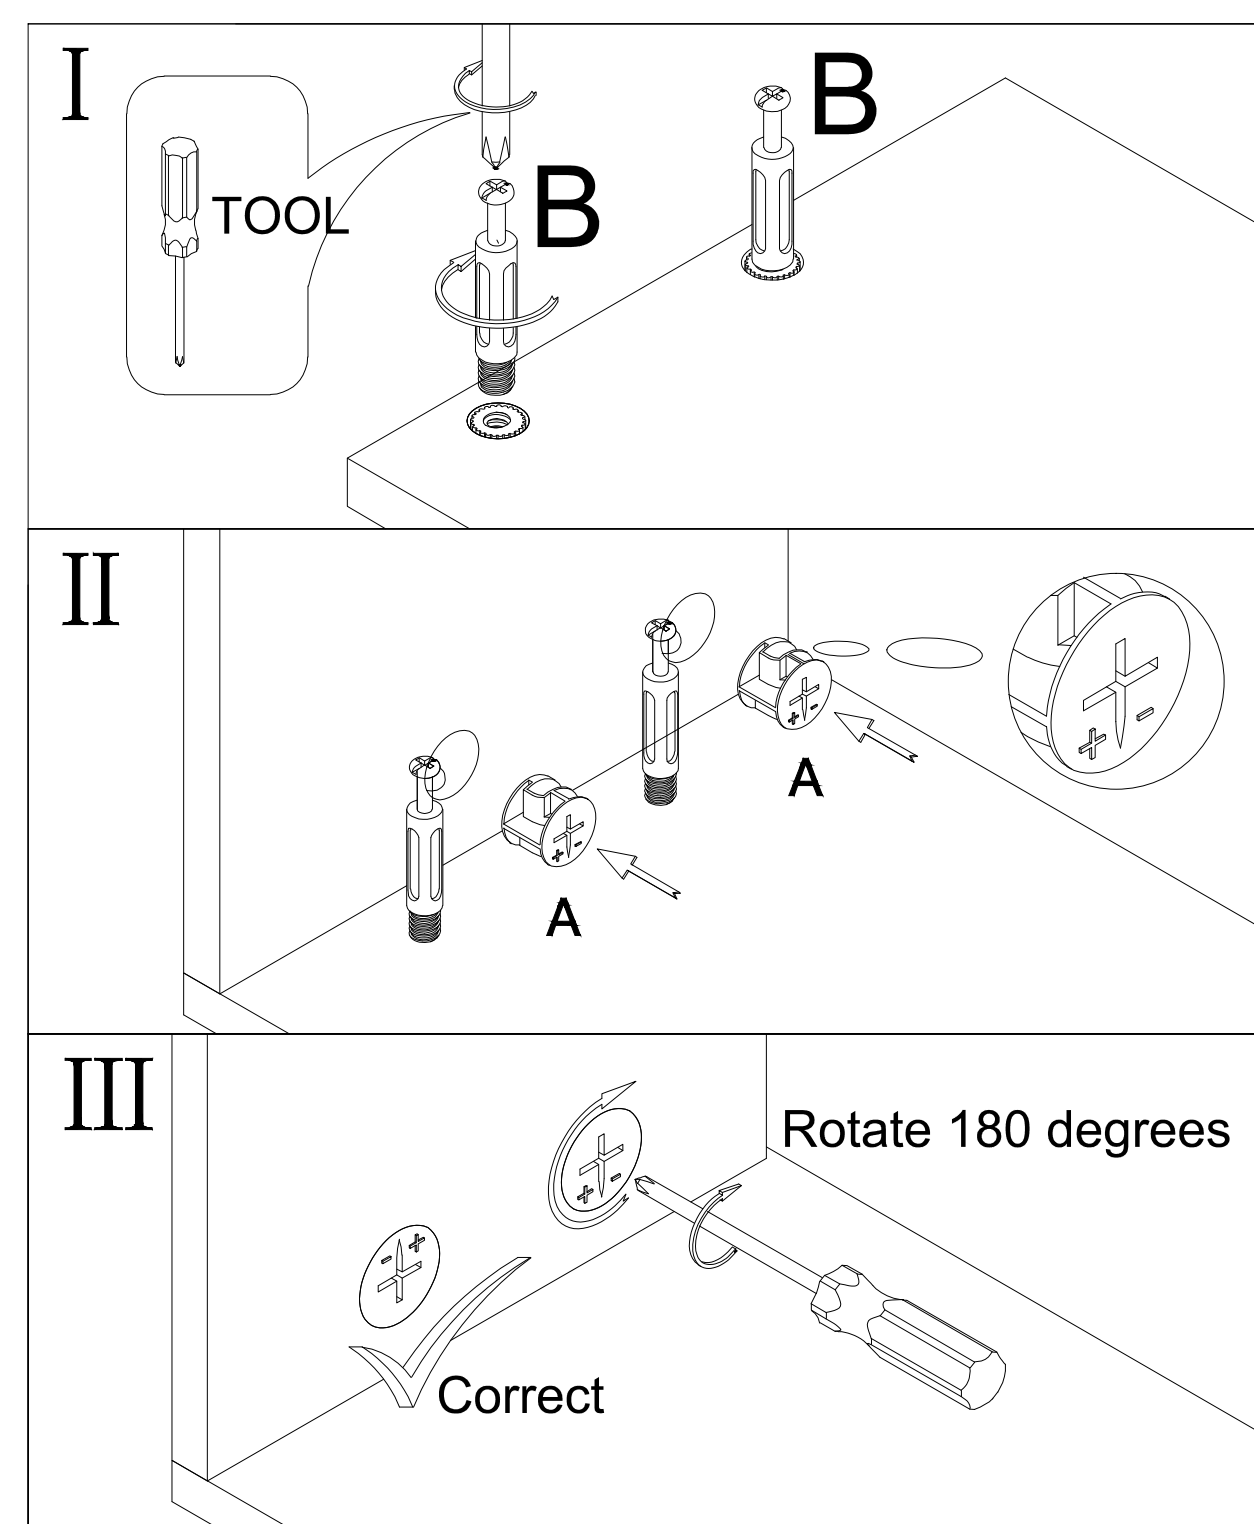




Disassembly and installation of accessories


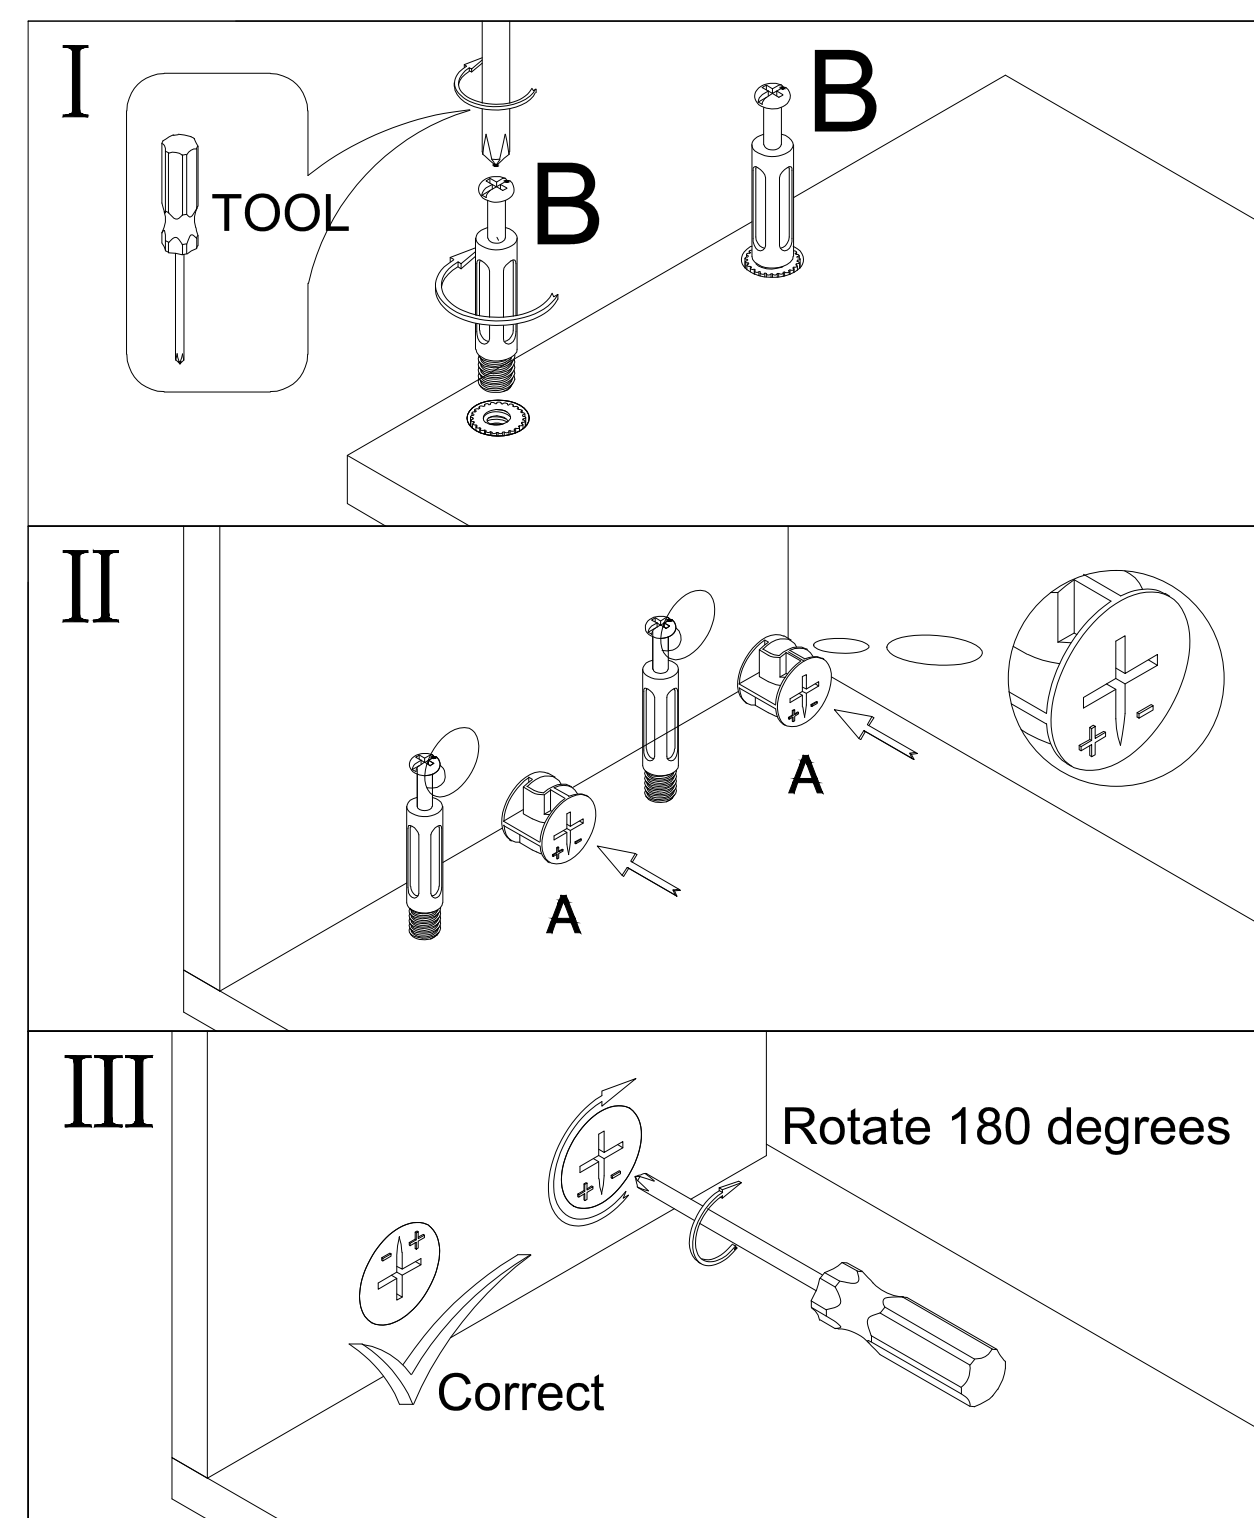


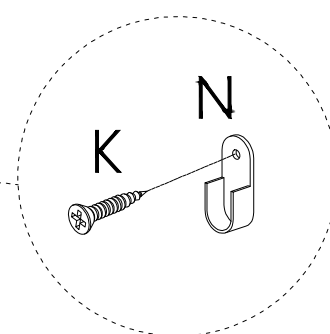
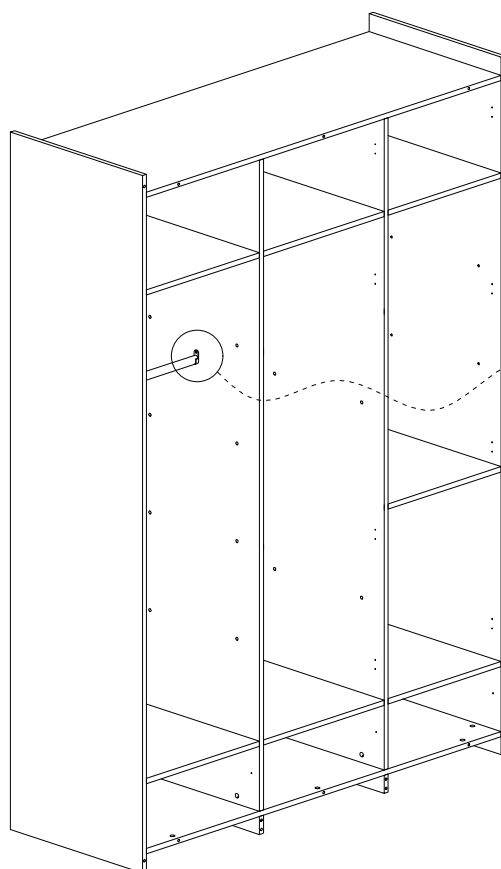
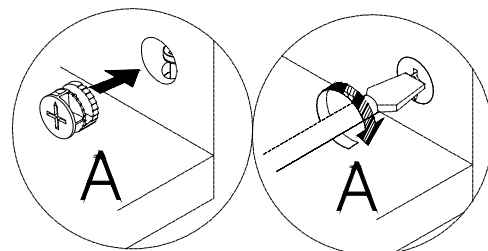
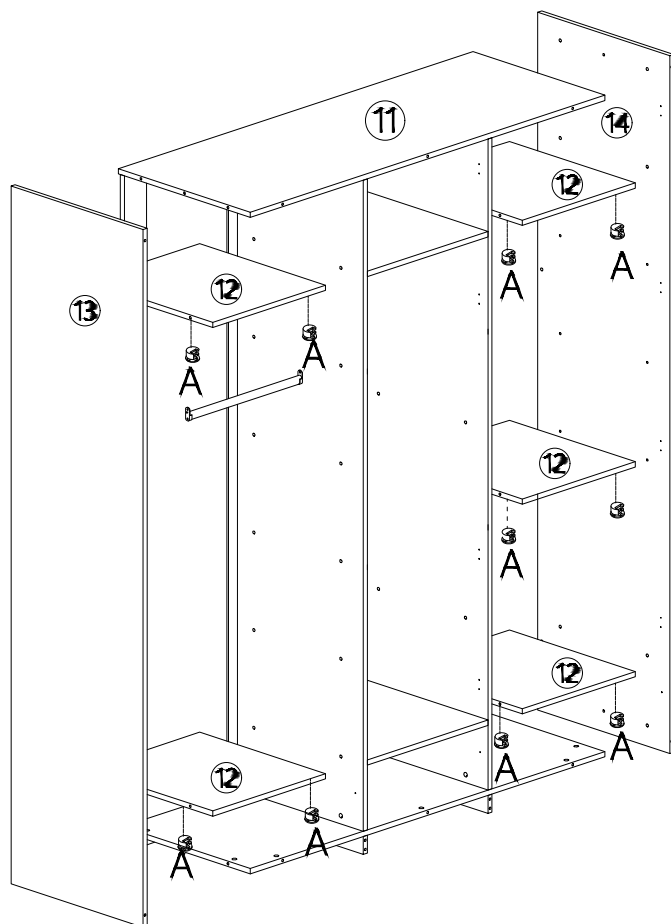


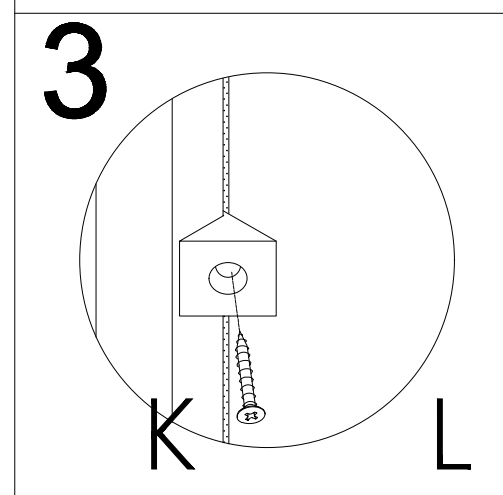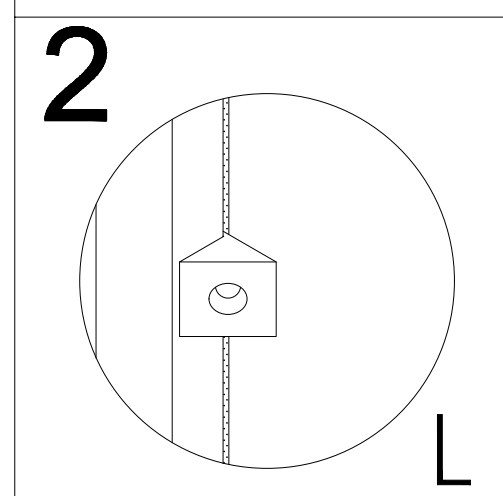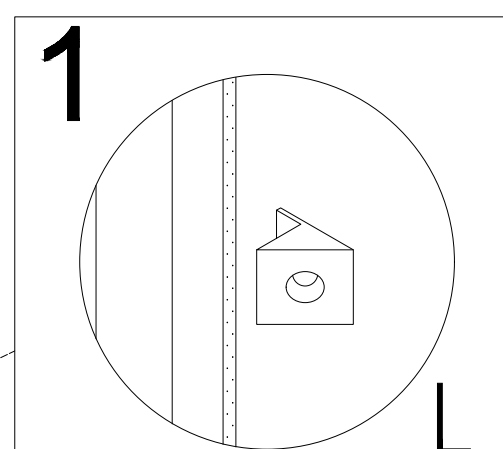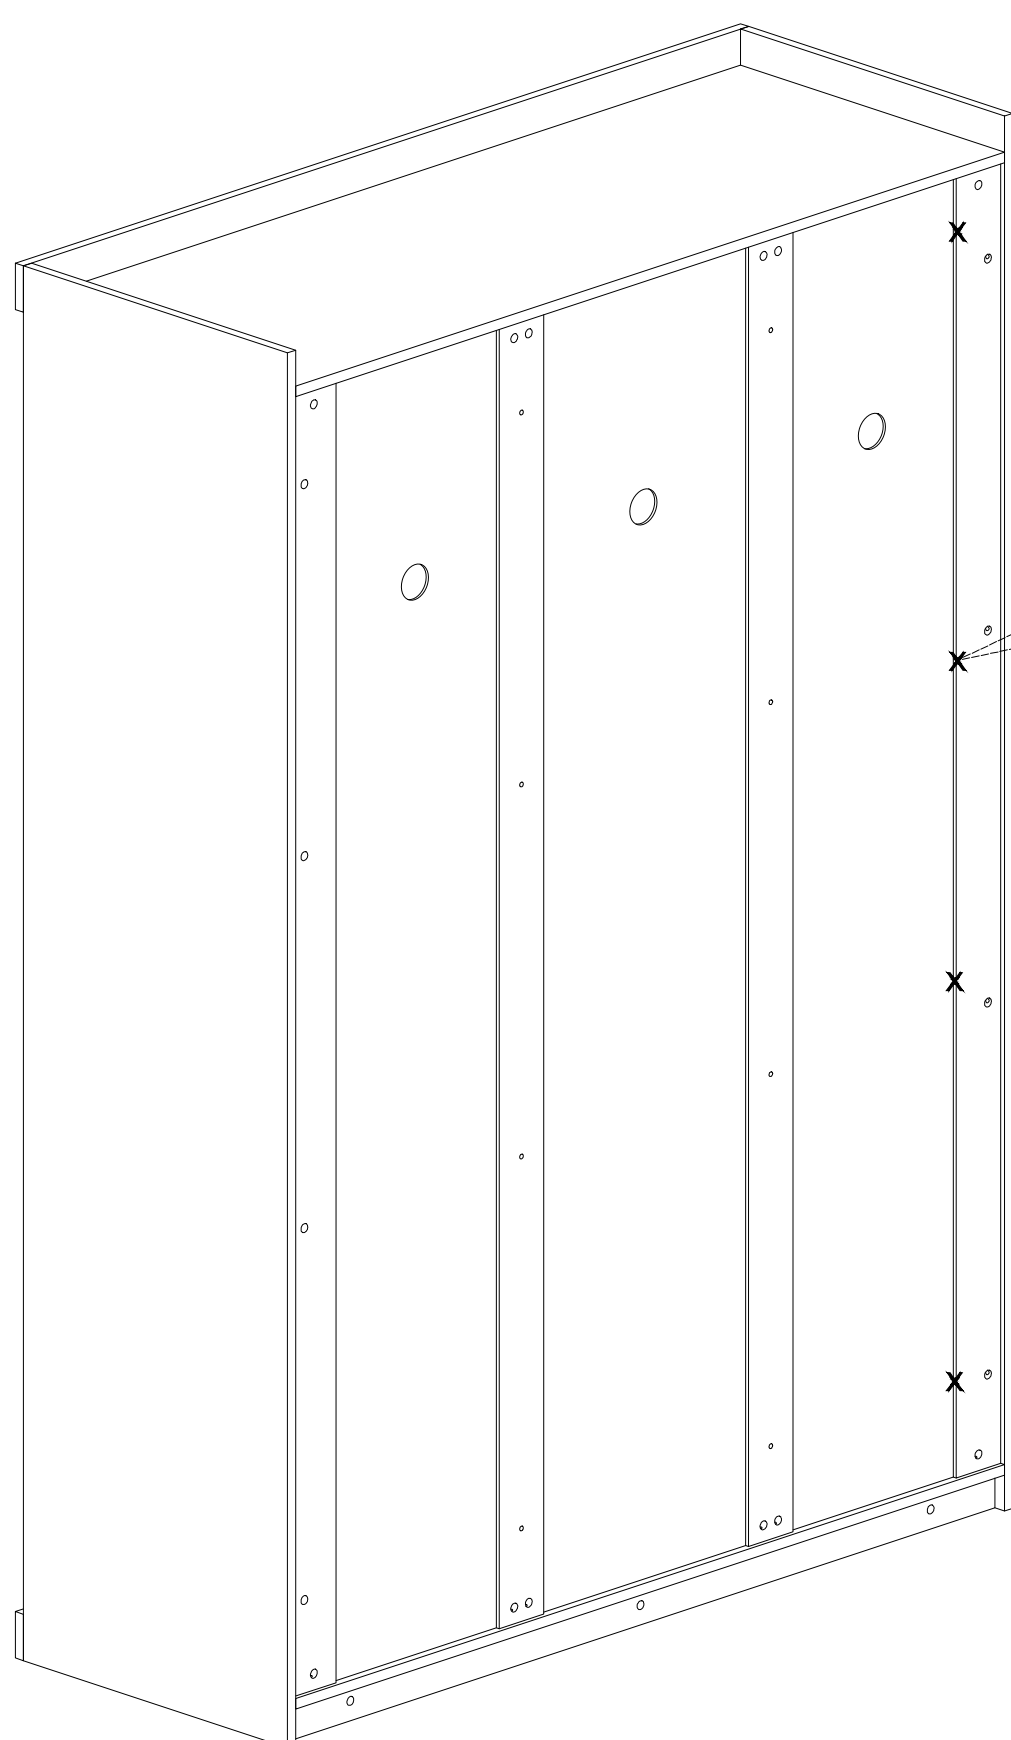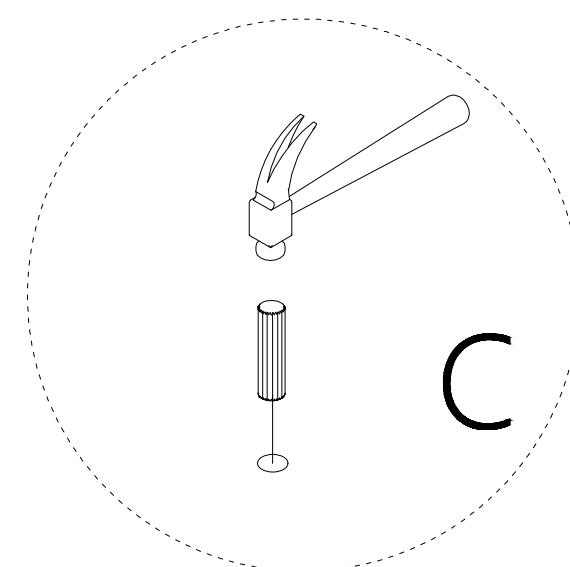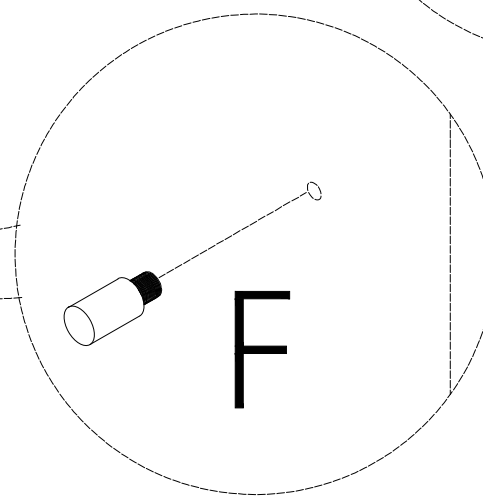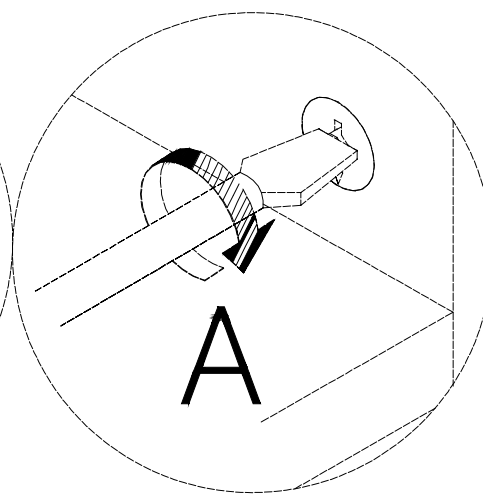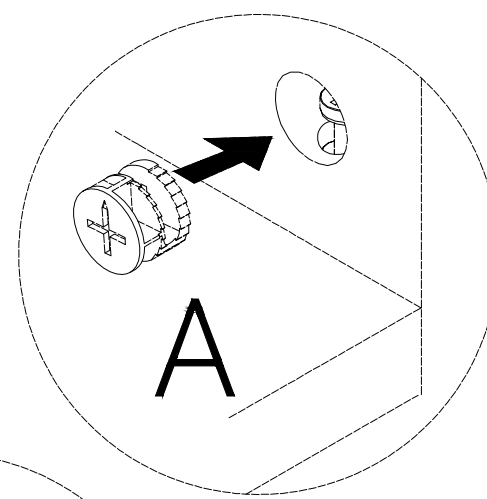
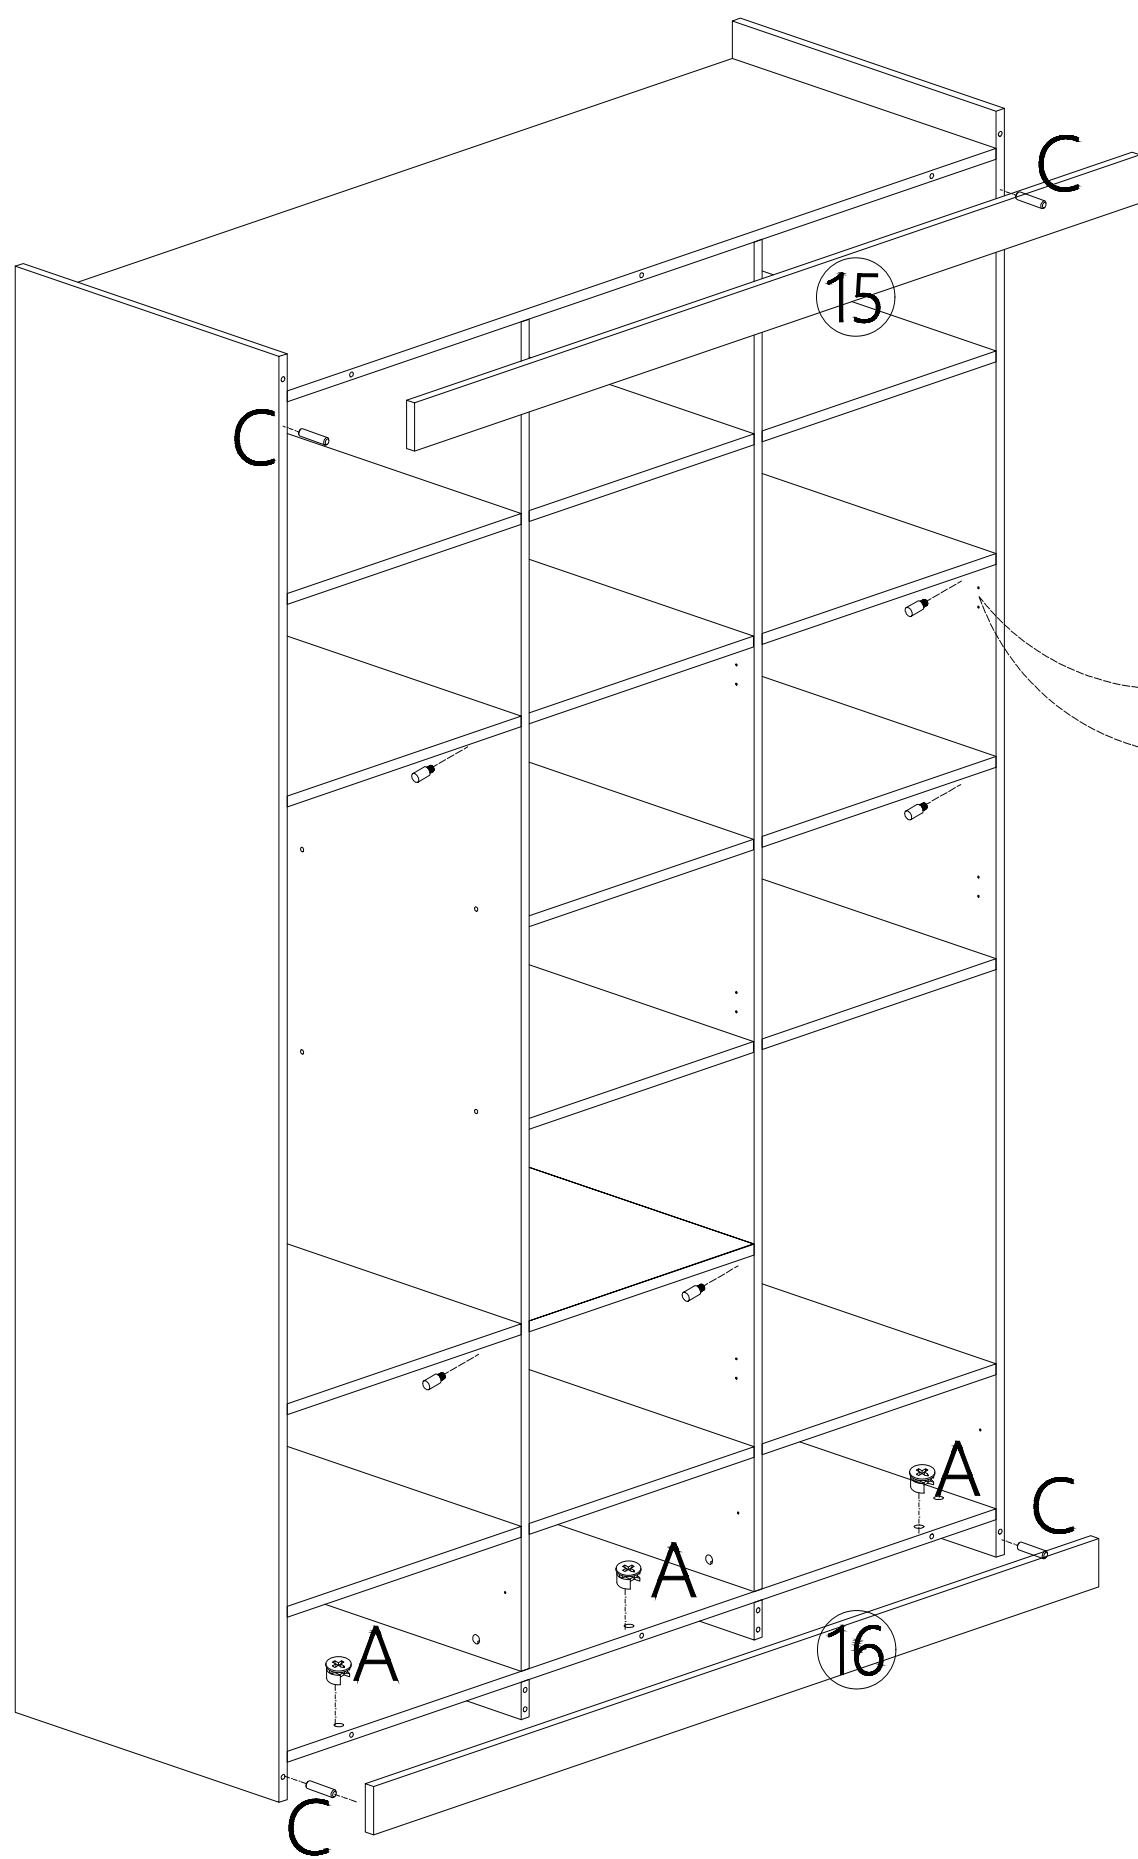


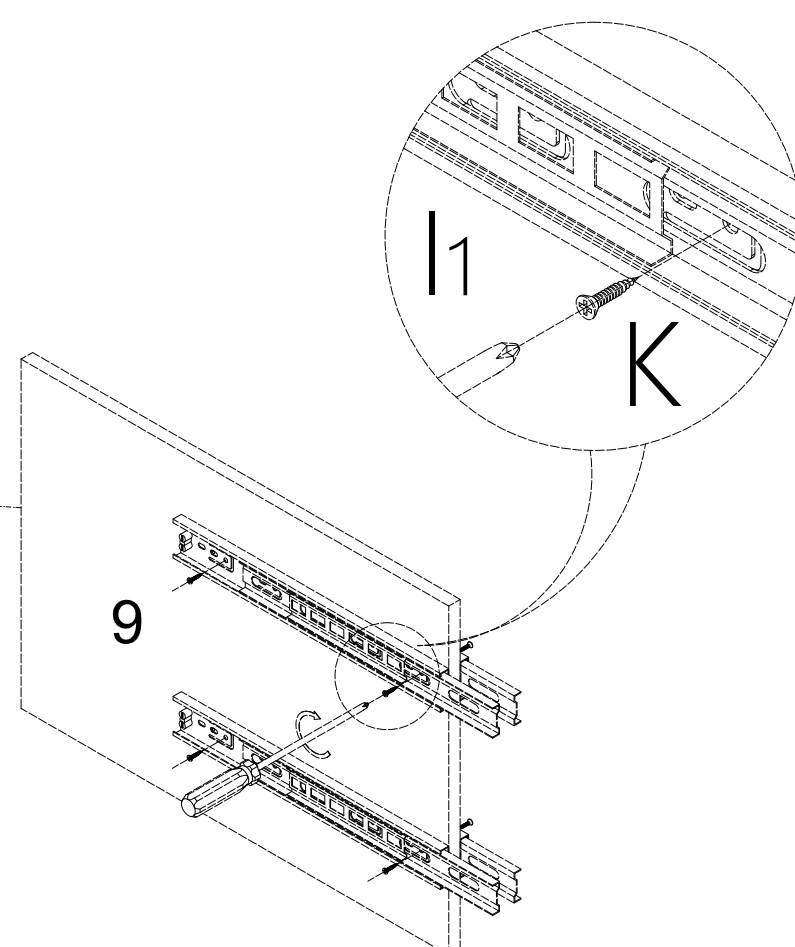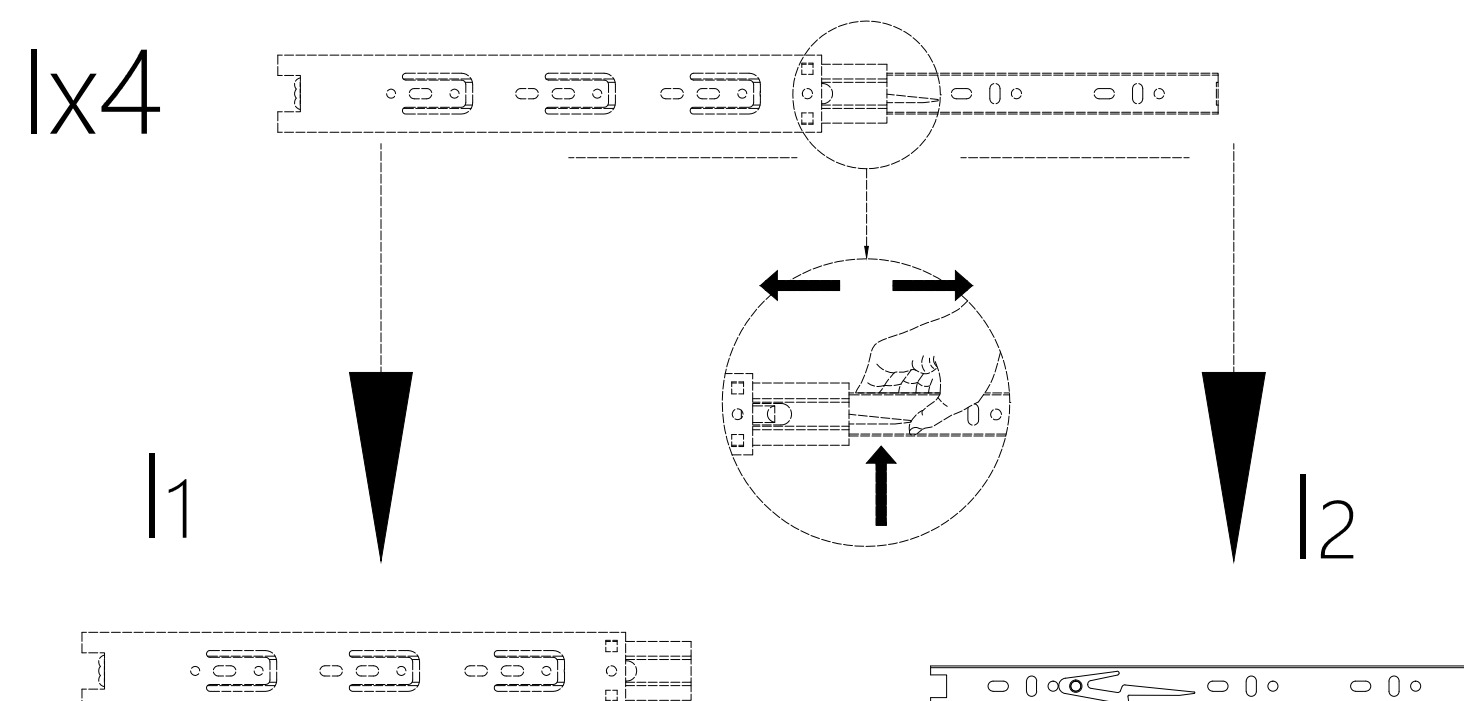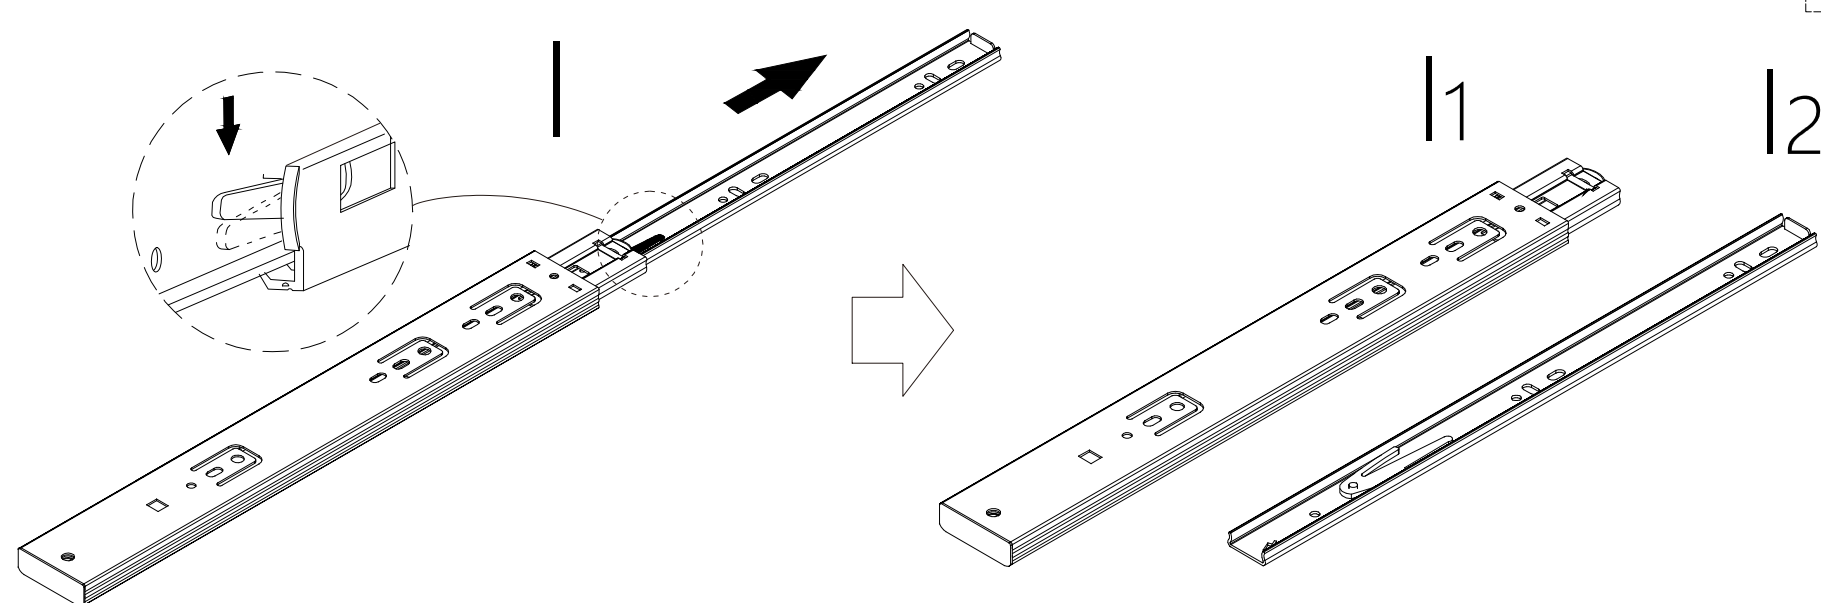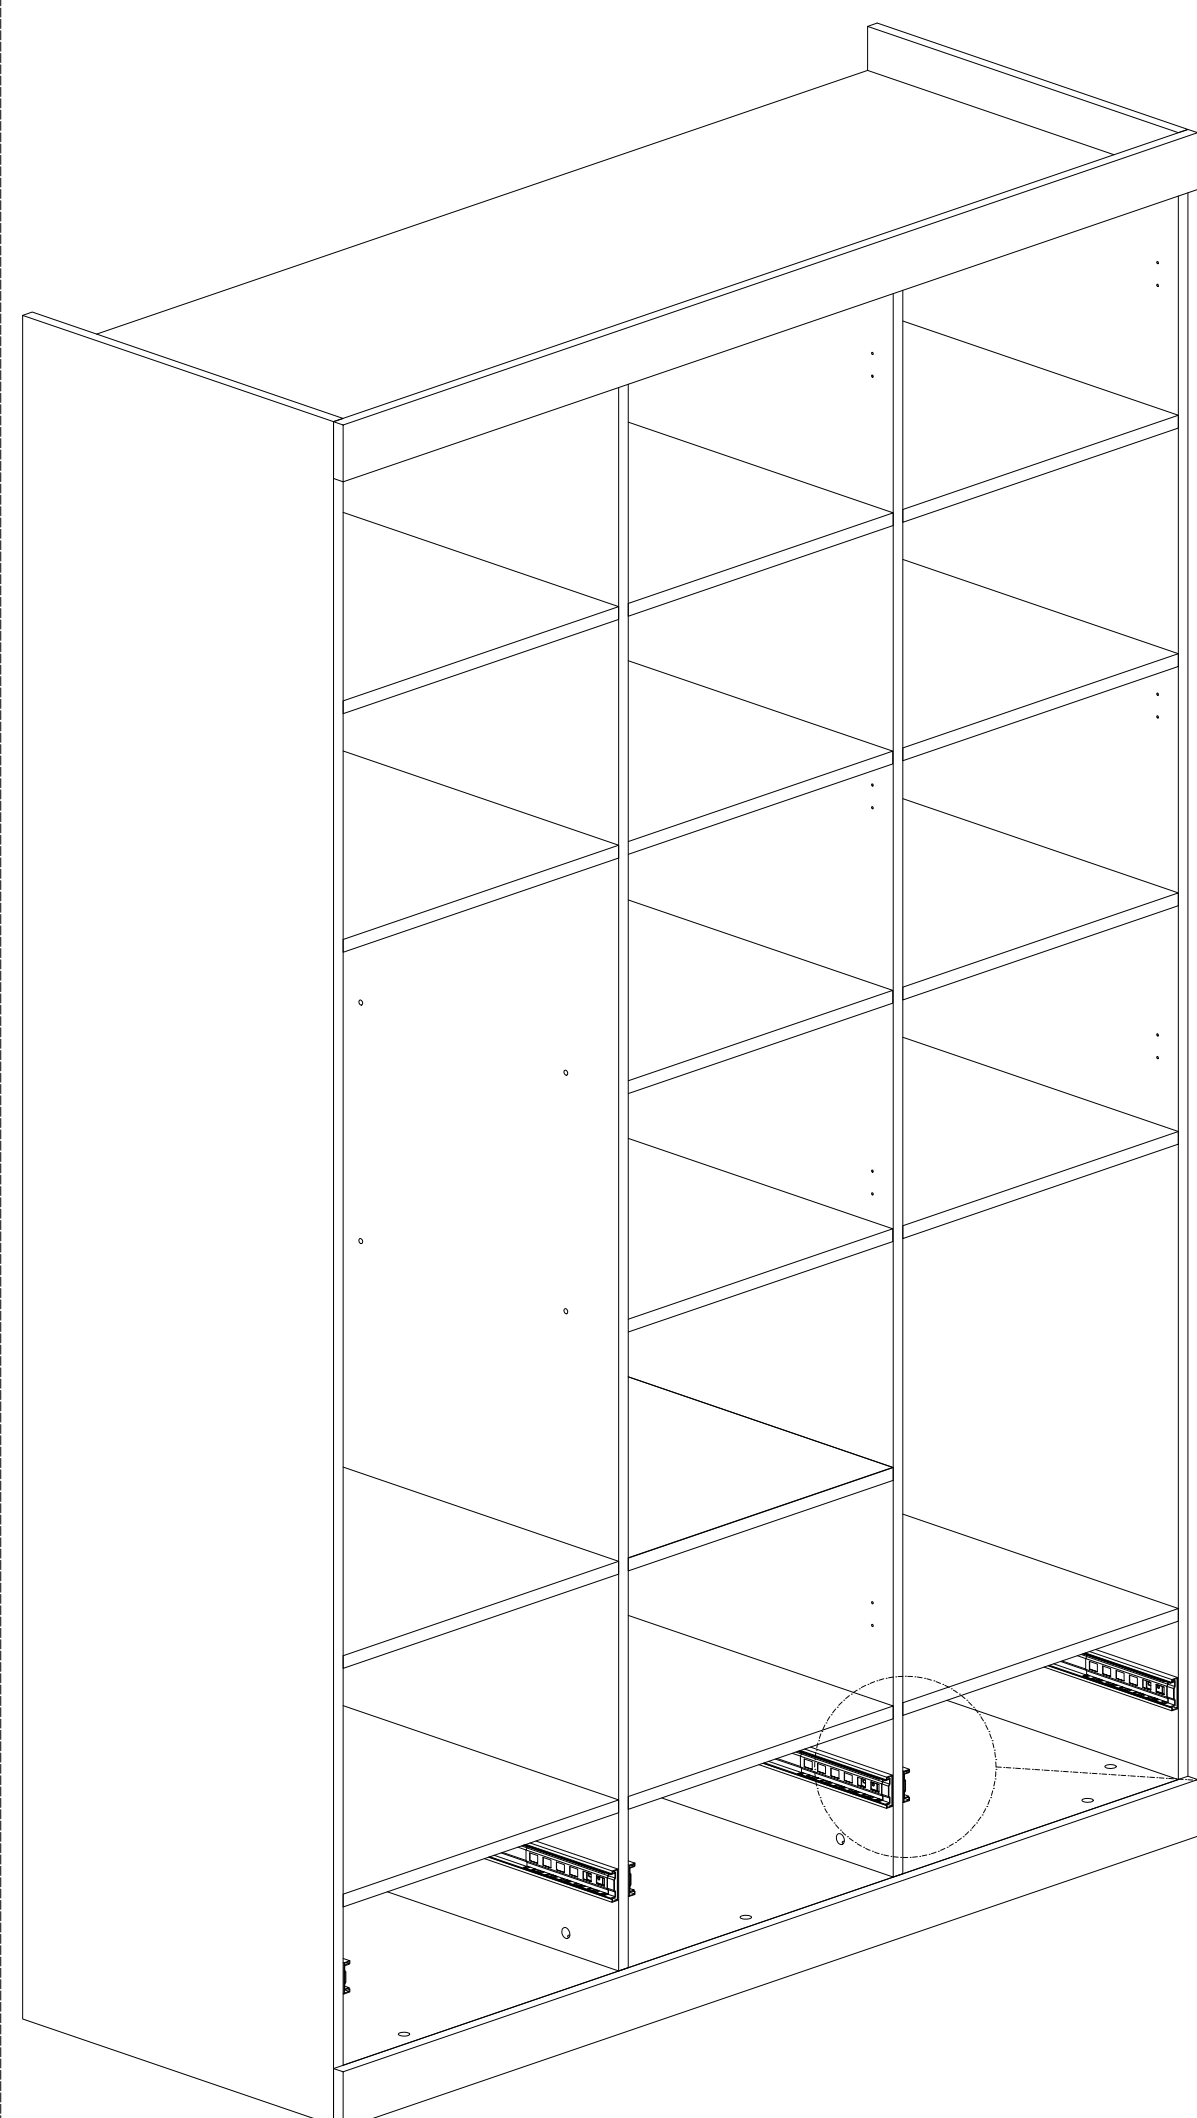
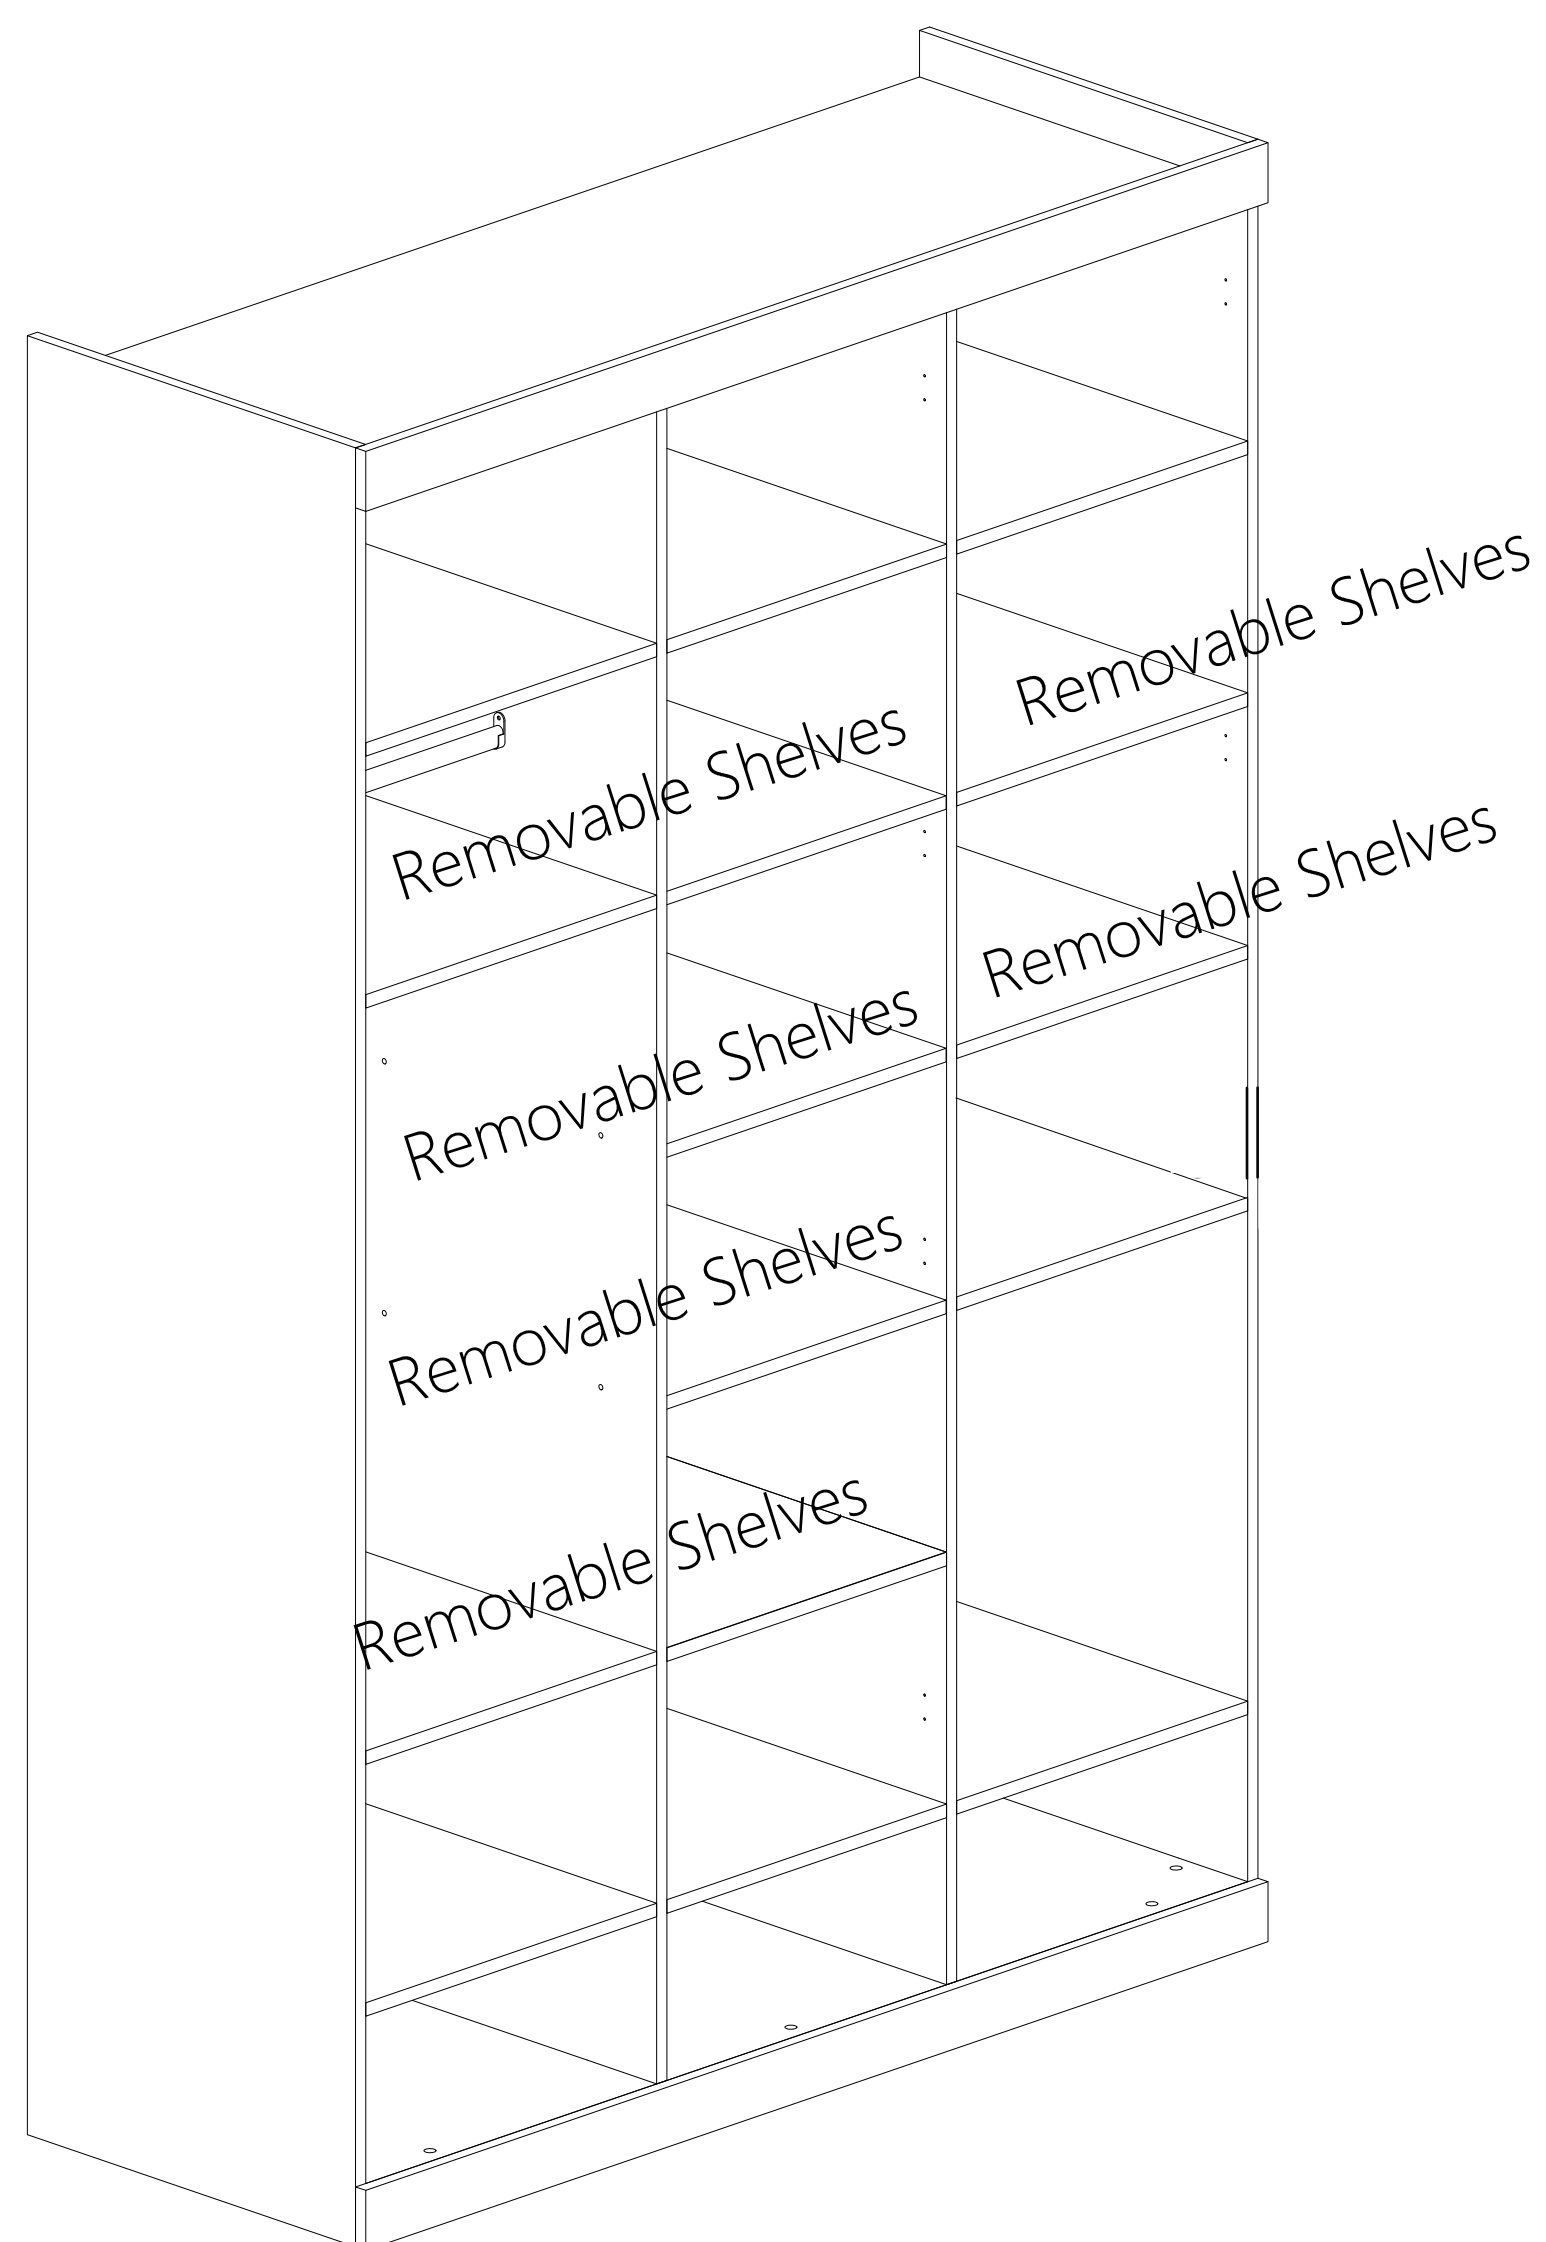


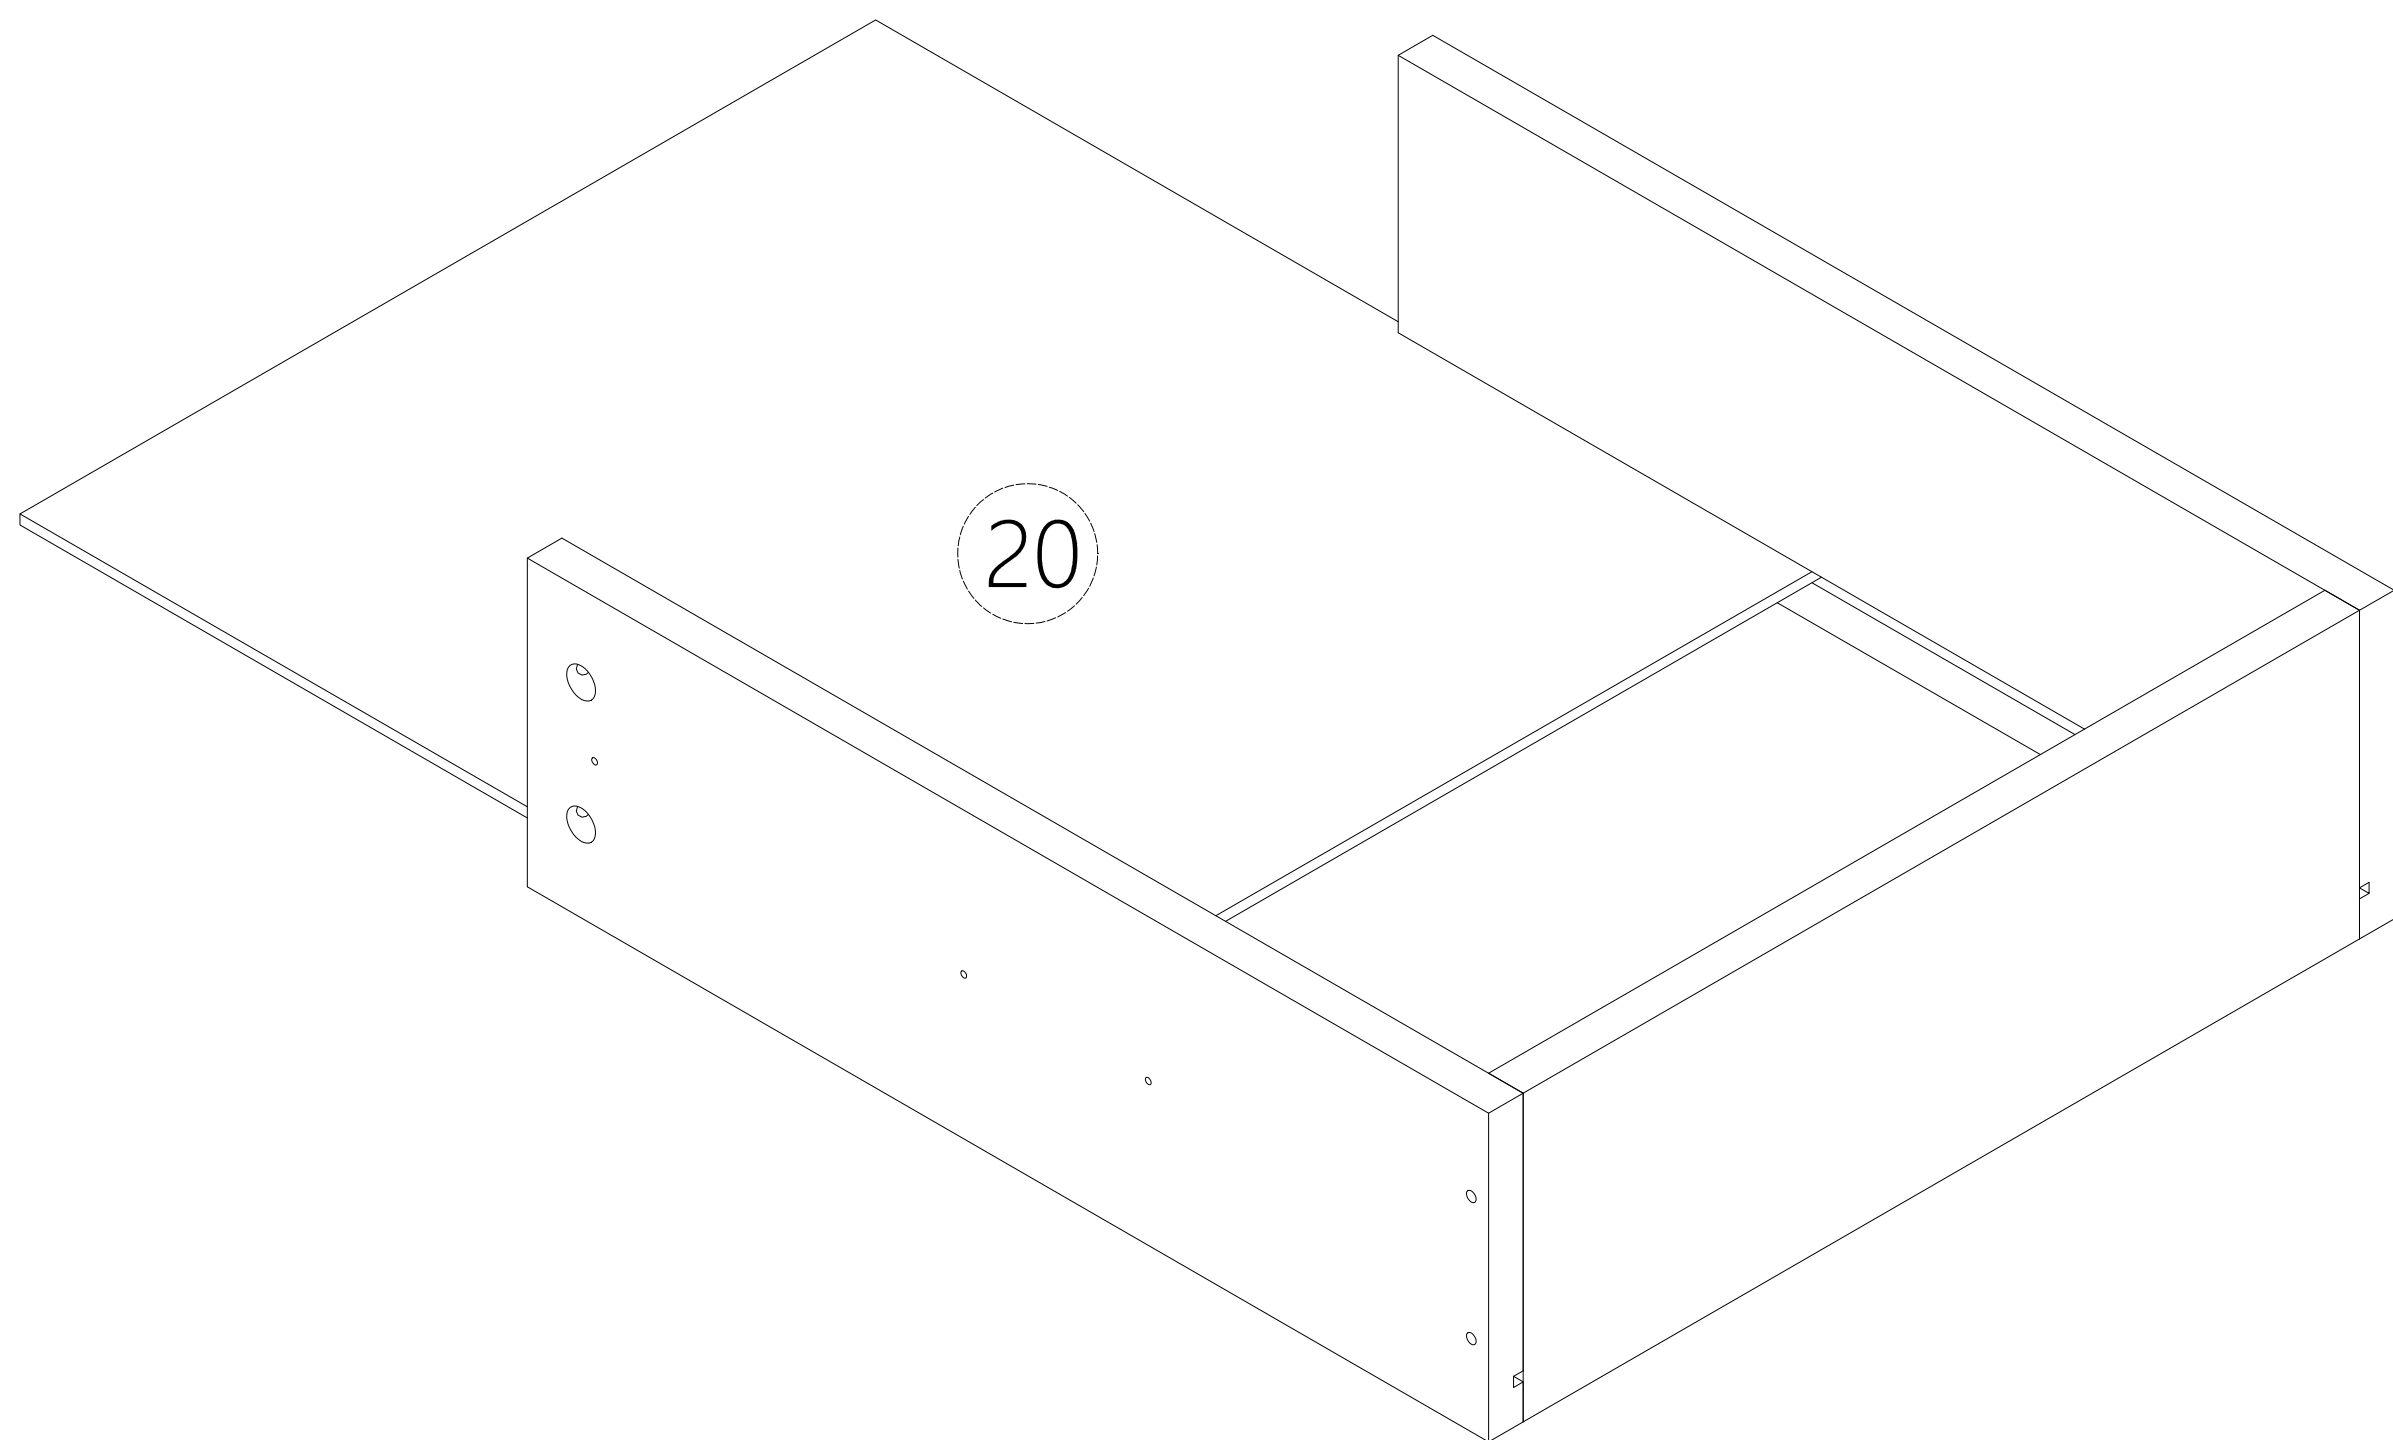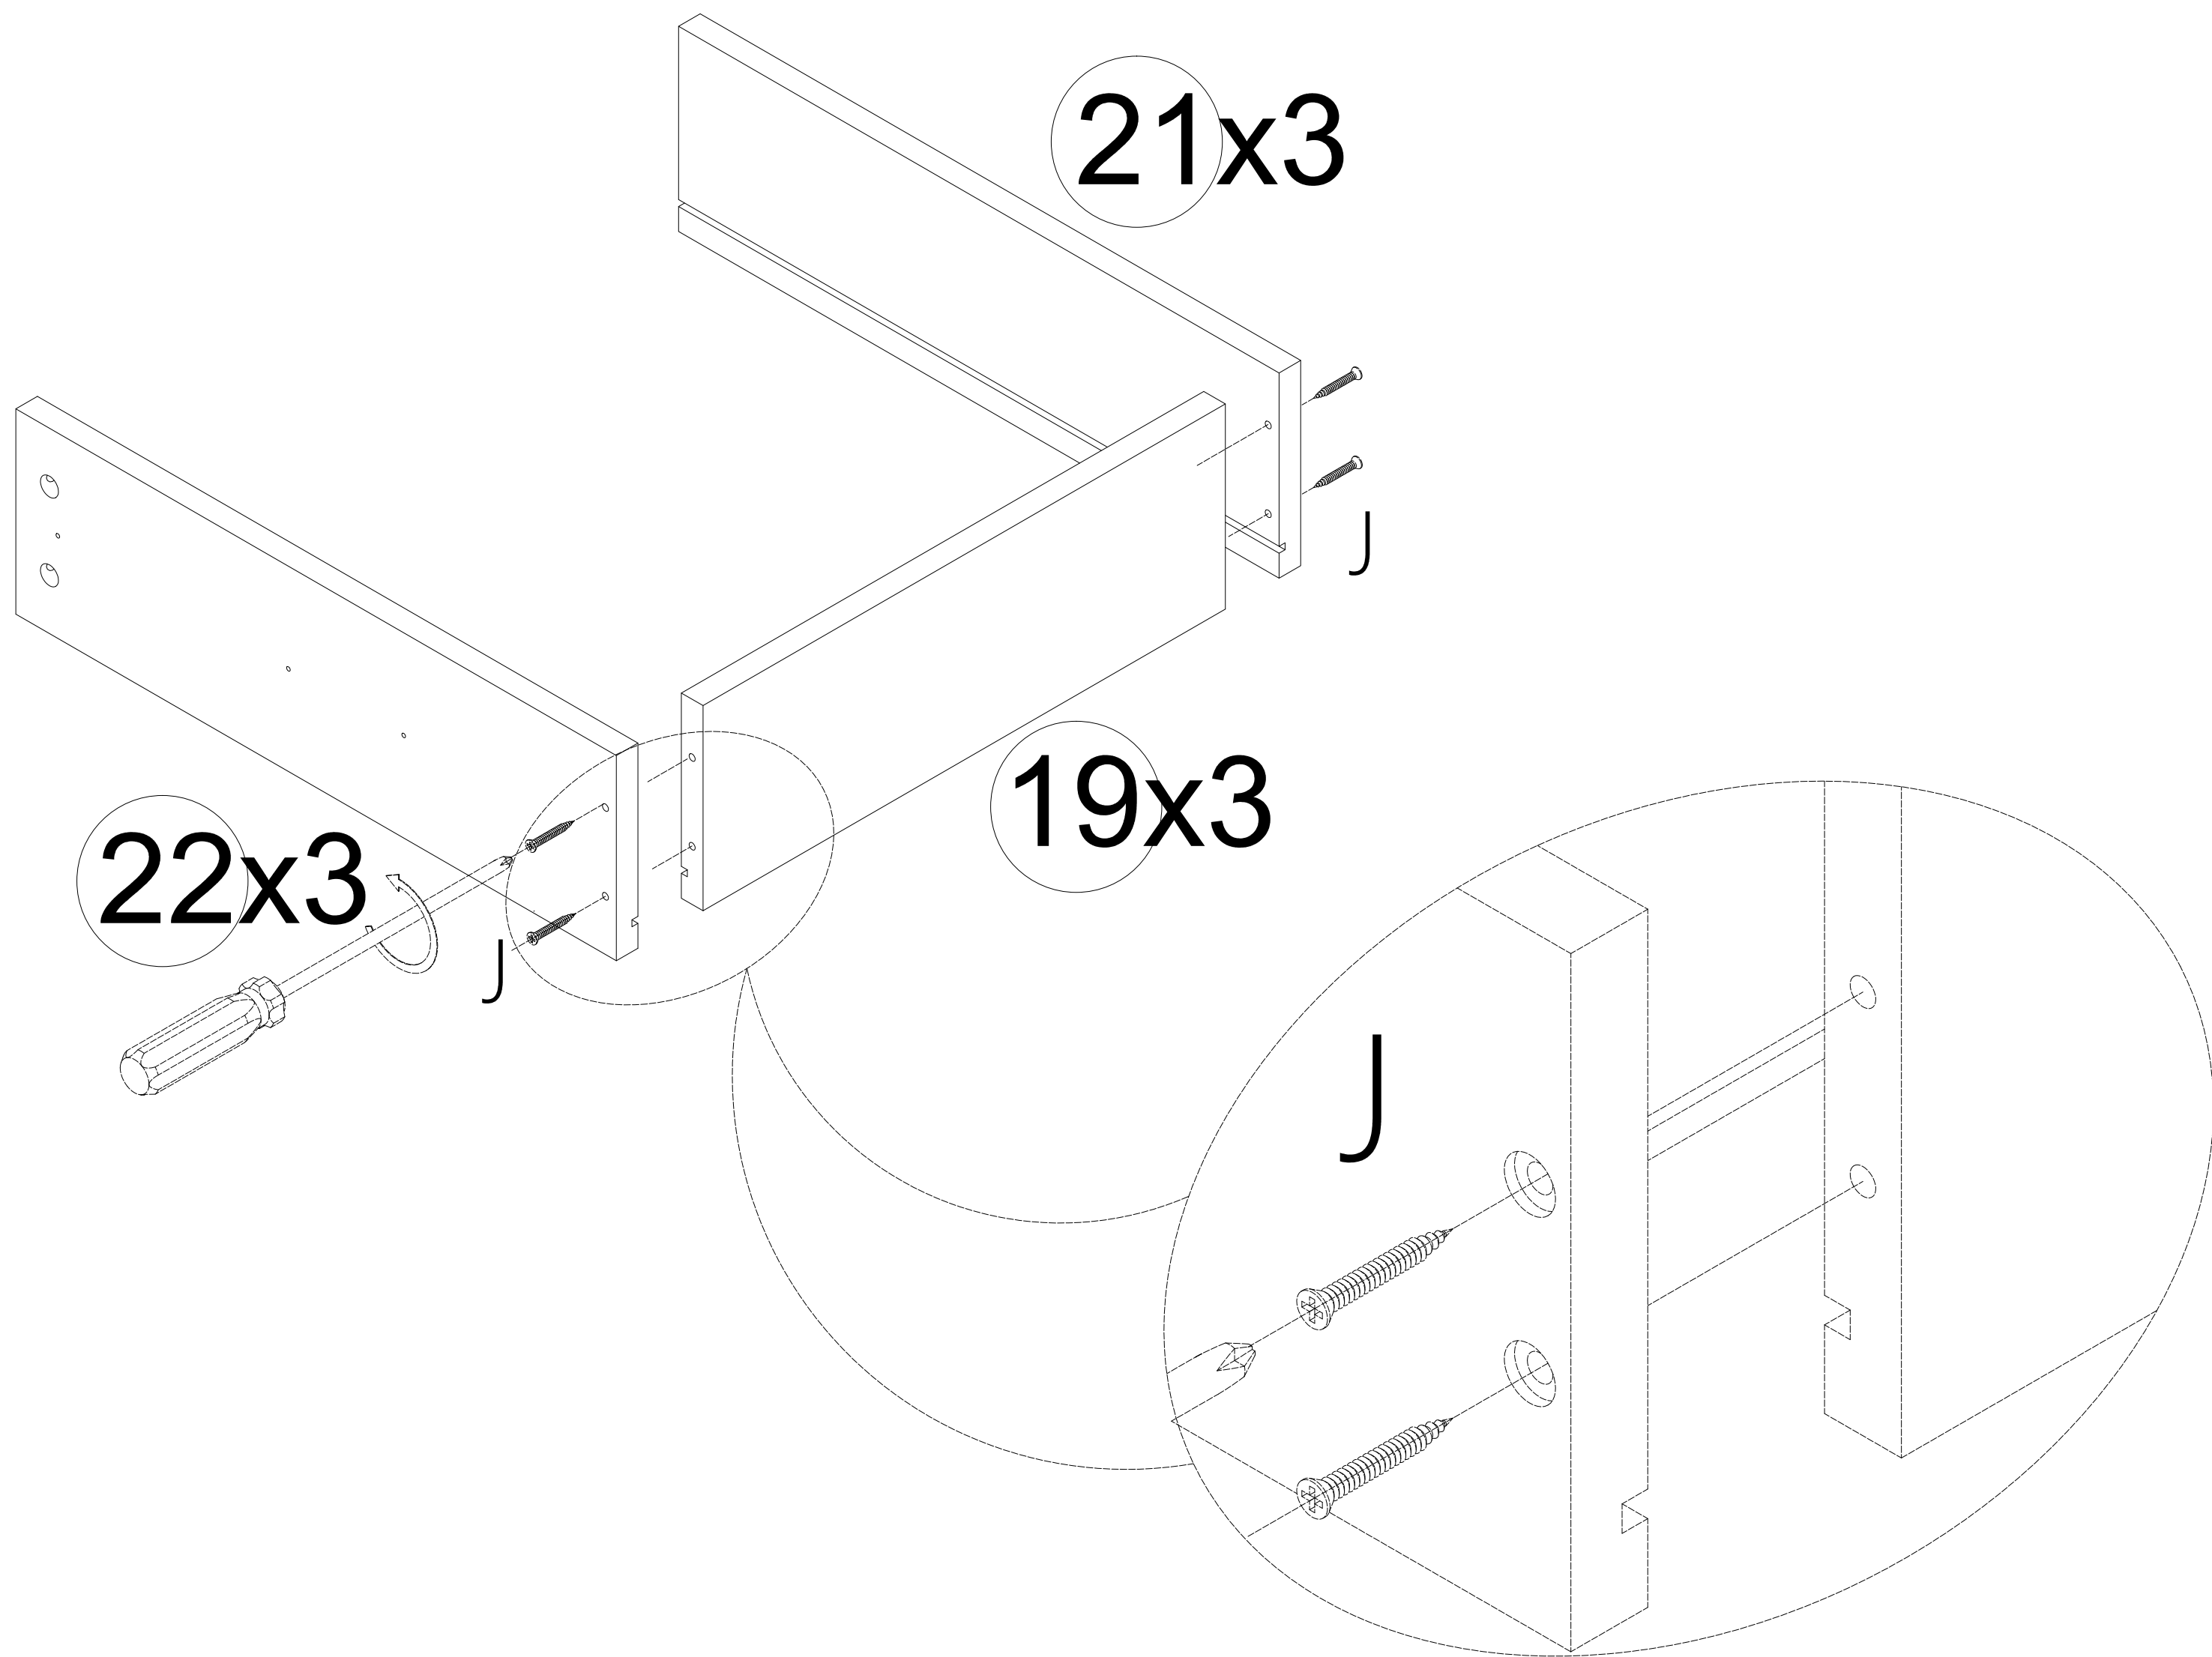





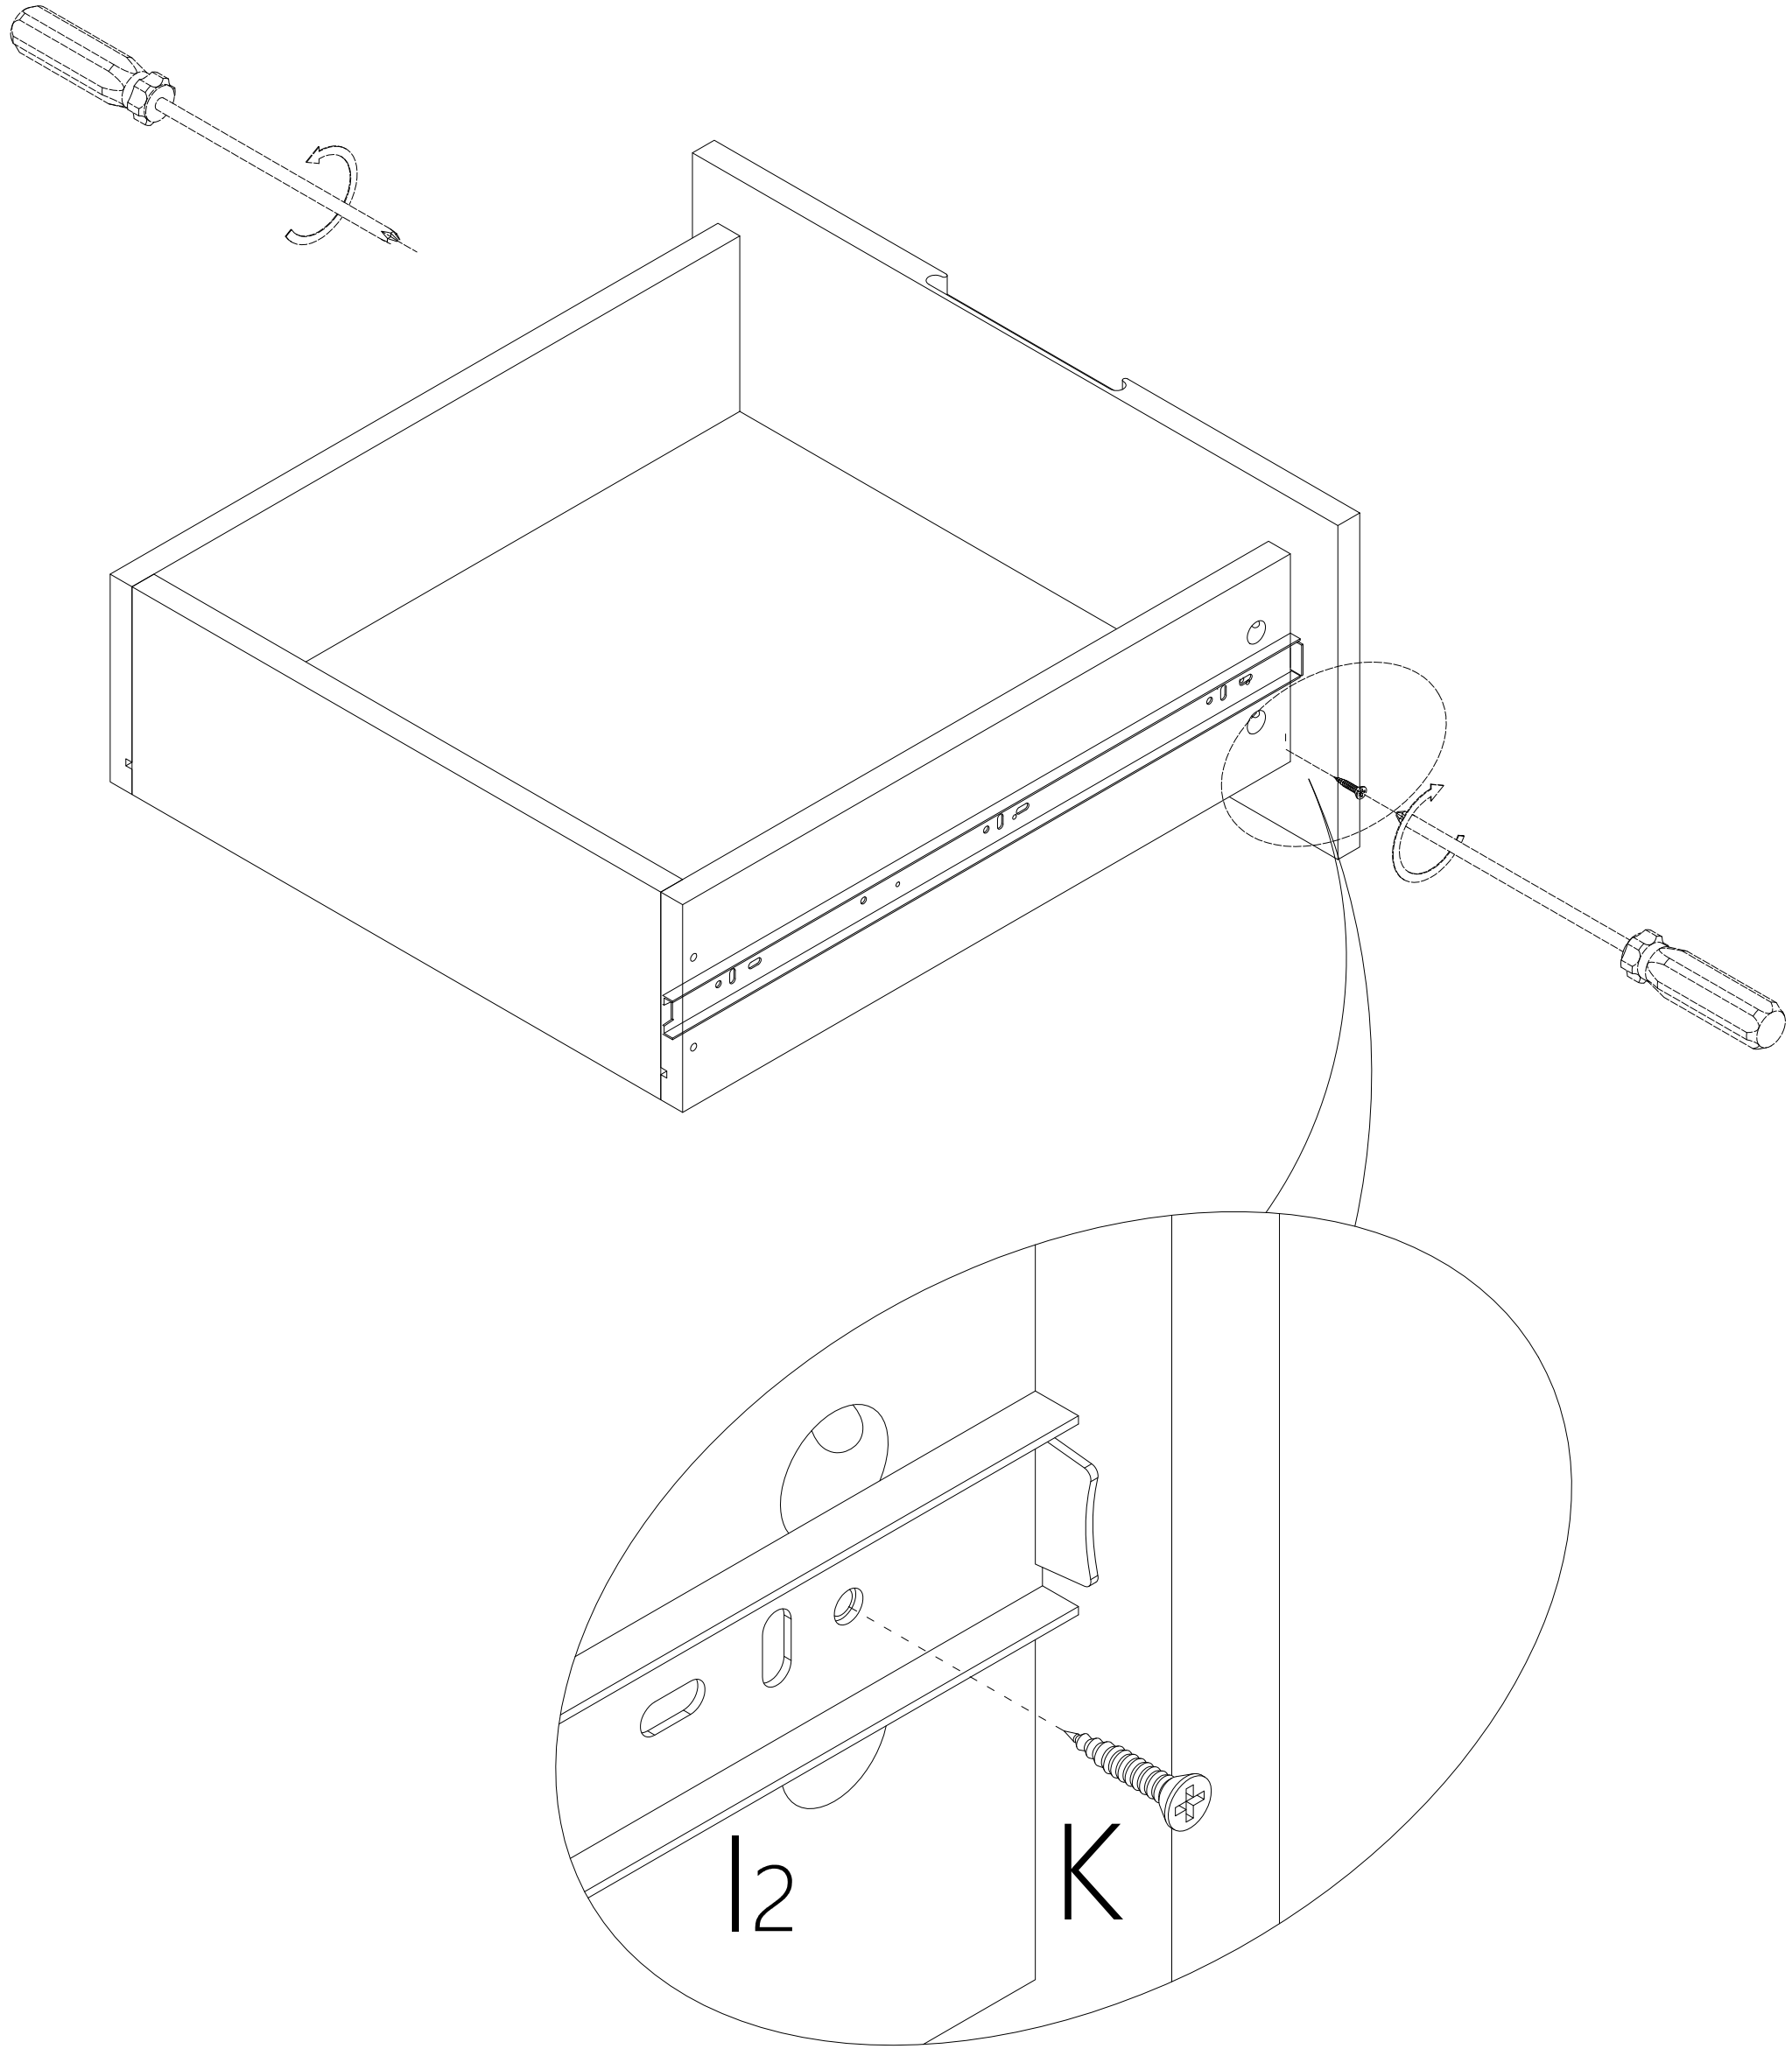
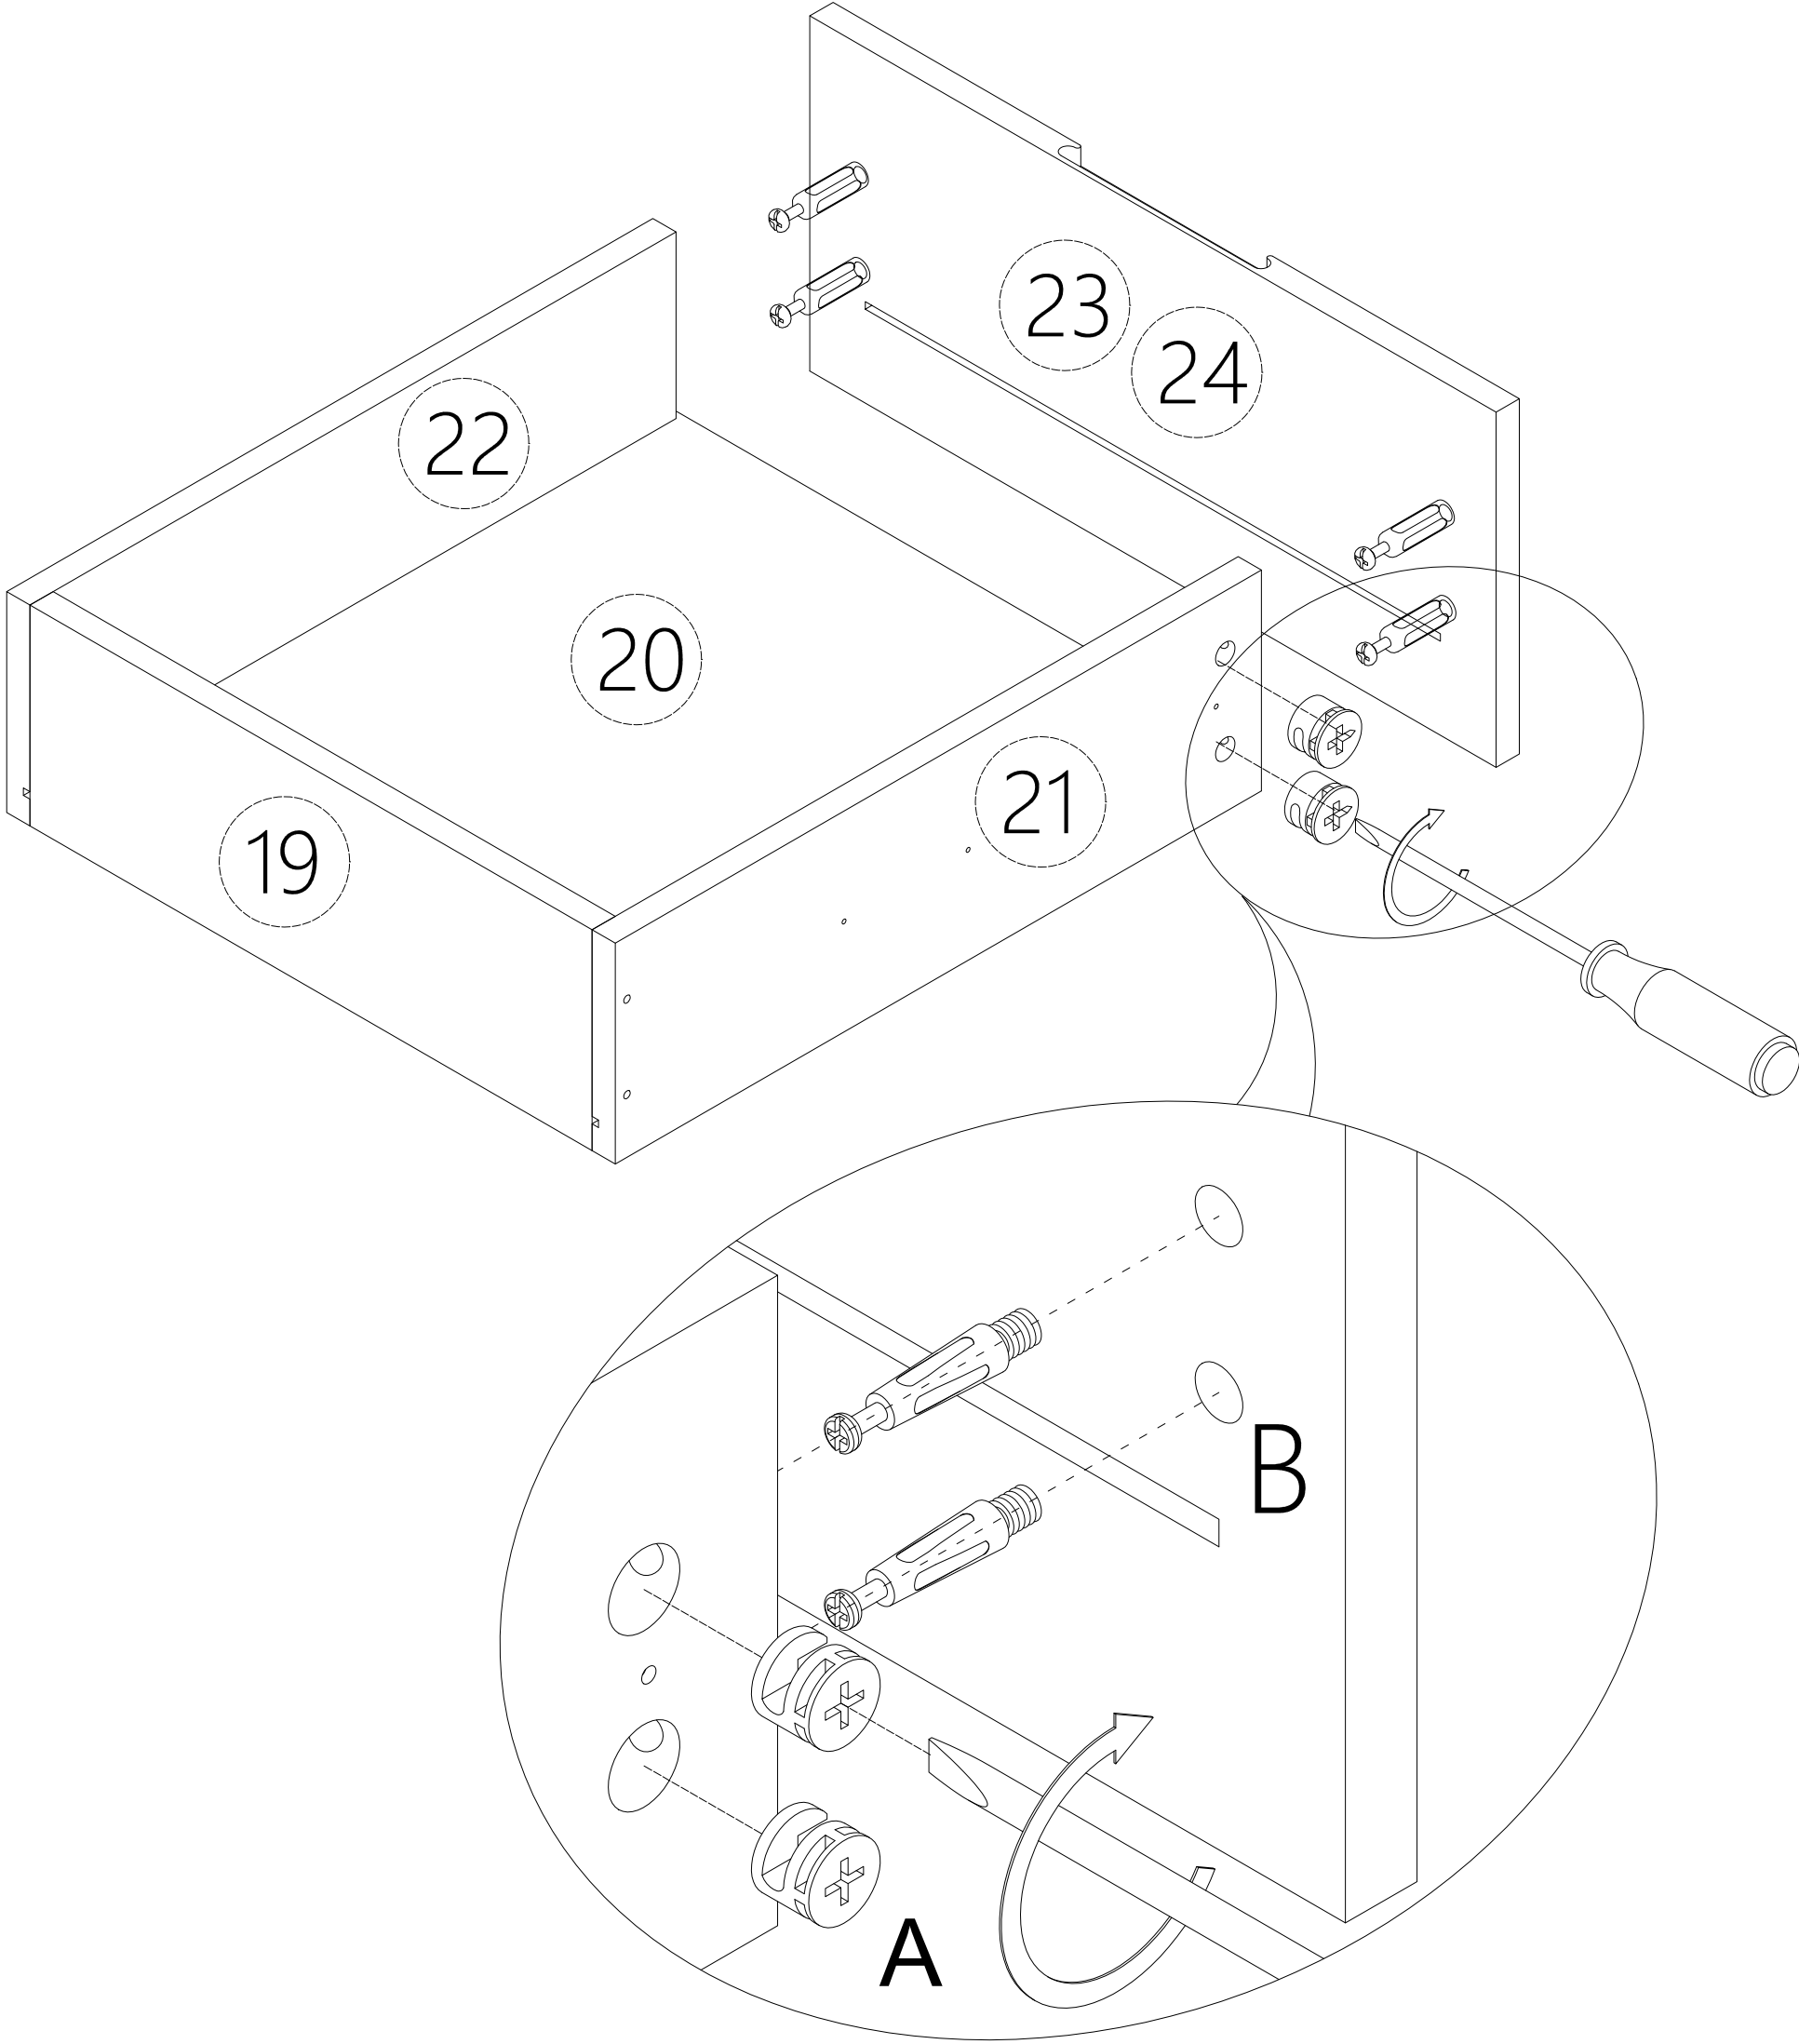


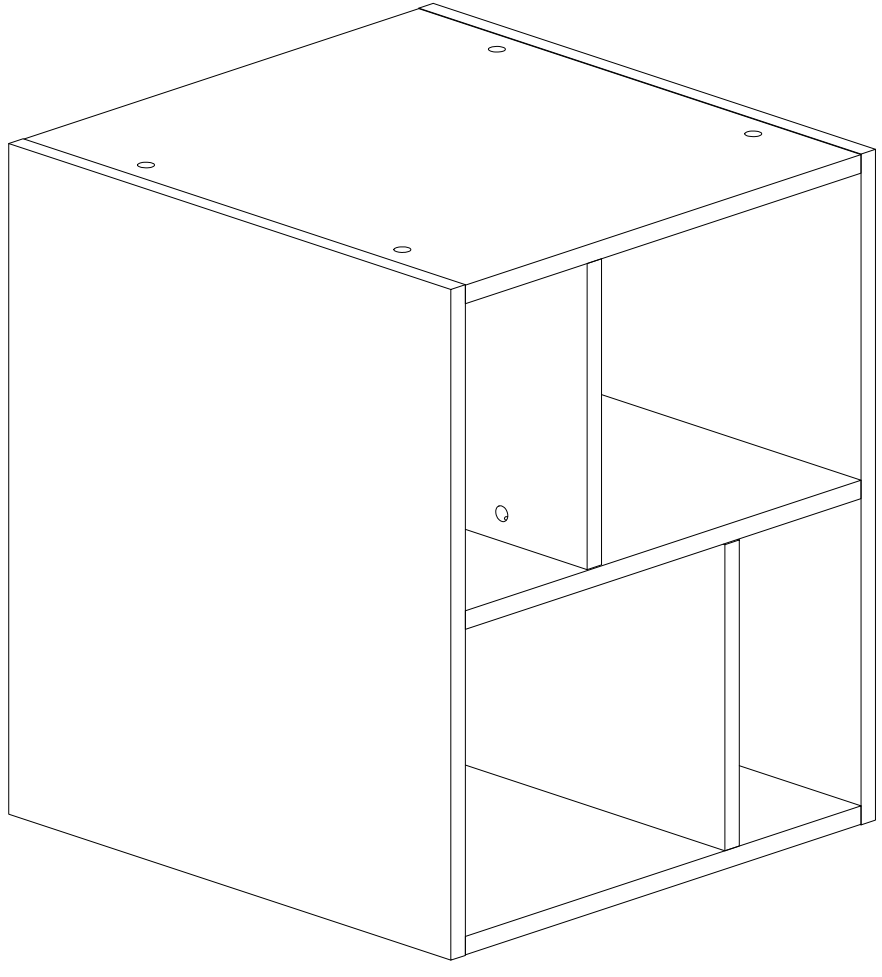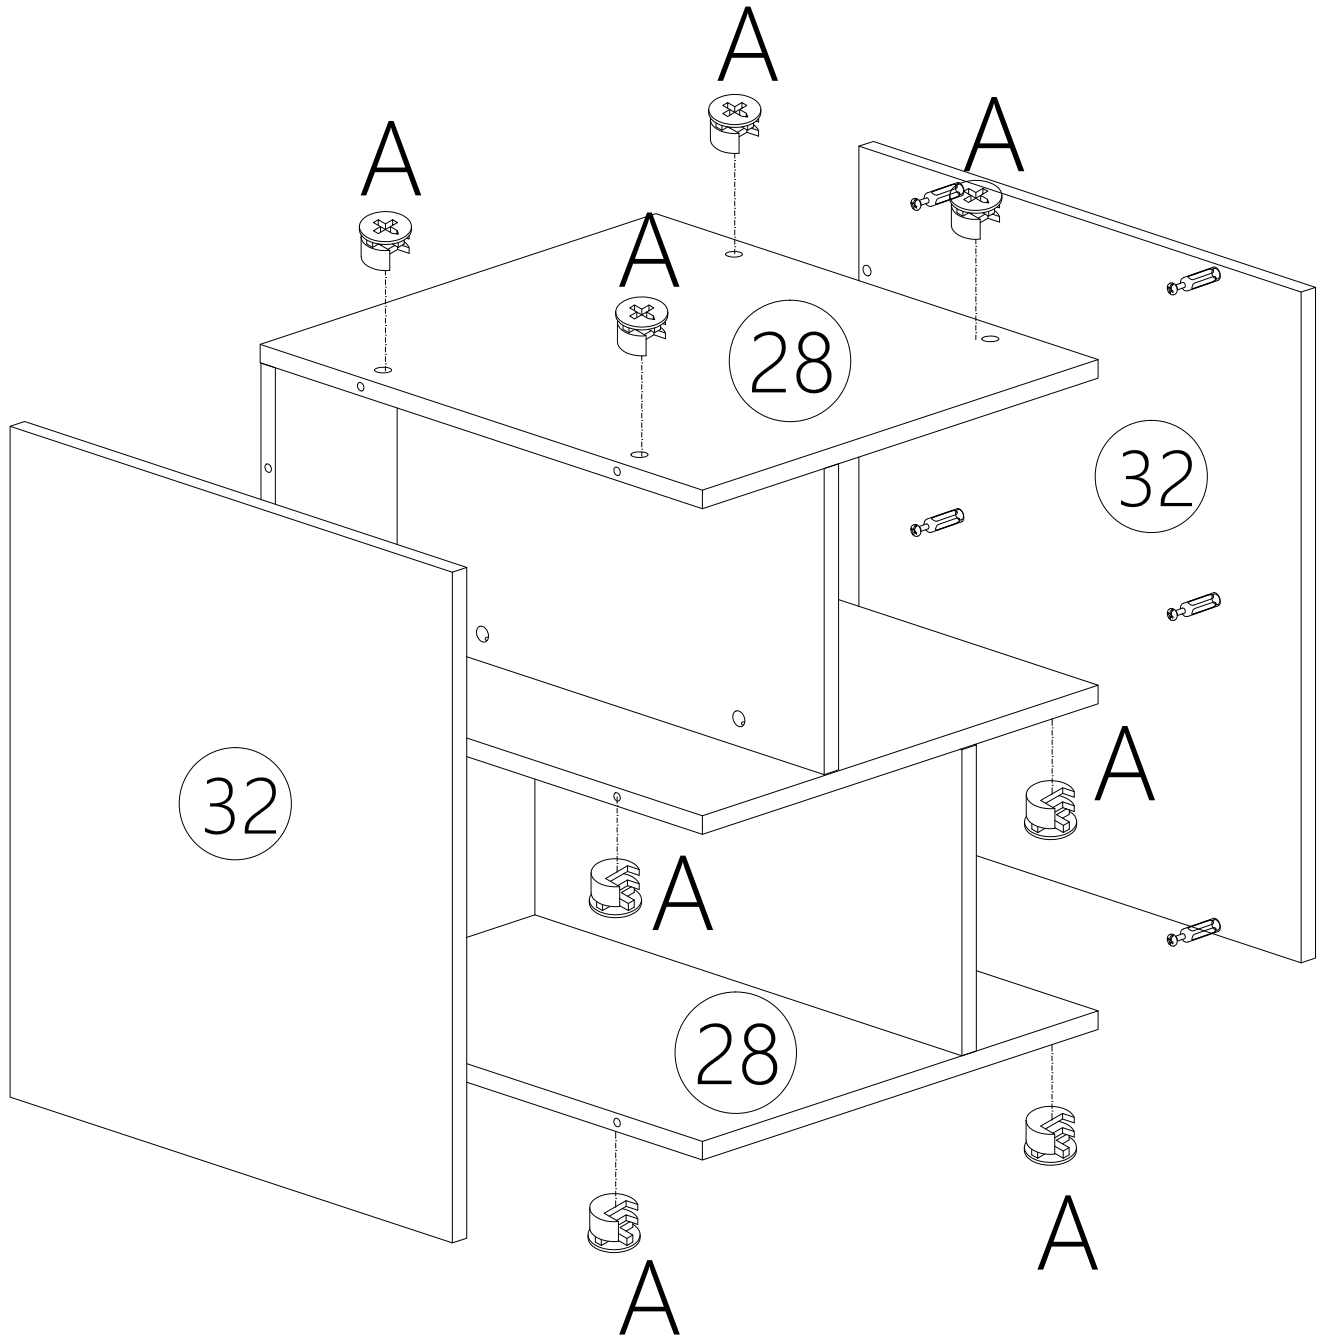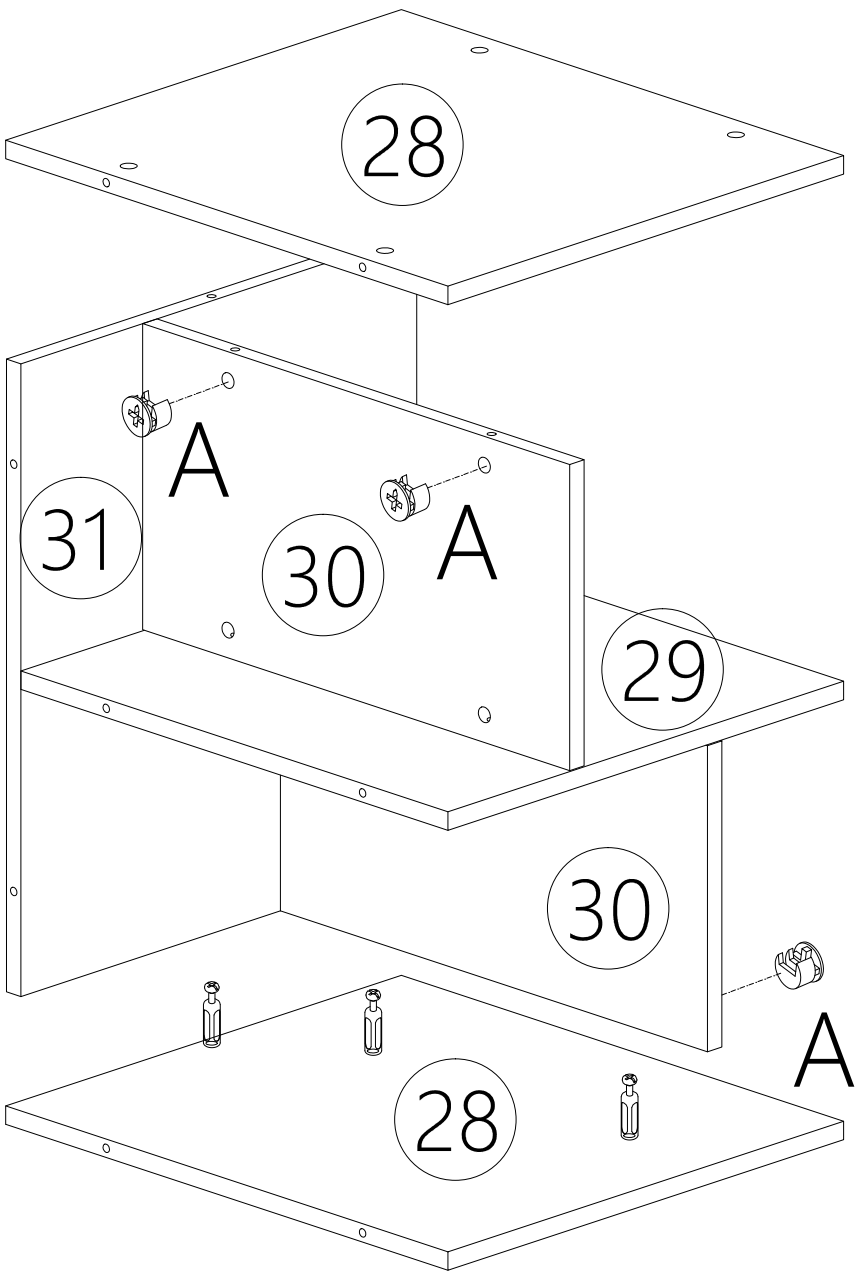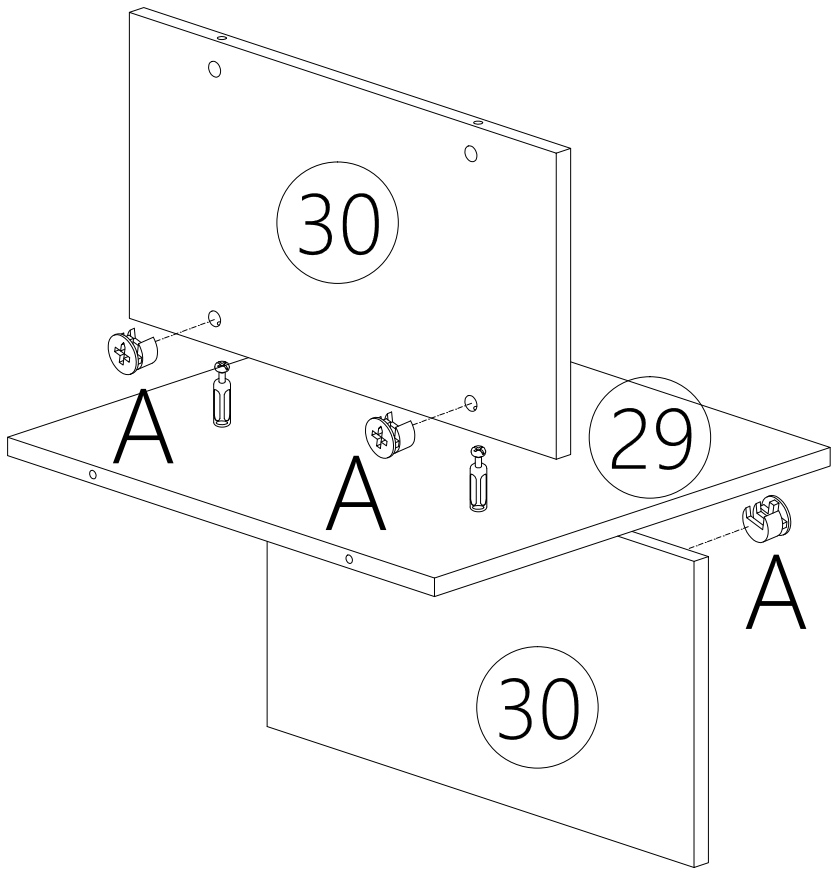

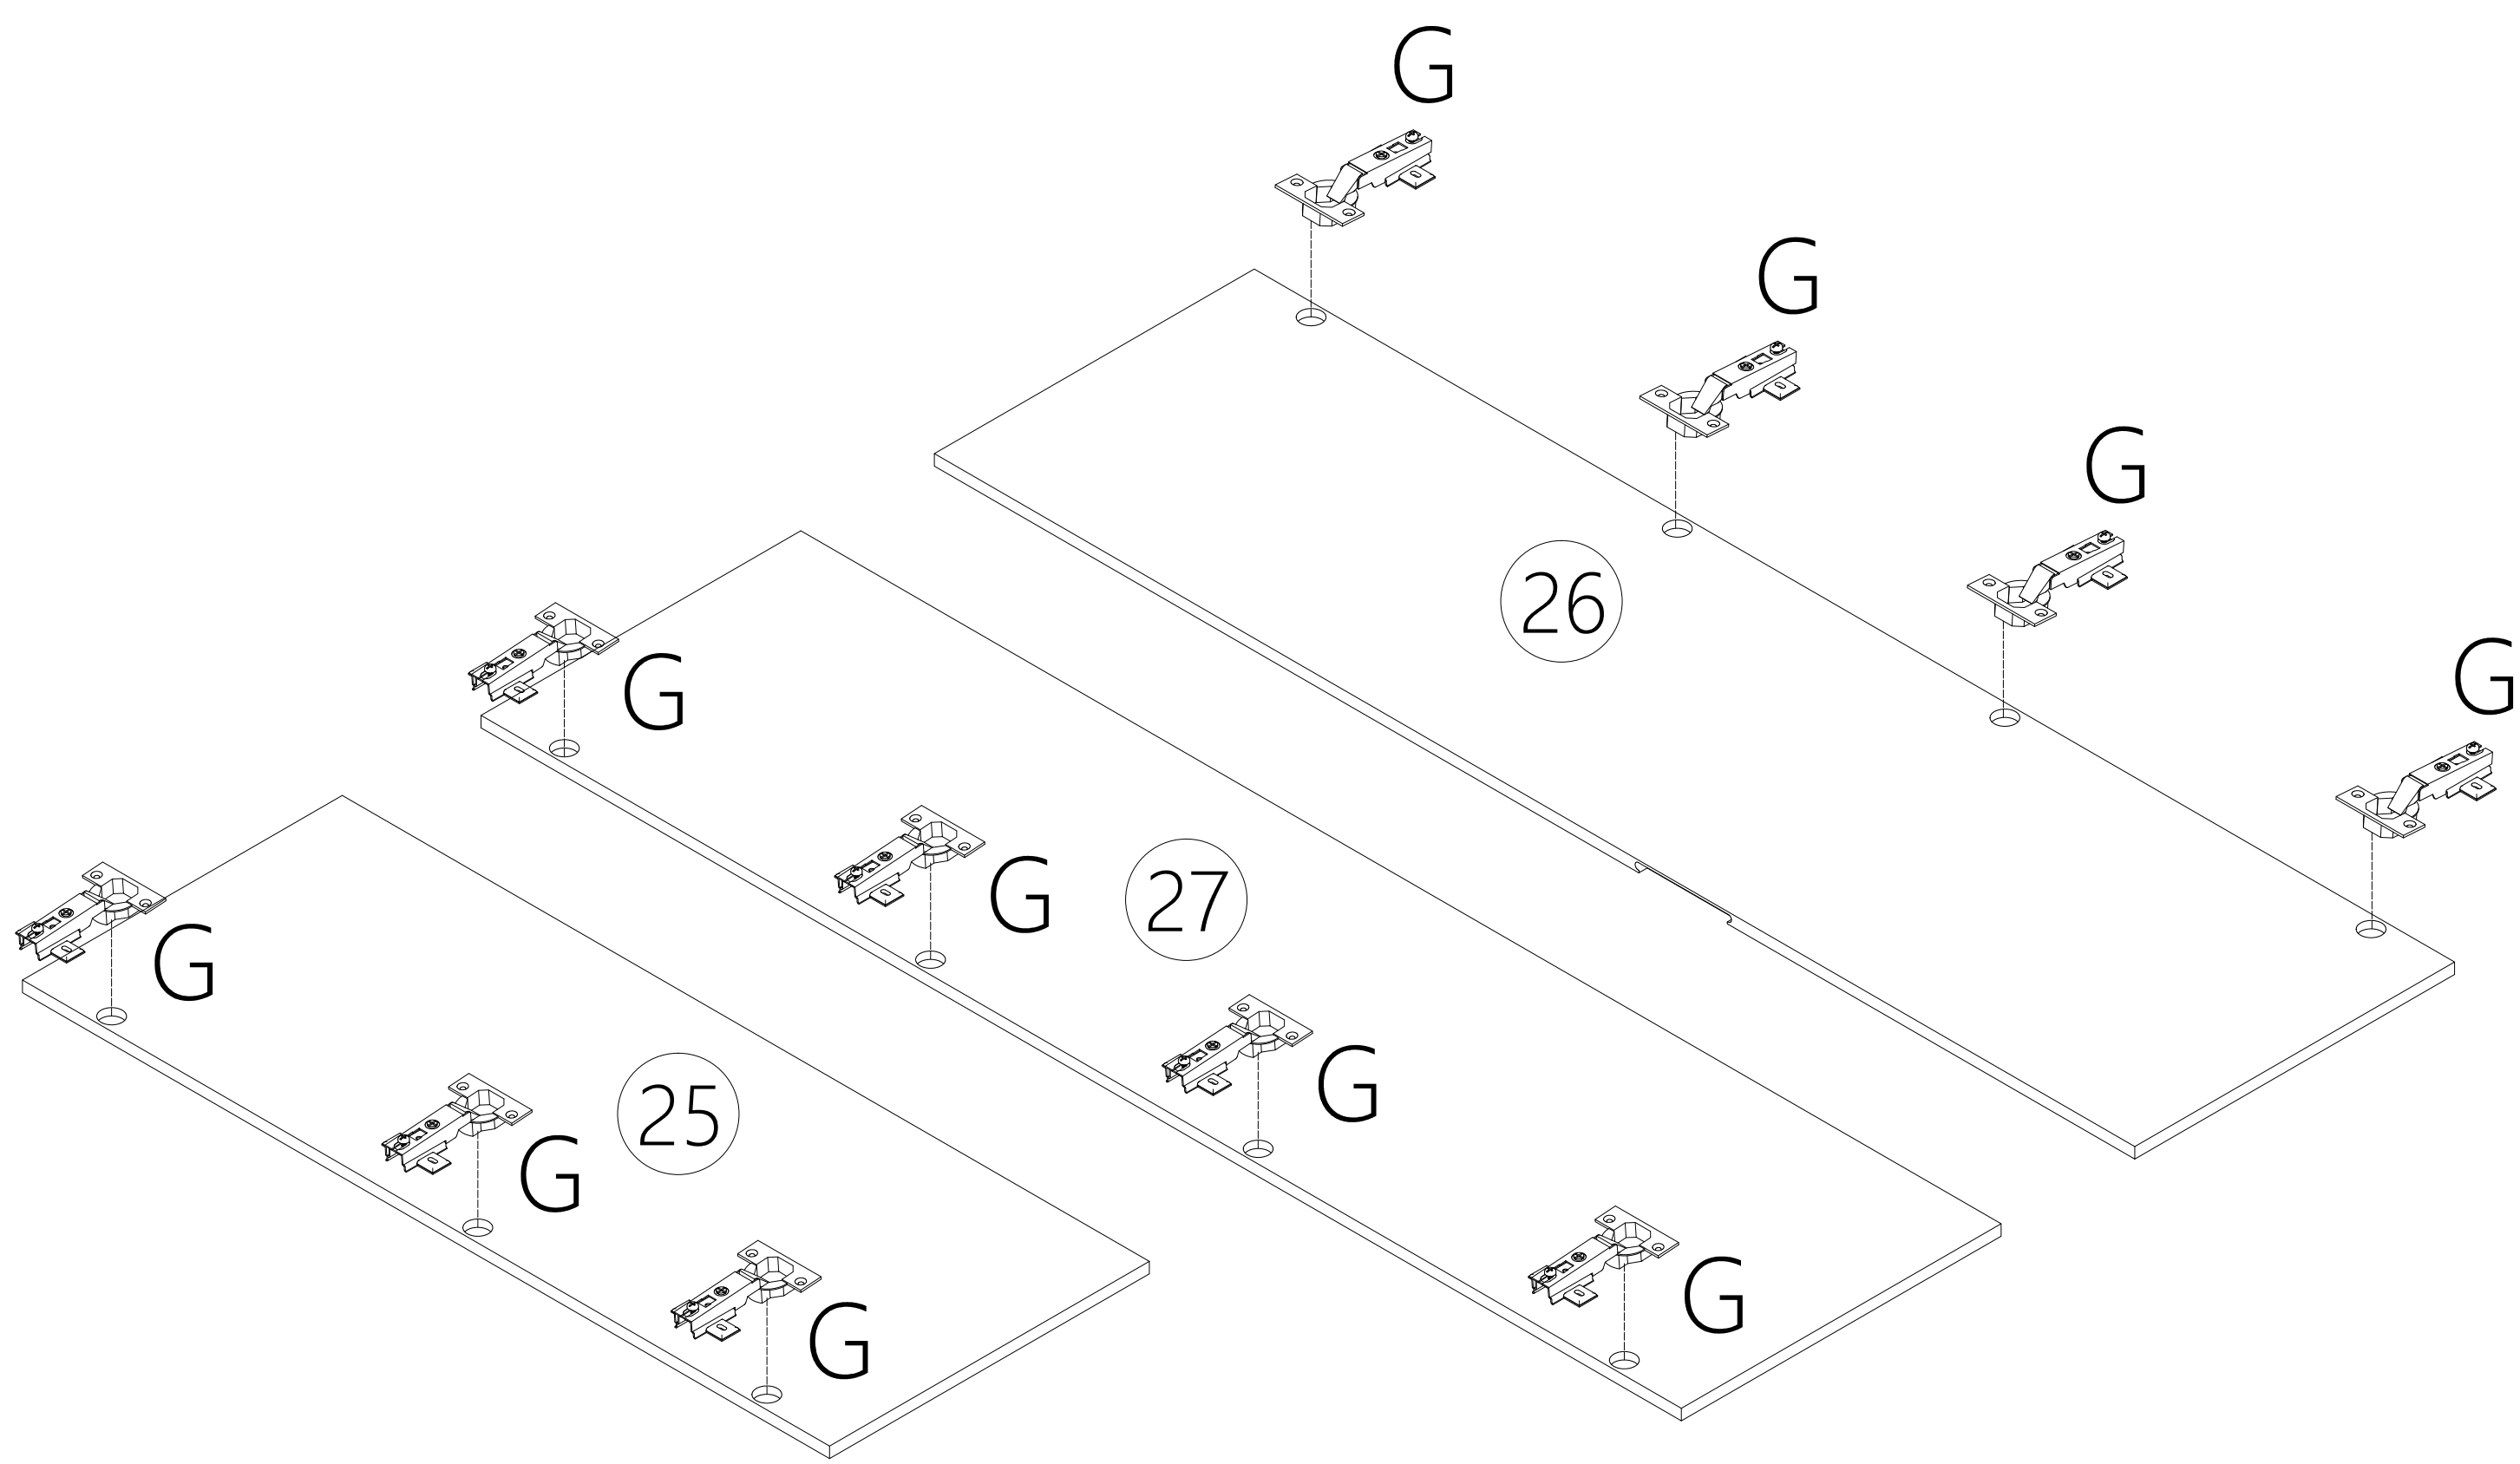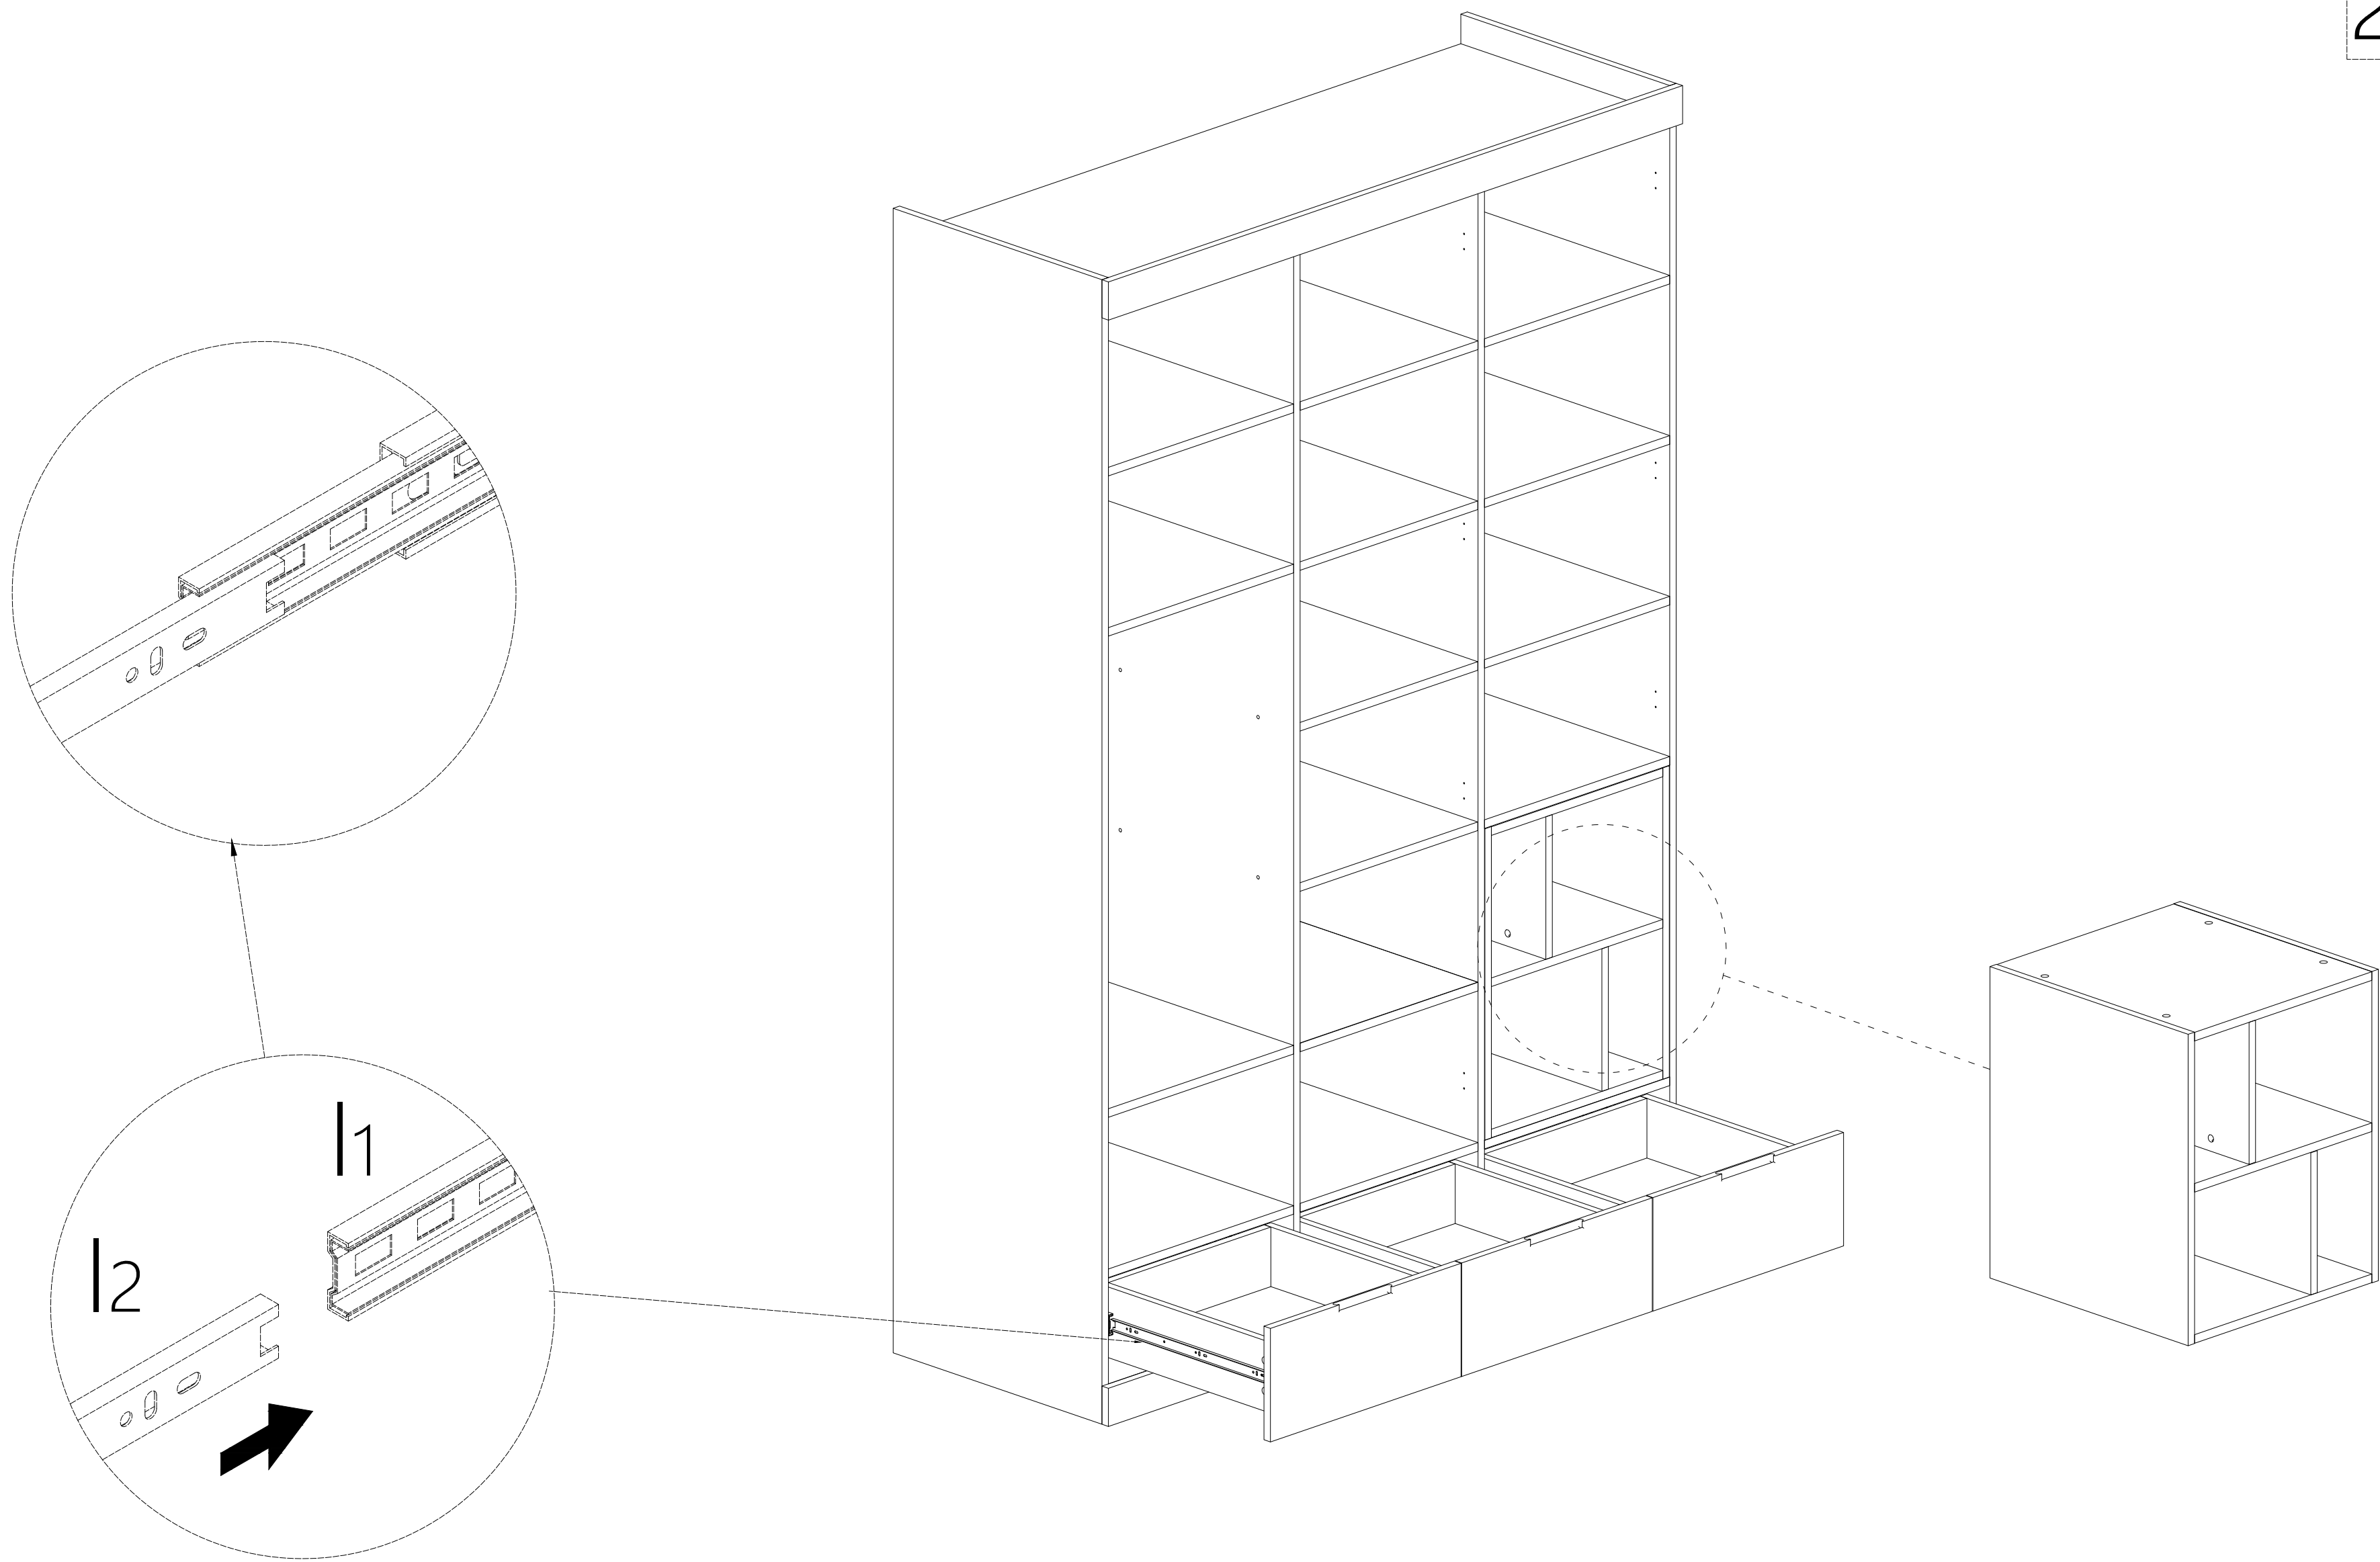

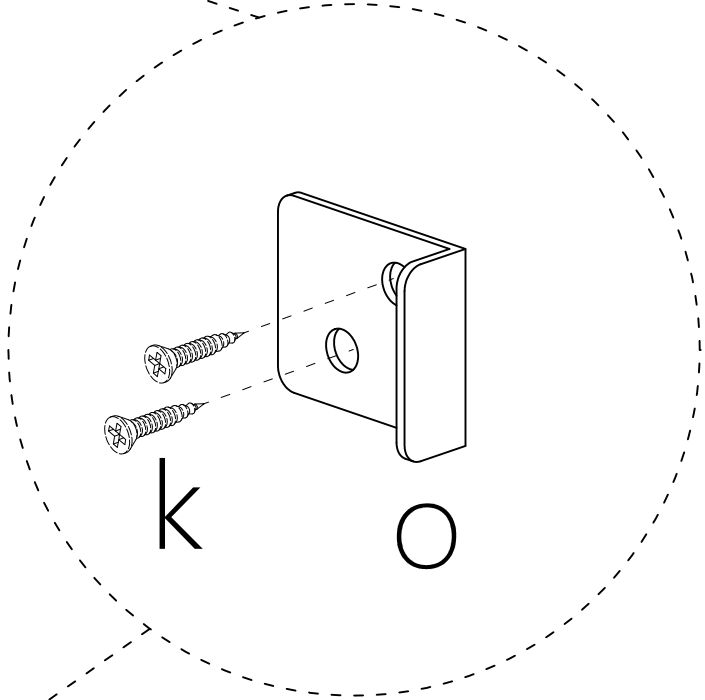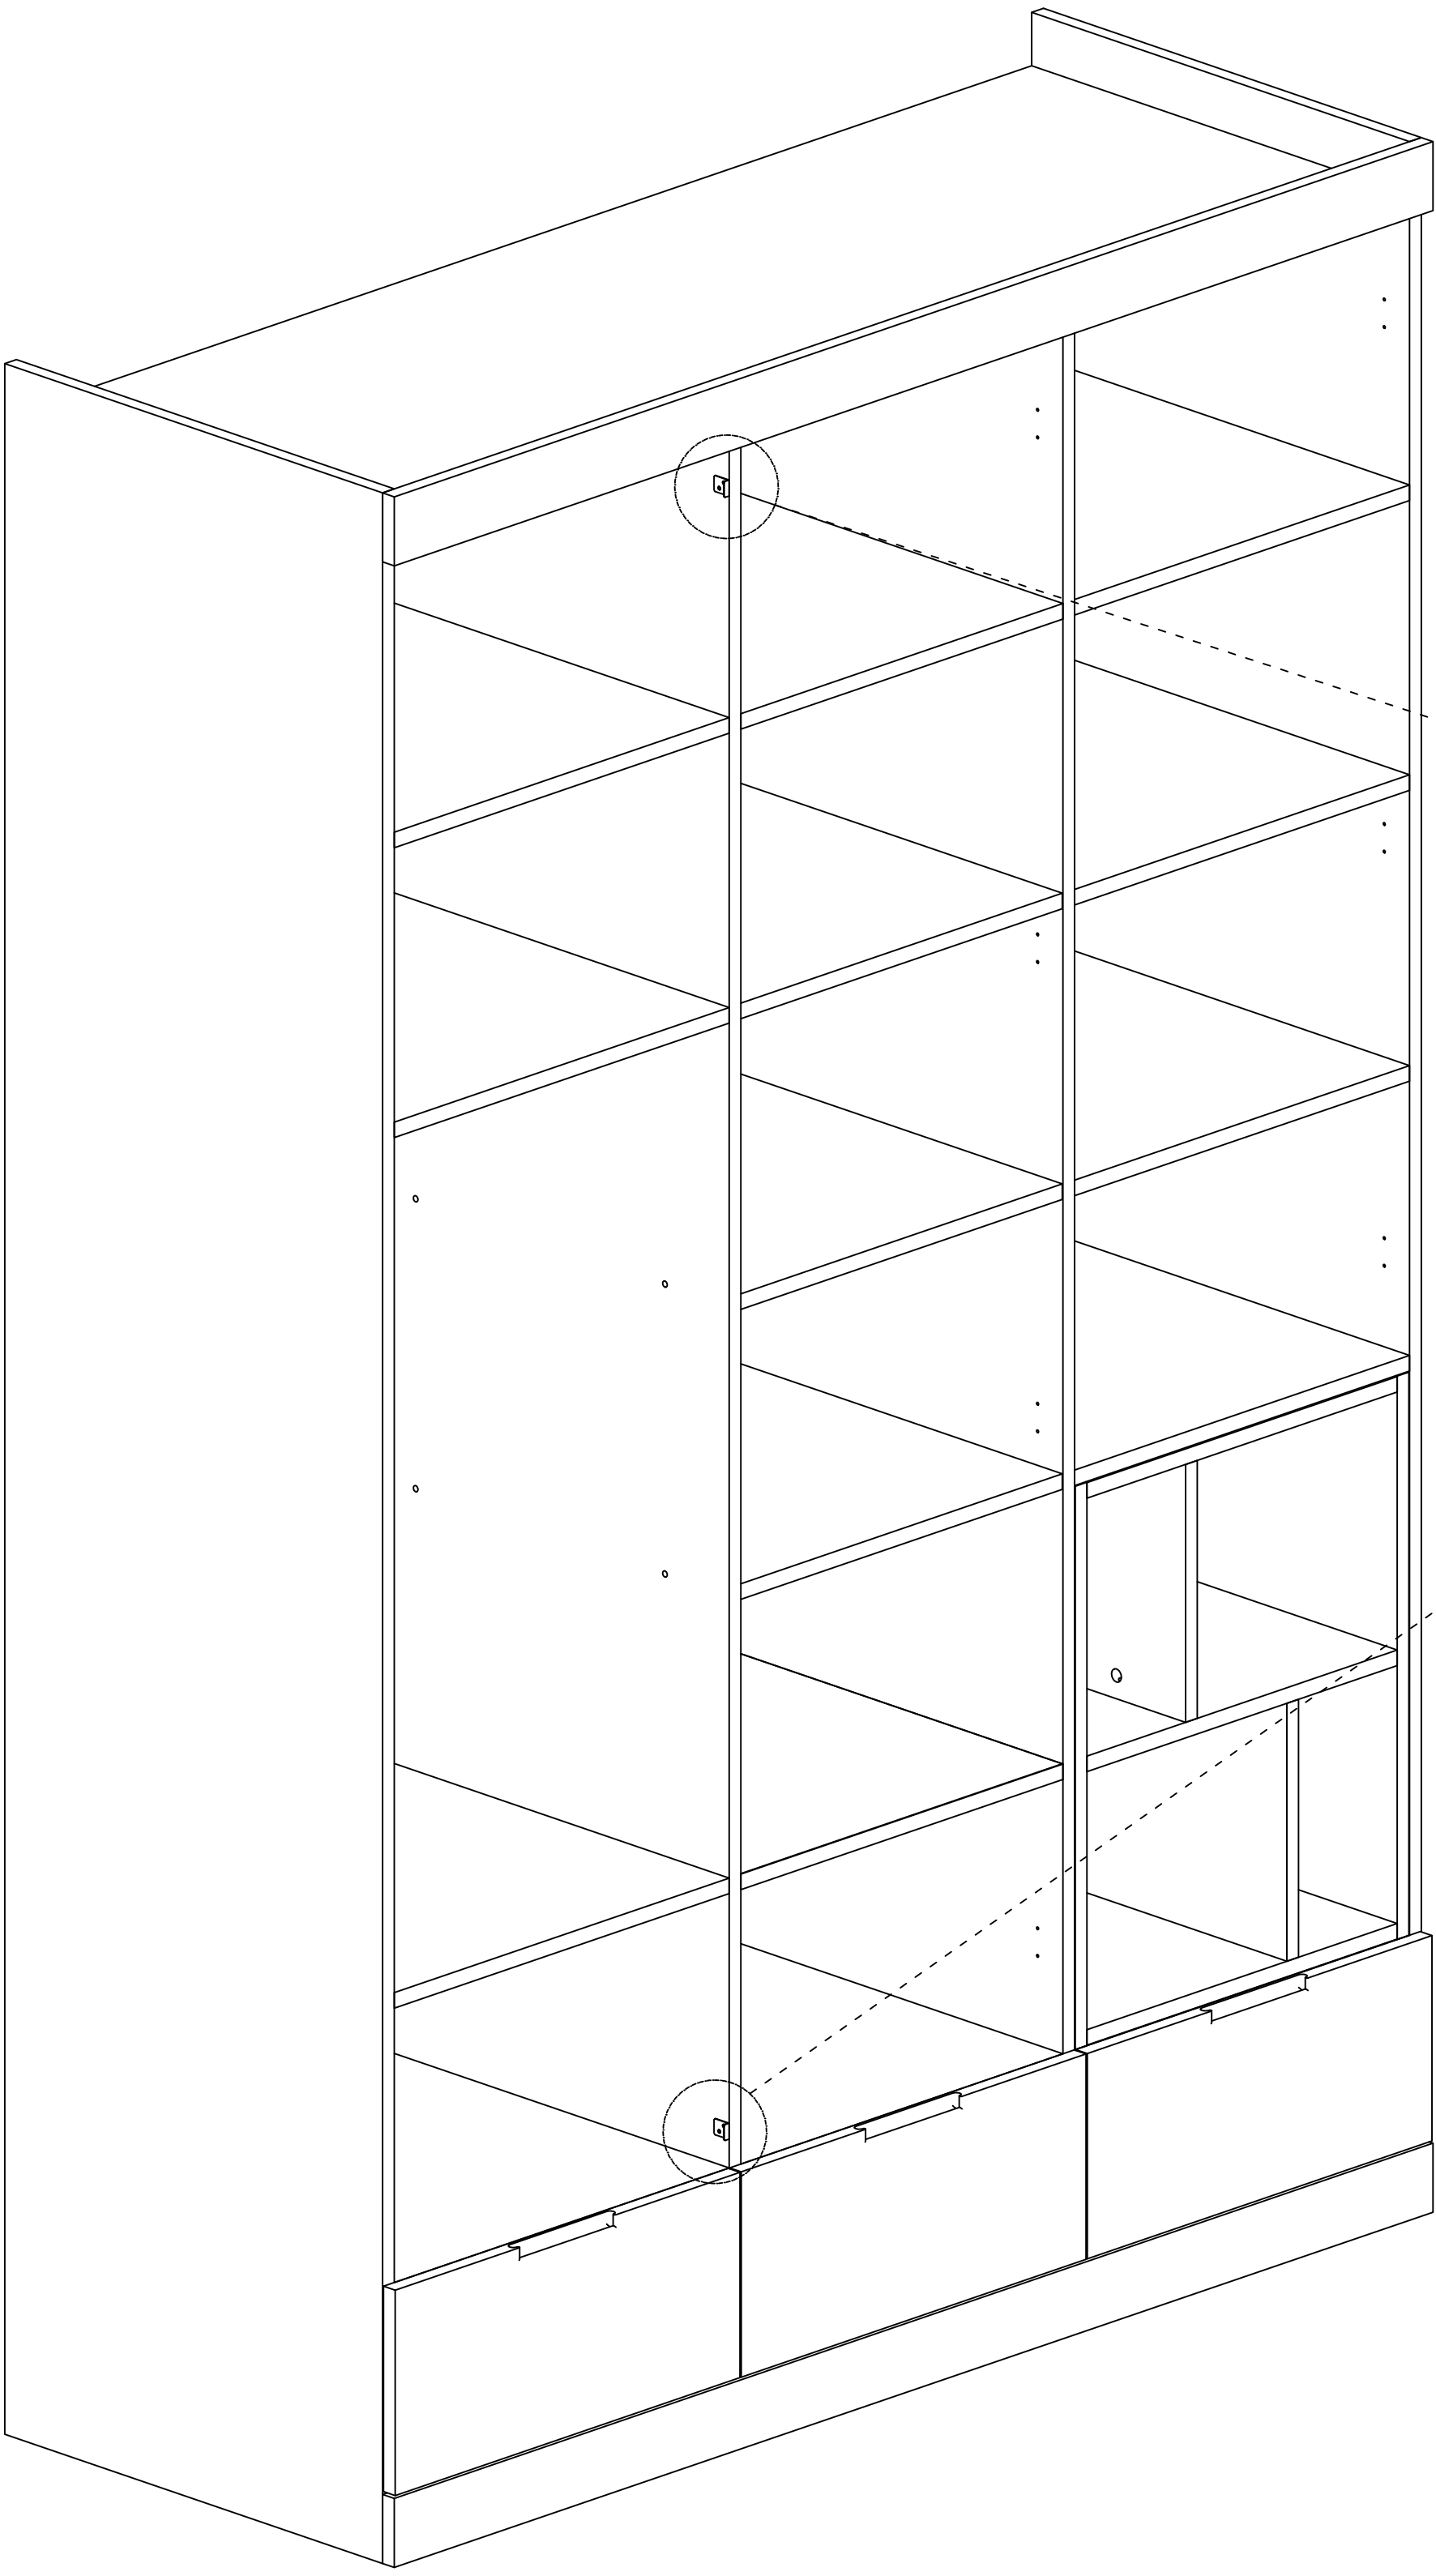

If there's a gap between the door,
adjust this screw.

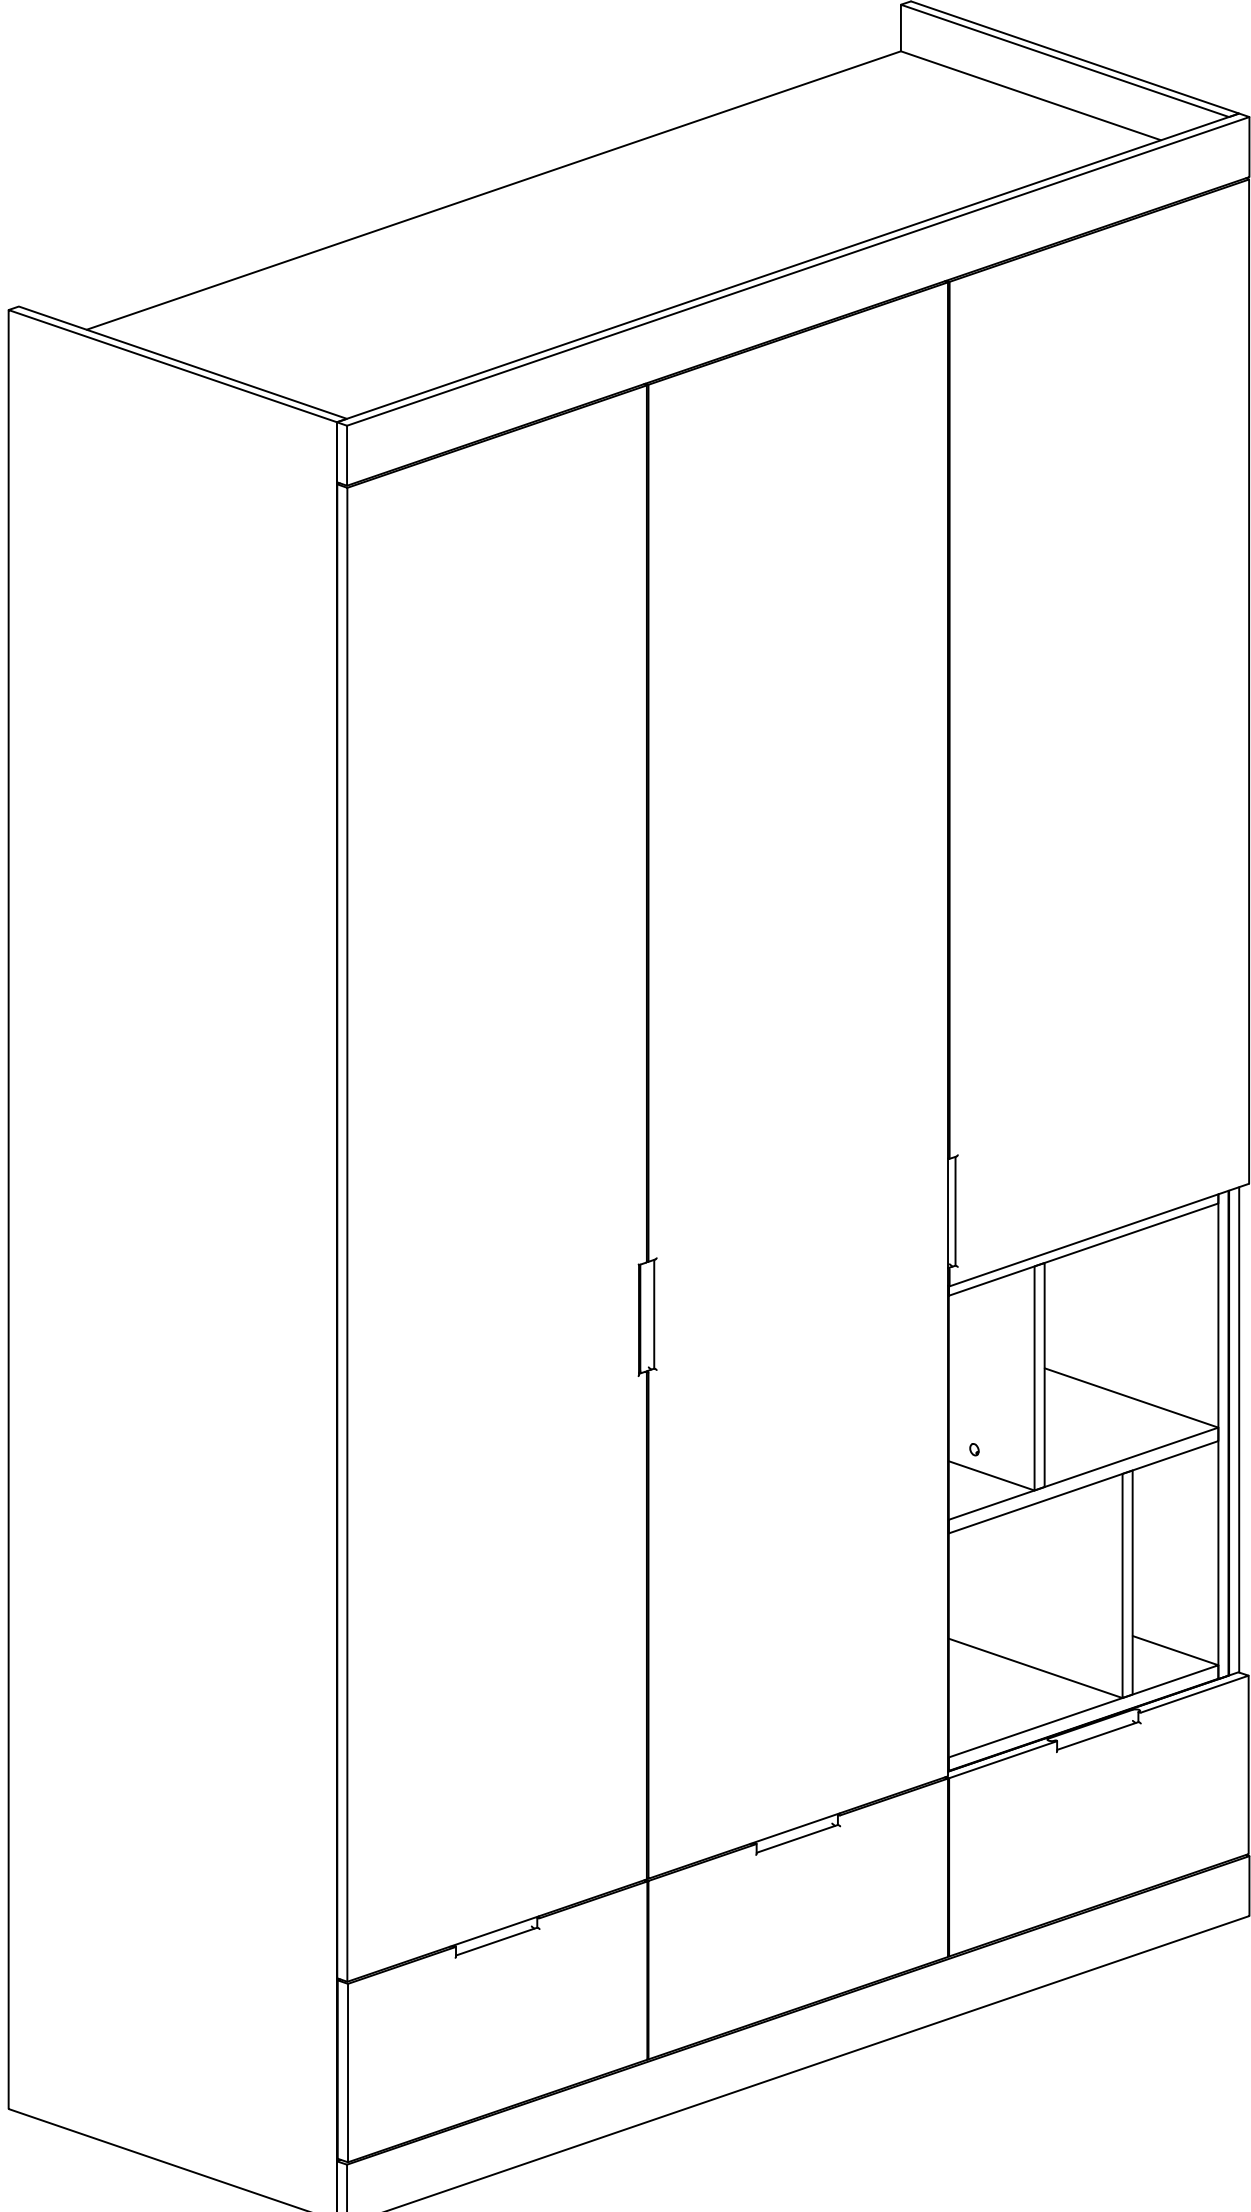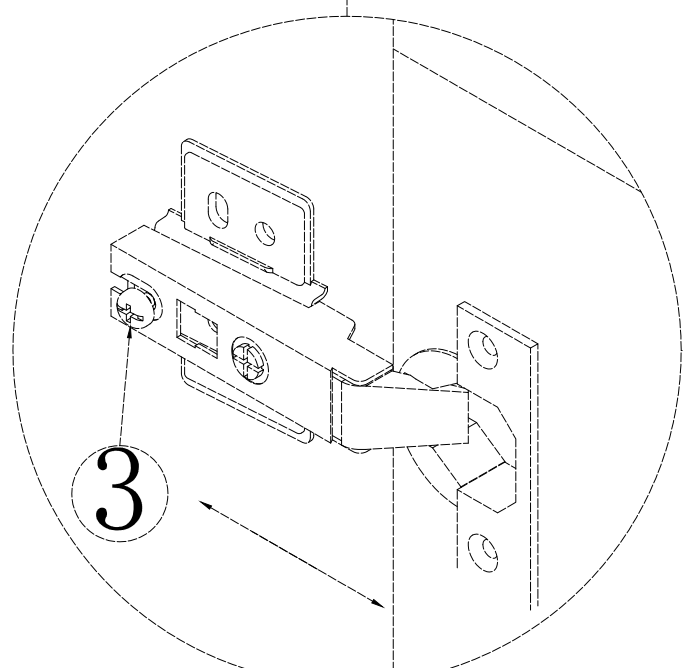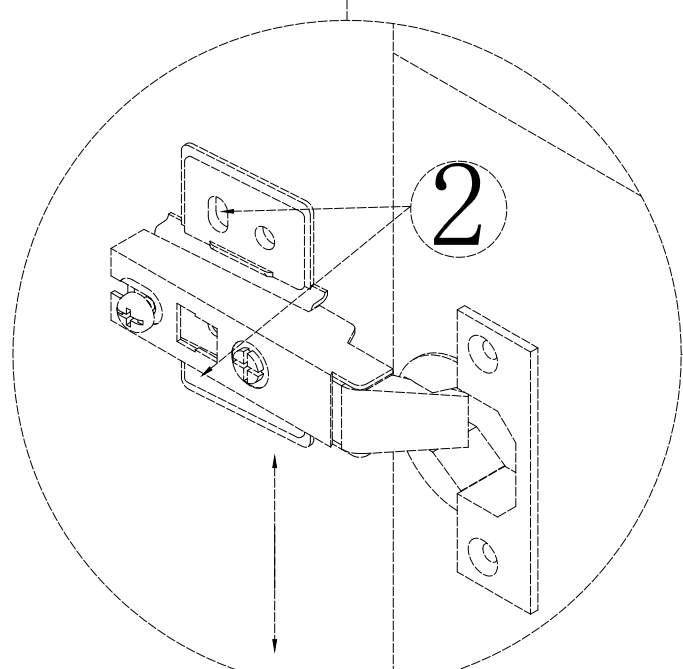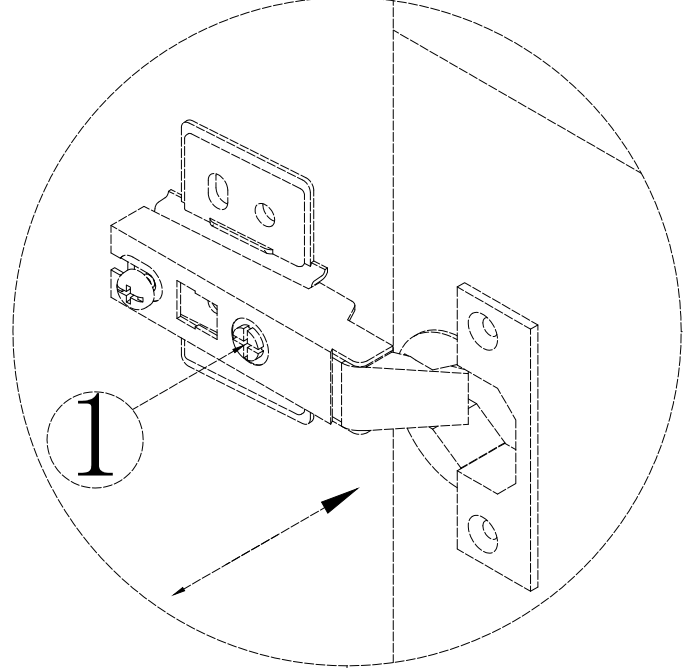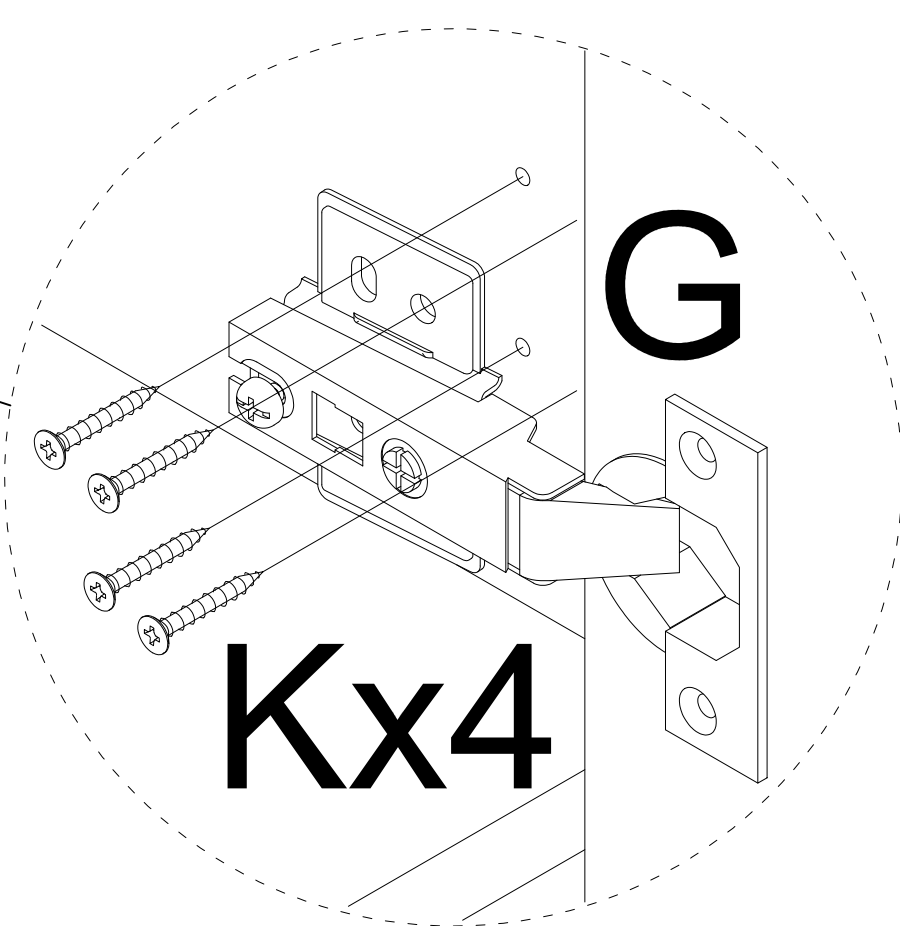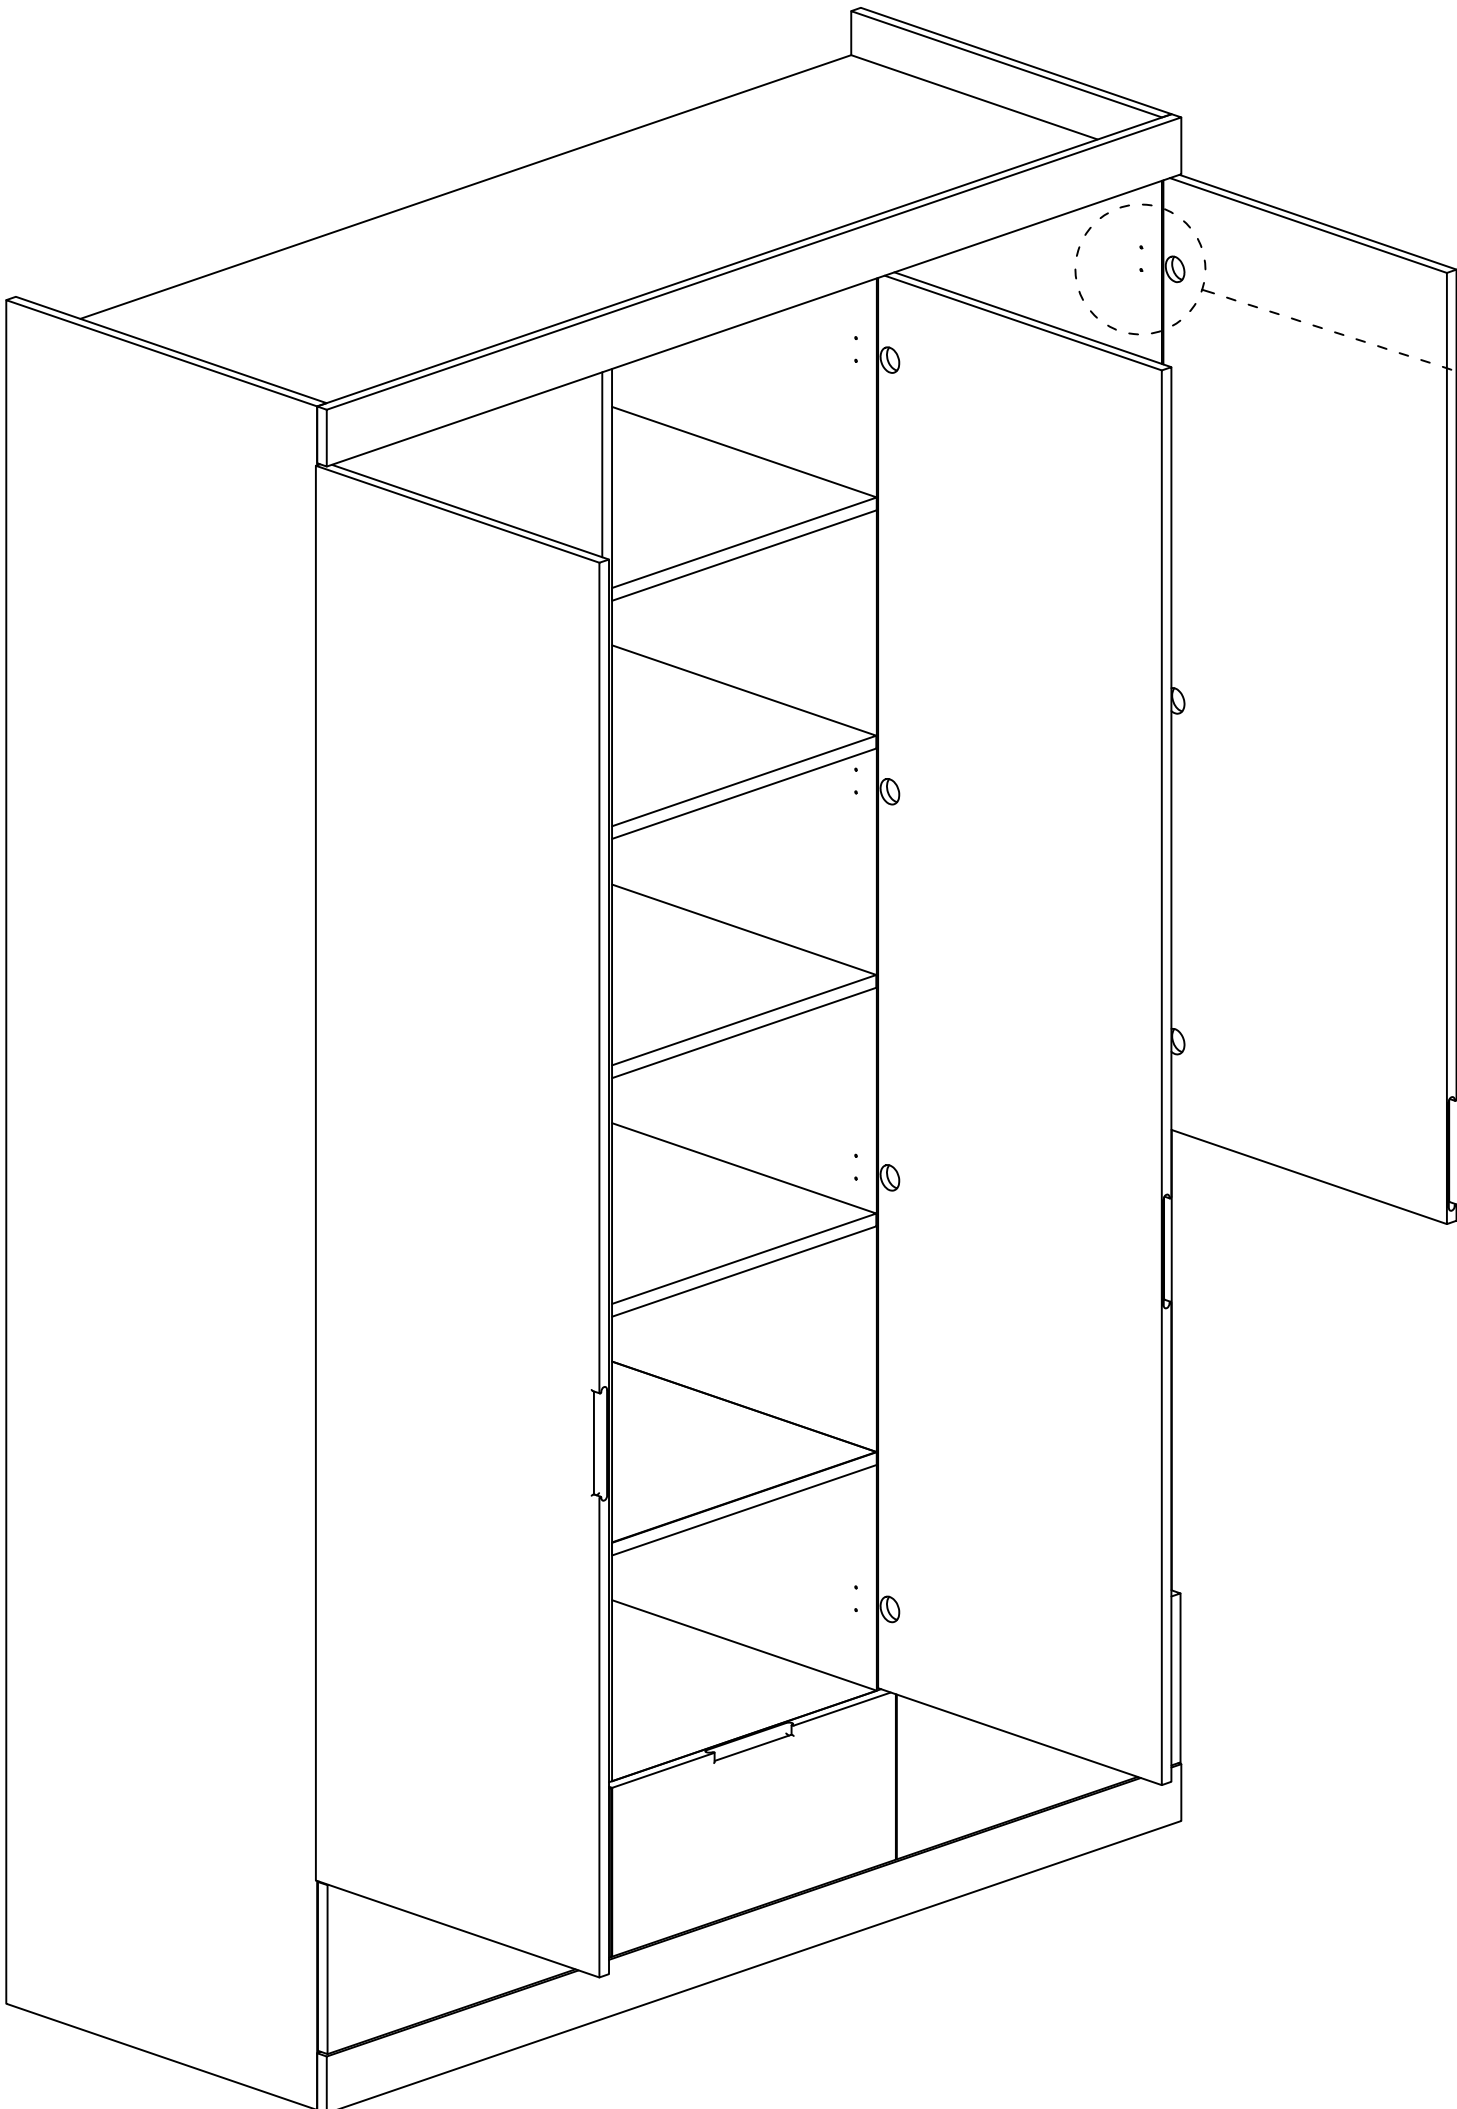

OK!